
### SHARP

## SERVICE MANUAL 维修手册

S76N3VC-ML3W/

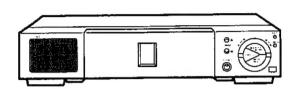

VHS VIDEO CASSETTE RECORDER

VHS 盒式磁带录象机

# MODELS 型 号

# VC-ML3 VC-ML3W

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

为了使用者的安全(有些国家用安全规定加以要求),修理本装置时必须完全保持其原有配件状态,更换只得使用规定者。

#### CONTENTS

#### **i**

COMIZATIO	- ~
Page	页数
1. SPECIFICATIONS	1. 规 格 5
DISASSEMBLY AND REASSEMBLY	2. 分解和组装 69
PARTS 10	3. 主要机械部件的配置及其功能 73
4. ADJUSTMENT, REPLACEMENT	4.机械部件的调试、更换及装配 75
AND ASSEMBLY OF MECHANICAL UNITS12	5. 各电路的调试97
5. ELECTRICAL ADJUSTMENT	6.录象机机械动作流程图及机械
6. MECHANISM OPERATION FLOW CHART	故障检査
AND TROUBLESHOOTING GUIDE 45	7. 故障检查
7. TROUBLESHOOTING 51 8: BLOCKDIAGRAM 133	8. 方框图 ······ 133
9. CIRCUIT DIAGRAM AND PWB FOIL	9. 电路方框图与电路板图案 143
PATTERN143	10. 更换零件表 169
10. REPLACEMENT PARTS LIST 169	11.零件分解图 188
11. EXPLODED VIEWS	12. 包装方法

**SHARP CORPORATION** 

### PRECAUTIONS IN PART REPLACEMENT

When servicing the unit with power on, be careful to the section marked white all over. This is the primary power circuit which is live.

When checking the soldering side in the tape travel mode, make sure first that the tape has been loaded and then turn over the PWB with due care to the primary power circuit.

Make readjustment, if needed after replacement of part, with the mechanism and its PWB in position in the main frame.

- (1) Start and end sensors: D710 and D709 Insert the sensor's projection deep into the upper hole of the holder (LHLDZ1962AJ00). Referring to the PWB, fix the sensors tight enough.
- (2) Photocoupler RH-FX0004GEZZ: IC901

  Refer to the symbol on the PWB and the anode marking of the part.
- (3) Cam switches A and B (RH-PX0253GEZZ): D714 and D713

  Adjust the notch of the part to the white marker of the symbol on the PWB. Do not allow any looseness.
- (4) Take-up and supply sensors (RH-PX0252GEZZ): D712 and D711

  Be careful not to confuse the setting direction of the parts in reference to the symbols on the PWB. Do not allow any looseness.
- (5) Diode bridge (RH-DX0083GEZZ): D901

  Adjust the + marking of the part to the symbol's cathode marking on the PWB.

#### 零件更换时的注意事项

在需要对本录象机进行带电保养检查时,对所有注有白色标记的部分均应特加小心注意。 注有白色标记的部分为初级电源电路部分。

在进行走带状况检查调整过程中检查印刷电路板焊线面时,应先确认磁带的装挂状态符合要求,再边注意初级电源电路边翻转其印刷电路板进行检查。

如更换了零件,将盒室机构及其印刷电路板安置就位后,重新进行调整。

- (1)带头、带尾感应器:D710、D709 将两感应器的凸销分别深插于插座 (LHLDZ1962AJ00) 上面插孔之中,并相对于盒室机构 分别将其紧固之。
- (2)光电耦合器 (RH-FX0004GEZZ): IC901 参照盒室机构印刷电路板以及该部件阳极端的标记。
- (3) 凸轮开关A和B (RH-PX0253GEZZ): D714和D713 调该部件的槽口部于盒室机构印刷电路板的白色标记处。扣紧之 切勿让其产生任何松 动。
- (4)卷带盘、供带盘感应器 (RH-PX0252GEZZ): D712和D711 参照盒室机构印刷电路板上的所有标记,切勿混淆这两个感应器的设定方向。扣紧之, 切勿让其产生任何松动。
- (5) 二极管电桥(RH-DX0083GEZZ): D901 调该零件的+标记于盒室机构印刷电路板上的阴极处。

### 1. SPECIFICATIONS

Format: VHS PAL, MESECAM, NTSC standard

Video recording system: Two rotary head helical scan system

Video signal: PAL/SECAM/NTSC colour or monochorome signal

Recording/playing time: 240 min. max. with SHARP E-240 tape (PAL/MESECAM: SP mode) 480 min. max. with SHARP E-240 tape (PAL/MESECAM: LP mode)

160 min. max. with SHARP T-160 tape (NTSC: SP mode) 480 min. max. with SHARP T-160 tape (NTSC: EP mode)

Tape width: 12.7mm

Tape speed: 23.39 mm/s (PAL/MESECAM: SP mode)

11.70 mm/s (PAL/MESECAM: LP Mode)

33.35 mm/s (NTSC: SP mode) 16.68 mm/s (NTSC: LP mode) 11.12 mm/s (NTSC: EP mode)

Antenna: 75 ohm unbalanced

Receiving channel: VHF Channel E2 - S41, UHF Channel E21 - C57

RF converter output signal: UHF Channel E30 - E39 Preset to E39 (SINGAPORE)

UHF Channel E30 - E39 Preset to E36 (HONG KONG)

Power requirement: AC110 - 240V, 50/60Hz Power consumption: Approx. 25W (220V/50Hz)

Operating temperature: 5°C to 40°C Storage temperature: -20°C to 55°C

Weight: 4.9kg

Dimensions: 430 mm (W) x 350 mm (D) x 97 mm (H)

Video

Input: 0.5 - 2.0 Vp-p, 75 ohm

Output: 1.0 Vp-p, 75 ohm 45 dB min. (PAL-SP)

Horizontal resolution: 250 lines (PAL-SP)

Audio 0 dBs = 0.775 Vrms
Input: Line: -8 dBs/47k ohm
Output: Line: -8 dBs/1k ohm
42 dB min. (Normal)

HiFi dynamic range: 85 dB typ.

Frequency responce: 80 Hz ~ 10 kHz (Normal SP)

80 Hz - 5 kHz (Normal LP/EP)

20 Hz - 20 kHz (Hi-Fi)

Accessories included: 75 ohm coaxial cable

Operation manual Infrared remote control

Battery AV cable

> As part of our policy of continuous improvement, we reserve the right to alter design and specifications without notice.

Note: The antenna must correspond to the new standard DIN 45325

(IEC 169 - 2) for combined UHF/VHF antenna with 75 ohm connector.

### 1规格

形式: VHS(家庭用录象机)PAL,MESECAM,NTSC标准型

视频记录方式: 双旋转磁头螺旋形扫描方式

视频信号: PAL/SECAM/NTSC 制式彩色或黑白信号

记录再现时间: 夏普 E-240 录象磁带最大 240 分钟(PAL/MESECAM: SP 方式)

夏普 E-240 录象磁带最大 480 分钟(PAL/MESECAM: LP 方式)

夏普 T-160 录象磁带最大 160 分钟(NTSC, SP 方式) 夏普 T-160 录象磁带最大 480 分钟(NTSC, EP 方式)

磁带带宽: 12.7毫米

走带速度: 23.39毫米/秒(PAL/MESECAM: SP 方式)

11.70毫米/秒(PAL/MESECAM: LP 方式)

33. 35 毫米/秒(NTSC: SP 方式)

16.68毫米/秒(NTSC: LP 方式)

11.12毫米/秒(NTSC: EP 方式)

天线: 75 欧姆,非平衡式

接收频道: VHF(甚高频)频道 E2-S41, UHF(超高频)频道 E21-C57

射频变换器输出信号: UHF(超高频)频道 E30~E39,出厂预设为频道 E39(新加坡)

UHF(超高频)频道 E30~E39,出厂预设为频道 E36(香港)

电源: 交流 110~240 伏,50/60 赫兹

消耗功率: 大约 25 瓦(220 伏/50 赫兹)

工作温度: 5℃~40℃

存放温度: -20℃~55℃

重量: 4.8公斤

尺寸: 430(宽)×350(深)×97(高)毫米

视频信号

输入: 0.5~2.0Vp\_p,75 欧姆

输出: 1.0Vp\_p,75 欧姆

信号噪声比: 45 分贝(PAL-SP 方式)

水平清晰度: 250 线条(PAL-SP 方式)

普频信号: 0分贝=0.775 伏均方根值

输入: 线路输入: -8 分贝/47k 欧姆

输出: 线路输出: -8 分贝/1k 欧姆

信号噪声比: 42 分贝(标准型)

Hi-Fi 动态范围: 85 分贝

频率响应: 80Hz~10kHz(标准型 SP 方式)

80Hz~5kHz(标准型 LP/EP 方式)

20Hz $\sim$ 20kHz(Hi-Fi)

附件: 75 欧姆同轴联接电缆

使用说明书 红外线遥控器

紅月 % 進江

电池

AV 电缆

由于电子产品不断更新换代,有不经预告而改变设计及其规格的情况。

注: 天线应使用符合 DIN45325(IEC169—2)新标准的带有 75 欧姆连接器的 UHF/VHF 型天线。

### 2. DISASSEMBLY AND REASSEMBLY

### 2-1 DISASSEMBLY OF MAJOR BLOCKS

TOP CABINET **BOTTOM PLATE**  : Remove 4 screws (1).

:Remove 2 screws 2 and 6

screws 3.

: Remove 2 screws 4. Remove FRONT PANEL SHUTTLE switch knob (5) and volume knob (6). Remove 6 clips 7). Remove 1 FFC (8). (Note: In

reconnecting the ground lead, place the washer on the angle LCD PANEL

: Remove the 3 screws (A). Open


the bottom of the LCD panel about 25 mm B and slide it down straight about 15 mm ©.

Now detach the panel.

MPX PWB HOLDER: Remove 4 screw (9) and 1 screw

10.

Hi-Fi PWB HOLDER : Remove 2 screws (1) and 1 screw

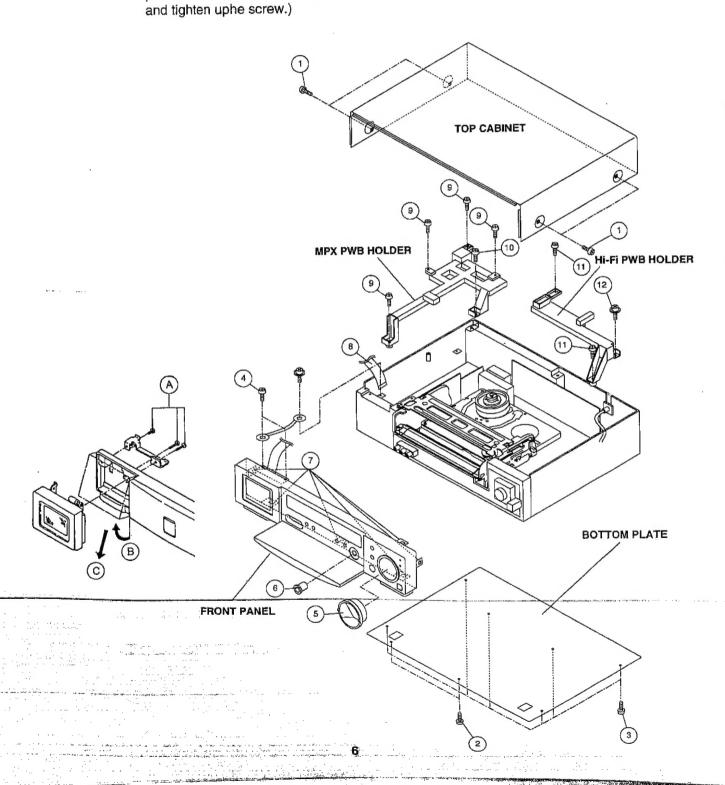

**OPERATION PWB** 

: Remove 1 screw (3), 1 FFC (4), 3 connectors (5) and 2 hooks (6).

LCD PWB


:Remove 1 connectors (1), 1 screw (18) and 2 hooks (19).

MPX PWB

: Remove 1 connector @ and 2 connectors @.

MECHANISM/ MAIN PWB ASSEMBLY : Remove 1 connector 20, 1 screw 20 and 1 connector 20.

Remove 1 screw (2) and earth lead. Remove 2 hooks (3). Lift the antenna terminal block and take the mechanism/main PWB assembly out of the main frame. Be careful not to hit the REC TIP switch located below the cassette controller.

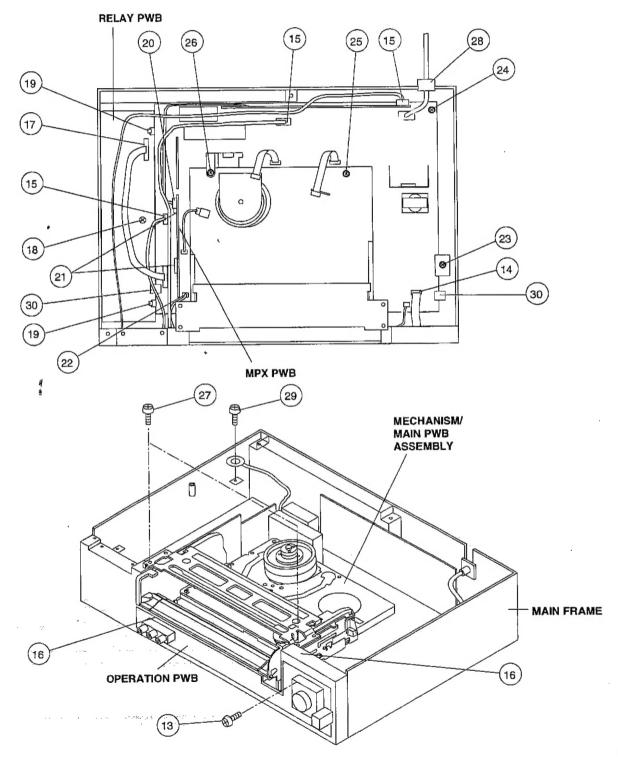

ANTENNA **TERMINAL BOX**  : Remove 1 screw 3.

Lift the mechanism chassis/ cassette controller assembly out of the main PWB. Remove 2 screws 37.

Hi-Fi PWB

: Remove 1 connector @ and 4

connectors 33.

: Remove 1 screw @ and the Shield case.


CASSETTE CONTROLLER

: Remove 2 screws 38.

CHASSIS/ CASSETTE CONTROLLER **ASSEMBLY** 

**MECHANISM** 

Remove 3 FFCs and 2 connectors 35. Remove 4 fooks 36 from behind the main PWB.

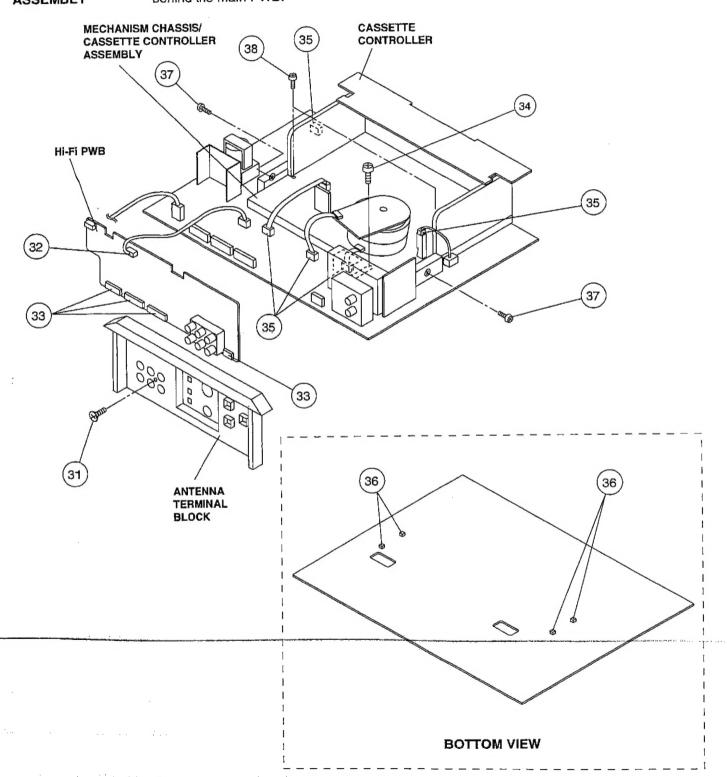

#### 2-2 PRECAUTIONS IN REASSEMBLING


#### MOUTING THE CASSETTE CONTROLLER

Initial setting is indispensable before placing the cassette controller in the mechanism. The initial setting is made in two ways; electrical and mechanical.

#### **Electrical setting:**

- (1) Make a short-circuit between TP5005 and TP5006 of the TP plug (TP500\*) which is on the operation PWB.
- (2) Plug in the AC power cord and make sure the mechanism is in the initial setting position (\*1).
- (3) Unplug the AC power cord. Remove the above short-circuit.

NOTE: This method is used when the mechanism has been already set on its PWB

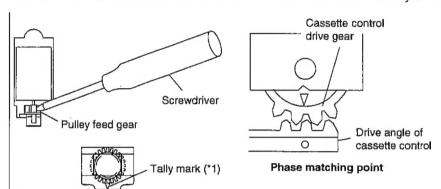

#### Mechanical setting:

Turn the loading motor's pulley feed gear using a screwdriver and be sure that the mechanism is back to its initial setting position (\*1). Now place the cassette controller in position. (This method is applicable for the mechanism alone.)

#### COUPLING THE MECHANISM TO THE PWB


Match the mechanism's projections with the two symbols (round reference and oval sub-reference) on the main PWB. Place the mechanism straight down in position with due care so that the mechanism chassis's outer edges should not damage any parts nearby.

Tighten up the two screws (one for fixing the mechanism and the head amplifier shield, the other on the main PWB's soldering side and located near the loading motor) to fix the mechanism and main PWB. Reconnect the FFC cables (AG, AD and AH) and harnesses (AE and AL) between the mechanism and main PWB.


Parts to pay attention to:

Start and end sensors D710, D709
Record tip switch S701

Take special care of the MC-AC connector (board to board) between the mechanism and main PWB.

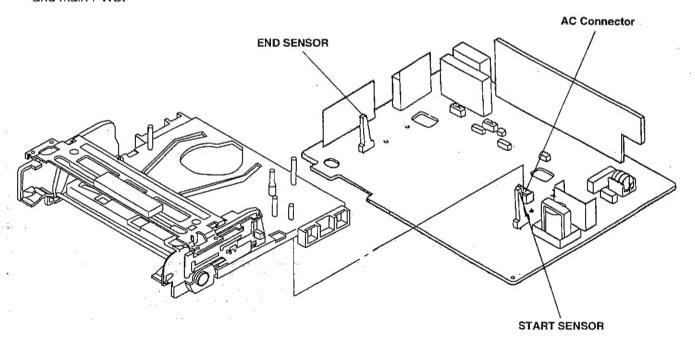


## 3. FUNCTION OF MAJOR MECHANICAL PARTS (TOP VIEW)

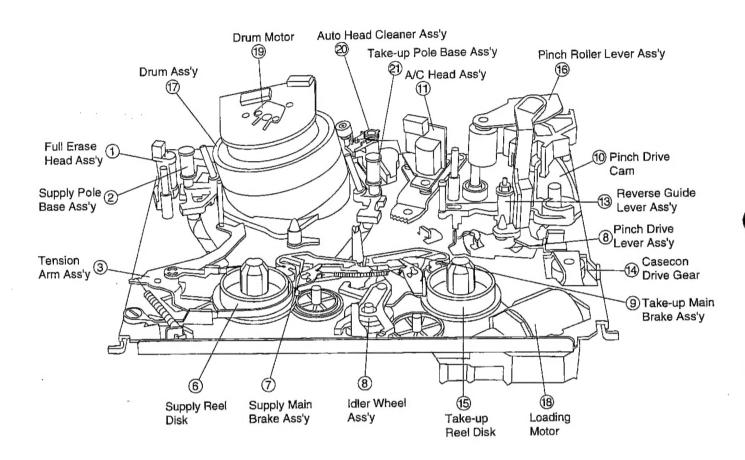

No.	Function		Function
1.	Full erase head ass'y Erase the old recording on the tape in the recording mode.		Reverse guide lever ass'y Pulls out the tape and controls the tape drive train height with the upper and lower guides.
3.	Tension arm ass'y Detects the tension of tape while running, and brakes the supply reel disk via the tension band.	16.	Pinch roller lever ass'y Press-fits the tape to the capstan during tape
7.	Supply main brake ass'y Brakes the supply reel disk to prevent tape slack-		running.
	ening when the unit is stopped in fast forward or rewind mode.	18.	Loading motor A motive power which drives the mechanism. It transmits the power to the master cam and cas-
9.	Take-up main brake ass'y Brakes the take-up reel disk to prevent tape slackening when the unit is stopped in fast forward or rewind mode.		sette housing control assembly.

### (BOTTOM VIEW)

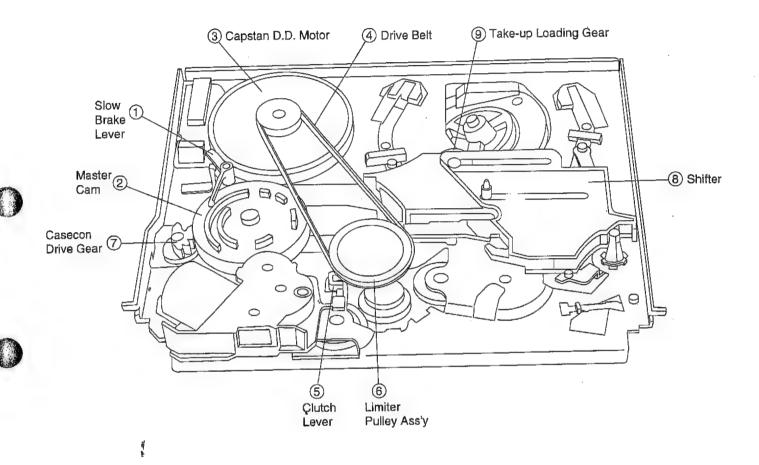

No.	Function	No.	Function
1.	Slow brake lever Gets in contact with the capstan D.D. motor linking to the master cam in the slow still mode,	6.	Limiter pulley ass'y Transmits the power of the capstan D.D. motor to the reel disk via the drive idler.
ir · ·	and brakes it to a certain degree.	8.	Shifter
3.	Capstan D.D. motor A motive power which runs the tape. It transmits		Transmits the operation of the master cam to break ass'y. loading gear, tension arm and clutch lever.
<u> </u>	e power via the Drive belt.	9.	Take-up loading gear
4.	Drive belt.  Transmits the power to run the tape to the Limiter pulley.		Shifts the take-up pole base and guide roller via the loading gear T, and applies the tape around the drum assembly, as well as transmits the power to the loading gears.

# 4. ADJUSTMENT, REPLACEMENT AND ASSEMBLY OF MECHANICAL UNITS

Here we will describe a relatively simple service work in the field, not referring to the more complicated repairs which would require the use of special equipment and tools (drum assembly replacement, for example).

We are sure that the easy-to-handle tools listed below would be more than handy for periodical maintenance to keep the machine in its original working condition.

### TOOLS NECESSARY FOR ADJUSTING THE MECHANICAL UNITS

The following tools are required for proper service and satisfactory repair.

No.	Jig Item	Part No.	Code	Configuration	Remarks
1	Reel Disk Height Adjusting Jig	JiGRH0002	BR	<i>Q</i>	These Jigs are used for checking and
2	Master Plane Jig	JIGMP0001	BY	6.0	adjusting the reel disk height.
3	A/C Head Tilt Adjusting Jig	9DAACH-A323U	BX		This Jig is used for setting the A/C head tilt.
	Torque Gauge (90g)	JiGTG0090	СМ		
4	Torque Gauge (1.2kg)	JiGTG1200	CN		These Jigs are used for checking and adjusting the torque of take-up and
5	Gauge Head	JiGTH0006	AW		supply reel disks.
6	Cassette Torque Meter	JiGVHT-063	CZ		This cassette torque meter is used for checking and adjusting the torque of take-up for measuring tape back tension.
	Tension Gauge (300g)	JiGSG0300	BF	(1.3)	There are two gauges used for the tension measurements, 300 g and
7	Tension Gauge (2.0kg)	JiGSG2000	BS		2.0kg.
	Hex Wrench (0.9mm)	JiGHW0009	AE		
8	Hex Wrench (1.2mm)	JiGHW0012	AE		These Jigs are used for loosening tightening special hexagon type
	Hex Wrench (1.5mm)	JiGHW0015	AE		screws.
	Alignment Tape (NTSC)	VROATSV	CD		
9	Alignment Tape (PAL)	VROCPSV	СК		These tapes are especially used f
	Hi-Fi Alignment Tape	VROCBFFS	СВ		electrical fine adjustment.
	Alignment Tape	VROCPZJS	CA		
11	Tension Gauge Adapter	JiGADP003	вк		This Jig is used with the tension gauge Rotary transformer clearance adjuing jig.

### VC-ML3W

No.	Jig Item	Part No.	Code	Configuration	Remarks
12	Special Bladed Screwdriver	Jigdriverh-4	AP		This screwdriver is used for adjusting the guide roller height.
14	Torque Driver	JiGTD1200	СВ		This is used to screw down resinmade parts: the specified torque is 5kg.
		JIGDRIVER110-7	AS		This Jig is used for height adjustment of the A/C head and X-position.
15	Box Driver	JigDRiVER110-4	AV		This Jig is used for replacement of the SI roller.
		JIGDRIVER110-55	AR	6	This Jig is used for replacement of the reverse guide.
16	Reverse Guide Height Adjusting Jig	JiGRVGH-F18	BU	T	This Jig is used for height adjustment of the reverse guide.

### MECHANICAL PARTS REQUIRING PERIODICAL INSPECTION

Use the following table as a guide to maintain the mechanical parts in good operating condition.

Maintained Parts	500 hrs.	1000 hrs.	1500 hrs.	2000 hrs.	Possible symptom encountered	Remarks
Guide roller ass'y				0		Abnormal rotation or significant vibration requires replacement.
Supply impedance roller				0		
Supply impedance roller (inner hole and shaft)					Lateral noises Head occasionally blocked	Clean with pure high quality isopropyl alcohol.
Supply impedance roller flange	. 🗆				, , , , , , , , , , , , , , , , , , , ,	Clean tape contact part
Retaining guide						with the specified cleaning liquid.
Slant pole				0		
Upper and Lower drum ass'y		00	00	0	alignment tape  Poor colour, beating	
Full-erase head				0		
A/C head				0		
Capstan D.D. Motor				0	No tape running, uneven colour	
Pinch roller				0	Olean Indibber a	
Reel belt				0	No tape running, tape slack, no fast forward/rewind motion	contact area with the specified cleaning liquid.
Tension band ass'y				0	Cassette not loaded or unloaded	
Loading Motor				0	Oddodio not isase	
Reel idler ass'y				0	No tape running	
Reel pully ass'y						
Clutch gear ass'y				0		
Main supply/take-up brake levers				0	Tape slack	
AHC (Automatic Head Cleaner)		0		0		Replace the roller of the cleaner when it wears down. Just change the AHC rolle assembly for new one.

IOTE:	$\bar{\Box}$ .	Part replacement. Cleaning (For cleaning, use a lint-free cloth dampened with pure isopropyl alcohol). Oil refilling (The indicated point should be lubricated with high quality spindle oil every 1000hrs).
If the	readi	ng is out of the specified value, clean or replace the part.

### REMOVAL AND REASSEMBLY OF CASSETTE HOUSING CONTROL ASSEMBLY

#### • Removal

- 1. Set the cassette ejected condition in the cassette eject mode.
- 2. Unplug the recorder from the main source. ...
- 3. Follow the procedures below in the specified order.
  - a) Remove the cassette housing installation screws ①.
  - b) Slide and pull out the cassette housing control assembly upward.
- Reassembly

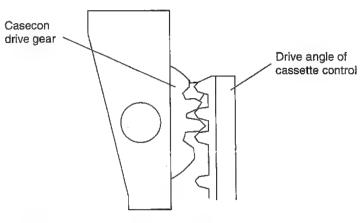


Figure 4-2.

#### Notes:

- ① In using a magnet screw driver, be sure to keep it away from the A/C head, FE (Full Erase) head, and the drum.
- ② In removal and reassembly, take care not to hit the cassette housing control assembly and tools against the guide pin, drum, or the like there about.
- 3 Load the cassette once onto the cassette housing control assembly after reassembly.

### TO RUN A TAPE WITHOUT THE CASSETTE HOUSING CONTROL ASSEMBLY

- Be sure to make a short-circuit between TP5005 and TP5006, both located on the operation PWB before turning on the power.
- 2. Plug in the power cord.
- 3. Turn on the power switch.
- 4. Open the lid of a cassette tape by hand.
- 5. Hold the lid with two pieces of vinyl tape.
- 6. Set the cassette tape in the mechanism chassis.
- Stabilize the cassette tape with a weight (500g) to prevent floating.
- 8. Perform running test.

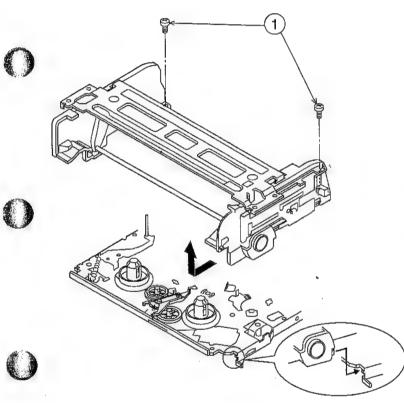


Figure 4-1.

- Before installation of the cassette housing control assembly, make a short-circuit between TP5005 and TP5006, both located on the operation PWB. Plug in the power cord. The cassette control drive gear starts and stops just when the big face gear shows in the mechanism chassis window. Engage the tooth 2 of the casecon drive gear with the tooth 3 of the cassette control drive angle as shown in Fig. 4-2, to position the cassette control on the mechanism chassis.
- 2. Follow the procedures for removal in the reverse order.

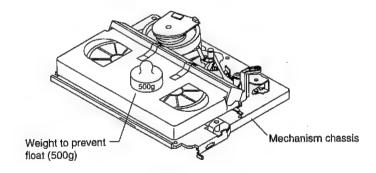


Figure 4-3.


#### Note:


The weight should not be more than 500g.


### REPLACEMENT AND HEIGHT CHECKING AND ADJUSTMENT OF REEL DISKS

- Removal (Supply and Take-up reel disks)
- 1. Remove the cassette housing control assembly.
- 2. Pull the tension band out of the tension arm.
- 3. Release the supply/take-up auxiliary brake lever by hand, which makes unnecessary removal of the supply main brake and the take-up main brake.
- Open the hook at the top of the reel disk, and remove the reel disk.

<In the EJECT or UL STOP mode>

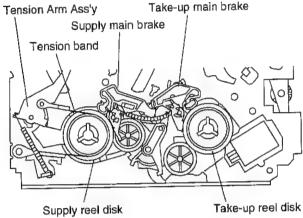

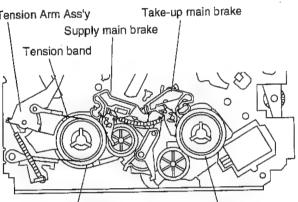

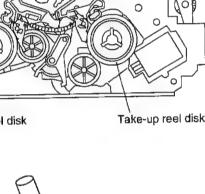

- Reassembly (Supply reel disk)
- 1. Clean the reel disk shaft and apply oil to it.
- 2. Align the phase of the reel disk to that of the reel relay gear. and install a new supply reel disk onto the shaft.
- 3. Replace the tension band around the supply reel disk, and insert it into the hole of the tension arm with the supply auxiliary brake lever released.
- 4. Check the reel disk height.

#### Notes:

- 1) Take enough care not to deform the tension band during installation of the supply reel disk.
- ② Be careful not to damage the supply main brake and the reel relay gear.

#### Reassembly (Take-up reel disk)

- 1. Clean the reel disk shaft and apply oil to it.
- 2. Release the take-up auxiliary brake lever to align the phase of the reel disk to that of the reel relay gear and to install a new take-up reel disk onto the shaft.
- 3. Check the reel disk height and reassemble the take-up main brake.

#### Note:


Take care not to damage the take-up main brake.

- After reassembly, check the video search rewind back tension (see page 19), and check the brake torque (see page 21).
- Height checking and adjustment

Place the master plane onto the mechanism unit, taking care not to hit the drum (see Figure 4-6).



Figure 4-4.

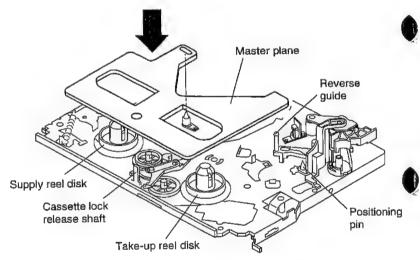

Set the master plane releasing the reverse guide by a finger.



When the tension band is pressed in the direction of the arrow for removal, the catch is hard to be deformed

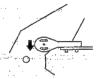




Figure 4-5.

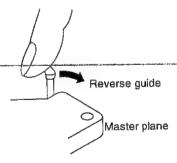


Figure 4-6.

 Check that the reel disk is lower than part A but higher than part B. If the height is not correct, readjust the reel disk height by changing the poly-slider washer under the reel disk.

#### Note

Whenever replacing the reel disk, perform the height checking and adjustment.

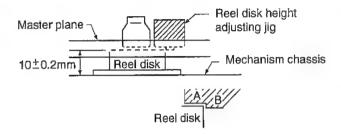


Figure 4-7.

## CHECKING AND ADJUSTMENT OF TAKE-UP TORQUE IN FAST FORWARD MODE

- · Remove the cassette housing control assembly.
- Make a short-circuit between TP5005 and TP5006, both located on the operation PWB. Now turn on the power.
- Setting
- Set a torque gauge to zero on the scale. Place it on the takeup reel disk.
- Press the FF button to set the mechanism to the fast forward mode.
- To calculate the remaining capacity of the play back mode, slowly rotate the supply reel disk, and then shift it into the forward mode.
- Checking
- 1. Turn the torque gauge slowly (one rotation every 2 to 3 seconds) by hand in the take-up direction.
- Check to see if the take-up torque is higher than 69 mN·m (700 gf·cm).

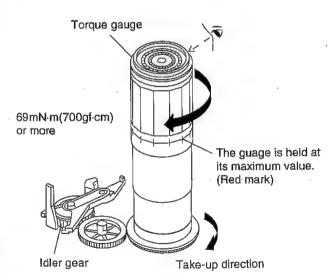


Figure 4-8.

#### Adjustment

- If the take-up torque is outside the range, clean the capstan D.D. motor pulley, drive belt and limiter pulley with cleaning liquid, then recheck the torque.
- 2. If the take-up torque is still out of range, replace the drive belt.
- 1. Hold down the torque gauge so that it may not fly off.
- When checking the take-up torque, do not keep the reel disk locked for a longer time.

## CHECKING AND ADJUSTMENT OF TAKE-UP TORQUE IN REWIND MODE

- · Remove the cassette housing control assembly.
- Make a short-circuit between TP5005 and TP5006, both located on the operation PWB. Now turn on the power.

#### Setting

- Set a torque gauge to zero on the scale. Place it on the supply reel disk.
- Press the REW button to set the mechanism to the rewind mode.
- To calculate the remaining capacity, slowly rotate the take-up reel disk, and then shift it into the rewind mode.

#### Checking

- Turn the torque gauge slowly (one rotation every 2 to 3 seconds) by hand in the take-up direction.
- Check to see if the take-up torque is higher than 69 mN·m (700 gf-cm).

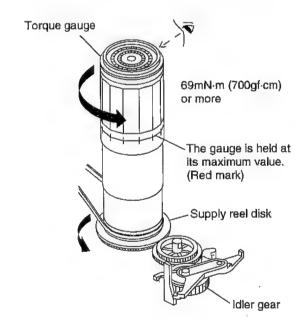


Figure 4-9.

#### VC-ML3 VC-ML3W

Adjustment

- 1. If the take-up torque is outside the range, clean the capstan D.D. motor pulley, drive belt and limiter pulley with cleaning liquid, then recheck the torque.
- 2. If the take-up torque is still out of range, replace the drive belt. Notes:
- 1. Hold down the torque gauge so that it may not fly off.
- 2. When checking the take-up torque, do not keep the reel disk locked for a longer time.

### CHECKING AND ADJUSTMENT OF TAKE-UP TORQUE IN PLAYBACK MODE

- Remove the cassette housing control assembly.
- 2. Make a short-circuit between TP5005 and TP5006, both located on the operation PWB. Now turn on the power.
- 3. Open the lid of the cassette torque meter, and hold it with two pieces of vinyl tapes.
- 4. Load the cassette torque meter into the unit.

### CHECKING AND ADJUSTMENT OF TAKE-UP TORQUE IN VIDEO SEARCH REWIND MODE

- Remove the cassette housing control assembly.
- Make a short-circuit between TP5005 and TP5006, both located on the operation PWB. Now turn on the power.

- 1. Push the PLAY button to place the ass'y in the playback mode.
- 2. Push the REW button to place the ass'y in the video search rewind mode.

#### Checking

1. Place the torque gauge on the supply reel disk, and turn it counterclockwise very slowly (one rotation every 1 to 2 seconds) and check that the torque is within the set value 14.0  $\pm$ 3.9mN·m (144 ± 40gf·cm).

Set value LP  $10.5 \pm 3.8$ mN·m  $(107 \pm 39$ gf·cm)

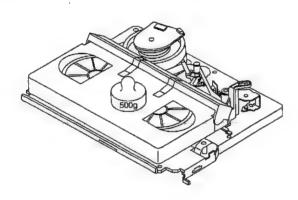


Figure 4-10.

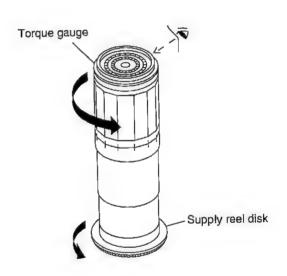


Figure 4-11.

- Put the weight (500g) on the cassette torque meter.
- Press the REC button to put the unit in REC mode.

- 1. Check that the torque is in the range of 10.5  $\pm$  3.8mN·m (107 ±39gf·cm).
- The torque fluctuates due to the rotational deviation of the limiter pulley ass'y. Use the center of the fluctuation as the
- 3. Place the ass'y in the LP record mode, and check that the takeup torque is within the range.

#### Adjustment

If the take-up torque in the playback mode is outside the range. replace the limiter pulley ass'y.

Stabilize the cassette torque meter to prevent floating.

Set the torque gauge securely on the supply reel disk. If it is not secure, the measurement will be incorrect....

#### Adjustment

If the take-up torque in video search rewind mode is outside the range, replace the limiter pulley ass'y.

The torque fluctuates due to the rotational deviation of the limiter pulley ass'y. Use the center of the fluctuation at the value.

## CHECKING THE VIDEO SEARCH REWIND BACK TENSION

- · Remove the cassette housing control assembly.
- Make a short-circuit between TP5005 and TP5006, both located on the operation PWB. Now turn on the power.
- Checking
- 1. Push the PLAY button to place the ass'y in the playback mode.
- Push the rewind button to place the ass'y in the video search rewind mode.
- Place the torque gauge on the take-up reel disk, and turn it counterclockwise very slowly (one rotation every 2 to 3 seconds) and check that the torque is within the set value 2.7±1mN·m (28±10gf·cm).

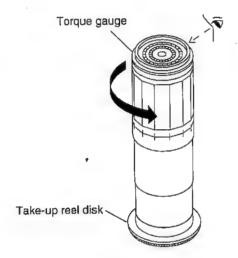


Figure 4-12.



- 1 Set the torque gauge securely on the take-up reel disk. If it is not secure, the measurement will be incorrect.
- 2 Measure the torque applying the torque gauge's weight.

### CHECKING THE PINCH ROLLER PRESSURE

- · Remove the cassette housing control assembly.
- Make a short-circuit between TP5005 and TP5006, both located on the operation PWB. Now turn on the power.
- Checking

The first control of the control of

Push the PLAY button to place the ass'y in the playback mode.


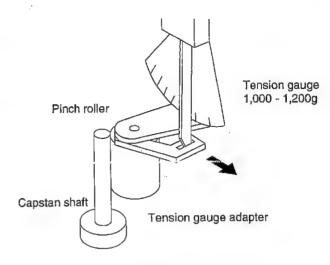


Figure 4-13.

- 1. Detach the pinch roller from the capstan shaft.
- 2. Set the tension gauge by hooking the tension gauge adapter onto the pinch roller shaft.
- Gradually release the pressure to allow the pinch roller to touch the capstan shaft. When the pinch roller just touches the capstan shaft, read the indication on the gauge.
- 4. Check that the reading of the tension gauge is in the range of 900 to 1200 q.

### CHECKING AND ADJUSTMENT OF TENSION POLE POSITION

- Remove the cassette housing control assembly.
- Make a short-circuit between TP5005 and TP5006, both located on the operation PWB. Now turn on the power.
- Setting
- 1. Open the lid of cassette tape (E-180), and hold it with two pieces of vinyl tapes.
- 2. Load the cassette tape into the unit.
- 3. Put the weight (500g) on the cassette tape.
- Make the adjustment with the beginning of a E-180 tape.

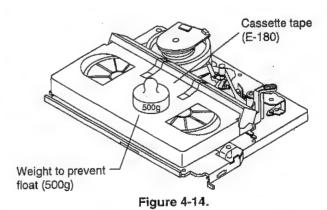

Checking

 Set a cassette tape, press the REC button and get the tape loaded. Now check the tension pole position.

#### Adjustment

- 1. If the reading of the cassette torque meter is less than specified, move the tension spring hook toward A.
- 2. If the reading of the cassette torque meter is more than specified, move the tension spring hook toward B.


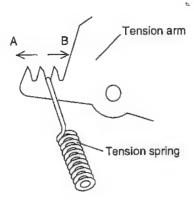


Figure 4-20.

#### CHECKING THE BRAKE TORQUE

· Checking the brake torque at the supply side

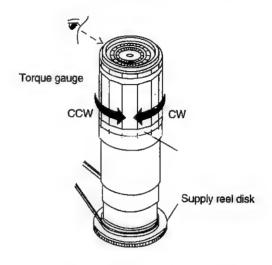

CCW: 5.9~9.8mN·m (60~100gf·cm) CW: 10~32mN·m (100~330gf·cm)

Figure 4-21.

- Remove the cassette housing control assembly.
- Make a short-circuit between TP5005 and TP5006, both located on the operation PWB. Now turn on the power.
- Setting
- Set a torque gauge to zero on the scale. Place it on the supply reel disk.
- 2. Switch from the FF mode to the STOP mode.
- 3. Disconnect the AC power plug.

#### Checking

Rotate the torque gauge (approx. one revolution per 2 seconds) in the clockwise (CW) direction and counterclockwise (CCW) direction of the supply brake so that the reel disk and the indicator of the torque gauge rotate at an equal rate.
 Check that the values are within the range of CW direction = 10 ~32mN·m (100~330gf·cm), CCW direction = 5.9~9.8mN·m (60 ~100gf·cm), and that the brake torque in the CW direction is at least twice as high as that in the CCW direction.

Checking the brake torque at the take-up side

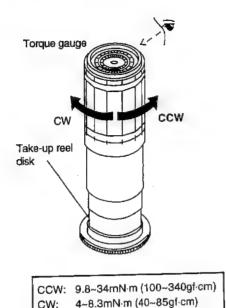


Figure 4-22.

- Remove the cassette housing control assembly.
- Make a short-circuit between TP5005 and TP5006, both located on the operation PWB. Now turn on the power.
- Setting
- Set a torque gauge to zero on the scale. Place it on the takeup reel disk.
- Switch from the FF mode to the STOP mode.
- Disconnect the AC power plug.

#### Checking

- 1. Rotate the torque gauge (approx. one revolution per 2 seconds) in the clockwise (CW) direction and counterclockwise (CCW) direction of the take-up brake so that the reel disk and the indicator of the torque gauge rotate at an equal rate. Check that the values are within the range of CCW direction= 9.8~34mN·m (100~340gf·cm), CW direction = 4~8.3mN·m (40~85gf cm), and that the brake torque in the CCW direction is at least twice as high as that in the CW direction.
- Adjustment of the brake torque at the supply side and the take-up side
- 1. If the supply or take-up brake torque is outside the range, clean the supply or take-up reel disk brake lever pad, then recheck the torque.
- 2. If the supply or take-up brake torque is still outside the range, replace the main brake ass'y.

#### Note:

When the main brake is replaced, perform the height checking and adjustment of reel disks (see page 16), and the brake torque checking.

### REPLACEMENT OF A/C (Audio/Control) HEAD

- Remove the cassette housing control assembly.
- 2. Place the unit in the unloading mode, and unplug the power

#### Removal

- 1. Remove the screw ABC(1)2.
- 2. Unsolder the A/C head PWB soldered to the A/C head assem-

- 1. After replacement, be sure to perform the adjustment of the tape drive train (see page 24). Under any circumstances, avoid touching the head. Clean the head, if touched with your finger, with alcohol.
- 2. Take care that the springs do not fly off when removing the screws ABC.

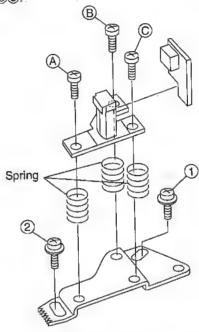
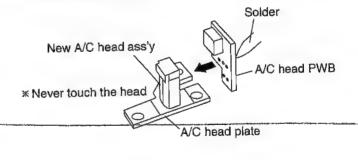


Figure 4-23.

#### Replacement

- 1. Solder the removed A/C head PWB onto a new A/C head assembly.
- 2. Using the slide calipers, set 10.3 mm for the height of the A/ C head arm (bottom surface) to the A/C head plate (screw area). (3 places) (See the figure below.)



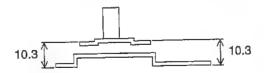


Figure 4-24.

3. Align the left and of the gear of the A/C head arm to the mark on the chassis, and temporarily tighten the screws ① and ② to allow the A/C head arm to smoothly move.

(Reference: Temporary tightening torque: 0.2 N.m as prefer-



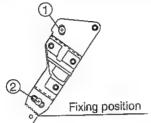
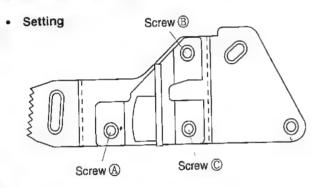


Figure 4-25.

#### Note:

Take care that the adjustment or height of the A/C head may vary during final tightening if the screws ① or ② is temporarily tightened to be loose.

### [A/C head height rough adjustment]



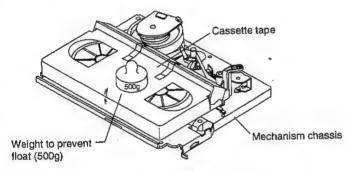


Figure 4-26.

- ① Set the cassette tape to the mechanism chassis.
- ② Press the PLAY button to the put the unit in the playback mode.
- ③ Roughly adjust the height of the A/C head by turning the screw
  © until the tape is in the position shown below.

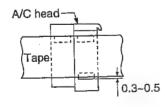


Figure 4-27.

#### Adjustment

Adjust the screw  $\bigcirc$  visually so that the control head is visible 0.3 to 0.5 mm below the bottom of the tape.

### HEIGHT ADJUSTMENT OF REVERSE GUIDE

#### [Height adjustment of reverse guide]

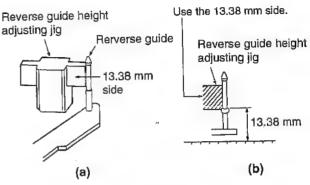


Figure 4-28.

- 1). Remove open lever (Figure 4-29 (a)).
- In the tape load mode, make adjustment at the 13.38 mm side first and then rotate the reverse guide adjuster nut by 1/10 turn counterclockwise.
- Actually load the unit with a tape, put it in the play mode, and make sure the tape is free from wrinkles near the reverse guide.
- 4. Use a commercially available box driver to turn the height adjusting nut.

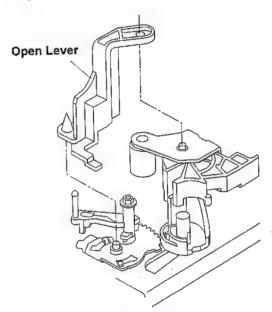


Figure 4-29 (a).

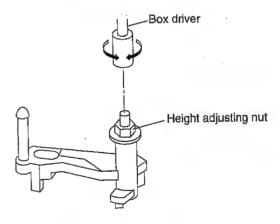


Figure 4-29 (b).

### ADJUSTMENT OF TAPE DRIVE TRAIN

Remove the cassette housing control assembly.

- 2. Make a short-circuit between TP5005 and TP5006, both located on the operation PWB. Now turn on the power.
- 3. Check and adjust the position of the tension pole. (See page
- 4. Check and adjust the video search rewind back tension. (See page 19.)

5. Set the A/C head. (See page 22.)

6. Rough adjustment of tape drive train.

a) Connect the oscilloscope to the test point for PB CHROMA envelope output (TP501). Set the synchronism of the oscilloscope to EXT. The PB CHROMA signal is to be triggered by the head switching pulse (TP502).

b) Loosen the setscrew at the lower part of the guide roller, and adjust it with a hexagon wrench (JIGHW0009) so that the guide roller turns smoothly. (Do not overloosen the setscrew, which causes insecurity of the guide roller.) (See Figure 4-30.)



- 1. Place the tracking control in the center position, and adjust the X-position so that the PB CHROMA envelope becomes maximum for easier rough adjustment of the tape drive train.
- 2. In the rough adjustment, pay particular attention to the outlet

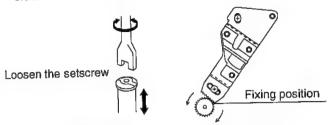


Figure 4-32.

Figure 4-33.



Cassette tape Weight of 500g

Figure 4-30.

Figure 4-31.

- c) Set the alignment tape (monoscope pattern) on the reel disk, and place the unit in the playback mode. (Place a 500 g weight on the cassette tape to prevent floating of the cassette tape.)
- d) In the X value adjustment mode (see the Electrical Adjustment), change the envelope waveform from MAX to MIN, and MIN to MAX by pushing the (+) or (-) tracking button, and check a flat response is obtained on the waveform.
- e) If a flat response cannot be obtained, roughly adjust the guide rollers on the supply side and take-up side using an adjusting screw driver until a flat response can be obtained.
- f) Tighten the screw (A) to eliminate wrinkles from the tape of the retain guide flange area. Replace the tape to check the tape on the retain guide

flange area for wrinkles.

(1) No wrinkle is present.

Turn the screw (A) clockwise to generate wrinkles on the tape at the flange area, and then back off the screw (4) as far as the wrinkles are just eliminated.

(2) Wrinkles are present.

Turn the screw (A) counterclockwise as far as the wrinkles are just eliminated.

Reference:

If the screw (A) is turned clockwise, wrinkles will be produced on the lower flange.

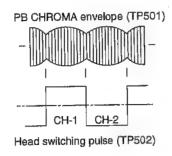


Figure 4-34.

7. Adjustment of A/C head height and azimuth

a) Connect an oscilloscope to the audio output terminal.

b) Using the alignment tape with linear audio pre-recorded signal of 1 kHz, adjust the screws (a) and (a) to maximize the audio output, and adjust the screw A to eliminate wrinkles from the tape at the retain guide flange. (Refer to P24-6-f.) Repeatedly adjust the screws (a), (a) and (a) in this sequence until the audio output becomes the maximum. (1 to 3 times as ordinary)

output becomes the maximum.

8. Adjustment of tape drive train and X-Position

 a) Connect the oscilloscope to the test points (TP501) for PB CHROMA envelope output. Set the synchronism of the oscilloscope to EXT.

The PB CHROMA signal is to be triggered by the head switching pulse (TP502).

b) Play back the tape drive train alignment tape.

c) Push the (+) or (-) button to change the envelope waveform from MAX to MIN, and MIN to MAX. Adjust the guide roller's height on the supply and take-up sides with an adjusting screw driver, to obtain an envelope waveform that is as flat as possible.

d) If the tape is above or below the helical lead, the PB CHROMA waveform will take the shape shown in Figure 4-25

e) Adjust for maximum flatness of the envelope as the step 6, e) in page 24.

f) Push the (+) or (-) tracking button to check that a flat response is obtained on the envelope waveform.

g) Secure the guide roller by tightening the guide roller setscrew in the unloading mode.

 h) Play back the tape drive train alignment tape to check that the envelope waveform does not change.

	When the tape is ab	ove the helical lead.	When the tape is be	low the helical lead.
	Supply side	Take-up side	Supply side	Take-up side
Adjustment	Supply side guide roller rotated in clockwise direction (lowers guide roller) to flatten envelope.	Take-up side guide roller rotated in clockwise direction (lowers guide roller) to flatten envelope.	Supply side guide roller rotated in counterclock-wise direction (raises guide roller) to make the tape float above the helical lead. The supply side guide roller is then rotated in the clockwise direction to flatten the envelope.	Take-up side guide roller rotated in counterclock-wise direction (raises guide roller) to make the tape float above the helical lead. The take-up side guide roller is then rotated in the clockwise direction to flatten the envelope.

Figure 4-35.

#### **AC-WF3** VC-ML3W

- 9. Adjustment of A/C head X-position.
  - a) In the X value adjustment mode (see the Electrical Adjustment), make a short-circuit between TP5005 and TP5006, both located on the operation PWB, to center the tracking.
  - b) Move the A/C head arm with an adjusting gear driver, and adjust the A/C head position for maximum head switching pulse hi side envelope.

Finally tighten the screws ① and ②. (First tighten the screw ①, and next the screw ②.) (Figure 4-36①②) (Reference: Final tightening torque: 0.6 N.m as prefer-

able.)

c) Adjust the playback switching point.

d) Check the flatness of the envelope waveform and sound by playing back a recorded tape.

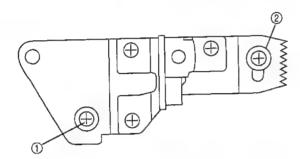


Figure 4-36.

### REPLACEMENT OF THE CAPSTAN D.D. (DIRECT DRIVE) MOTOR

- Remove the cassette housing control assembly.
- Removal (Follow the order of indicated numbers.)
- 1. Disconnect from the board-to-board connector on the main
- 2. Remove the drive belt 1.
- 3. Remove the screws 2.

- Reassembly
- 1. Mount the capstan motor on the mechanism chassis making sure not to allow the capstan shaft to hit the mechanism chassis, and attach it with the three screws.
- 2. Attach the reel beit. Reconnect to the board-to board connector on the main PWB.

- 1. After installing the capstan D.D. motor, be sure to rotate the capstan D.D. motor and check the movement.
- 2. Check the servo circuit.

### REPLACEMENT OF DRUM D.D. MOTOR

- 1. Put the unit in the cassette eject position.
- 2. Unplug the power cord.
- Removal (Reverse the order in reassembly.)
- 1. Disconnect the FFC cable (1).
- Unscrew the D.D. stator assembly fixing screws ②.
- 3. Take out the D.D. stator assembly ③.
- Unscrew the D.D. rotor assembly fixing screws (4).
- Take out the D.D. rotor assembly ⑤.

- 1. In removing the D.D. stator assembly, part of the drum earth spring pops out of the pre-load collar. Be careful not to lose it.
- 2. Secure the D.D. rotor assembly so that the installation positioning holes in the D.D. rotor assembly and upper drum assembly match.

(Match the upper drum's notch with the rotor's hole.)

- Be careful not to damage the upper drum or the video head.
- Be sure that the hall device and the D.D. stator assembly are not damaged by the D.D. rotor assembly or other parts.
- 5. After installation, adjust the playback switching point.

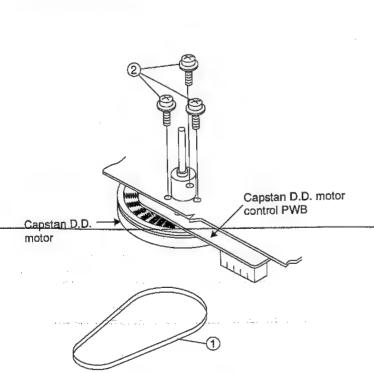


Figure 4-37.


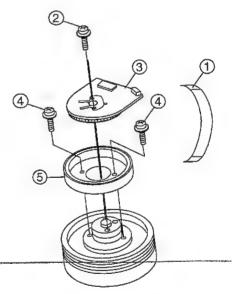



Figure 4-38.

# ASSEMBLE THE MECHANISM'S PARTS REQUIRING THE PHASE MATCHING IN THE STEPS BELOW.

- Assembling the pinch roller assembly, reverse guide assembly and the pinch drive cam (on the front of the mechanism chassis).
- Mounting the shifter (on the back of the mechanism chassis).
- Mounting the master cam (on the back of the mechanism chassis).
- Mounting the connection gear, slow brake and loading motor assemblies (on the back of the mechanism chassis).
- Assembling the pinch roller assembly, reverse guide assembly and the pinch drive cam (on the front of the mechanism chassis).

Place the following parts in position in numerical order.

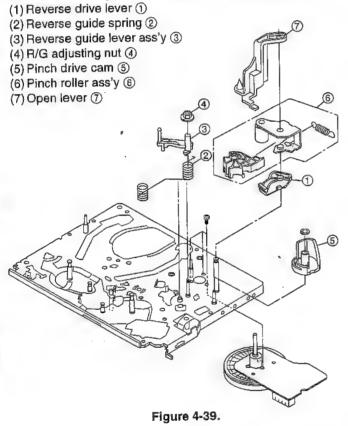

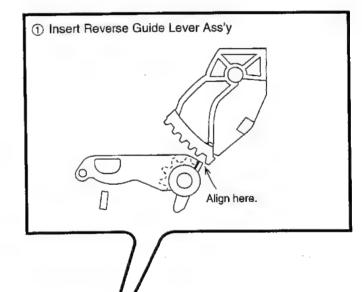

② Insert Pinch Drive Cam

Tum the reverse guide lever assembly counterclockwise to the stopper.

Insert the pinch drive cam, aligning its notch to the projection on the pinch drive lever assembly.

Insert the pinch drive lever assembly, aligning its notch to the projection on the chassis.

Pinch drive lever ass'y

Figure 4-40-1.

### AC-WF3M

③ Insert Pinch Roller/Pinch Double Action Lever Ass'y.

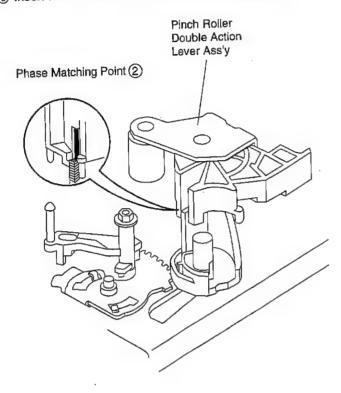


Figure 4-40-2.

4 Insert Open Lever.


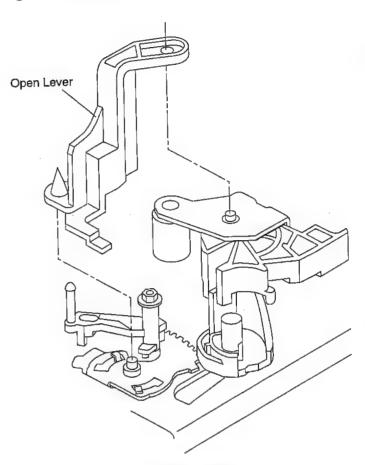


Figure 4-40-3.

## 2. Mounting the shifter (on the back of the mechanism chassis).

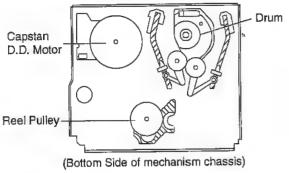

- Make sure that the loading gear is at the point (1) as shown below.
- 2. Place the shifter in position, keeping in mind the 6 insertion points and the three relief points.
- 3. For the phase matching at the insertion point ①, see the point② as shown below.
- 4. Finally fix the shifter with two washers located on insert points ① and ④.

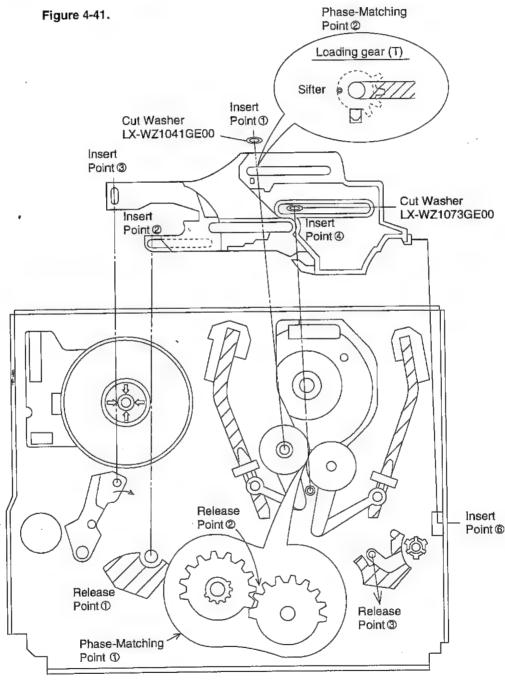


Figure 4-42.

### 3. Mounting the master cam (on the back of the mechanism chassis).

- (1) Make sure beforehand that the shifter is at the point as shown
- (2) Place the master cam in the position as shown below.

#### Note:

See the figure below for the phase matching between the master cam and the cassette control drive gear.

(3) Finally fix the master cam with E ring.

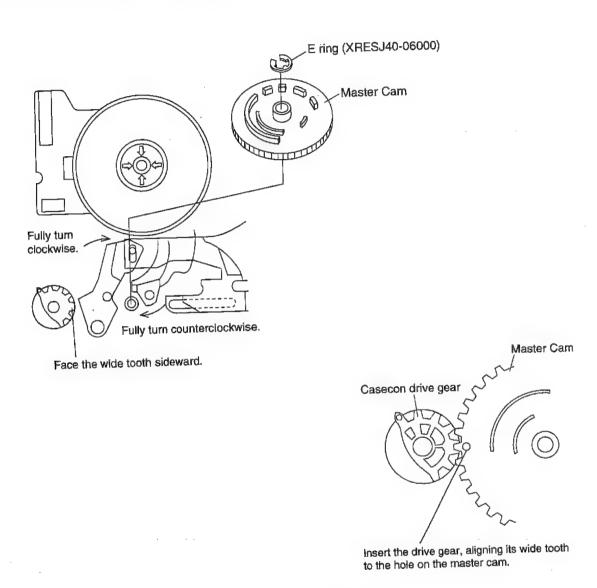


Figure 4-43.

### REPLACEMENT OF LOADING MOTOR

Removal

Remove 2 screws.

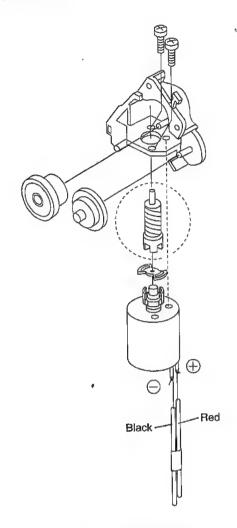
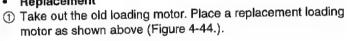


Figure 4-44.

Replacement



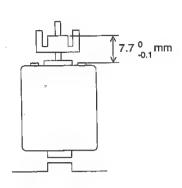


Figure 4-45.

Press-fit the loading motor pulley with a force of less than 98N (10 kgf). Be sure that the pulley is  $7.7^{+0}_{-0.1}$  mm away from the motor.

### ASSEMBLY OF CASSETTE HOUSING

① Framer ass'y

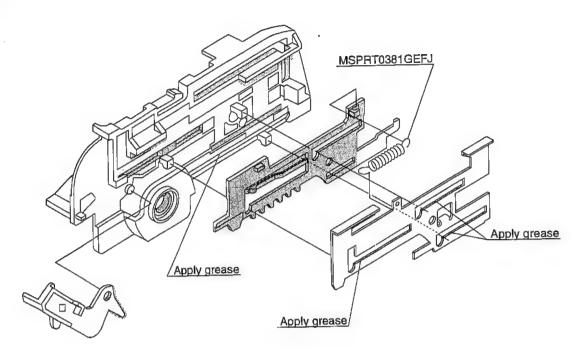


Figure 4-46.

### ② Synchro Gear, Drive Gear L and Drive Gear R

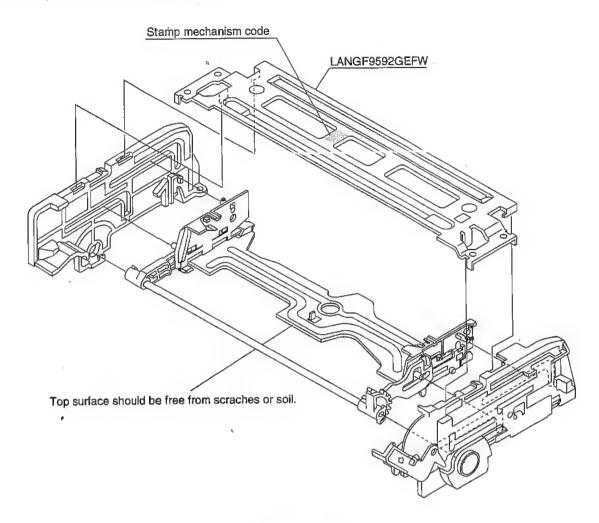


Figure 4-47.

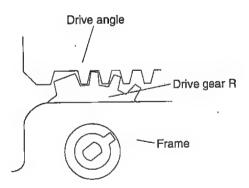


Figure 4-48.

### 5. ELECTRICAL ADJUSTMENT

#### Notes:

- Before the adjustment:
- Electrical adjustments discussed here are often required after replacement of electronic components and mechanical
  - Check that the mechanism and all electric components are in good working condition prior to the adjustments, otherwise adjustments can not be completed.
- Instruments required:
  - O Colour TV monitor
  - Audio signal generator
  - ODC voltmeter
  - OBlank video cassette tape
  - Screwdriver for adjustment
  - OColour bar signal generator

- Dual-trace oscilloscope
- O AC milli-voltmeter
- O Frequency counter
- Alignment tape (VROCPSV)
- Alignment tape (VROATSV)
- Alignment tape (VROCBFFS)
- O Alignment tape (VROCPZJS)

Servicing precations

When the IC703 (E2PROM) has been replaced, make the following reprogramming. Depending on models, the IC703 (E2PROM) has been factry-adjusted for it's memory function.

it's therefore necessary to reprogram the memory function for the model in question.

Note that the servo circuit requires readjustments for the head switching point, slow and still modes.

### Location of controls and test points

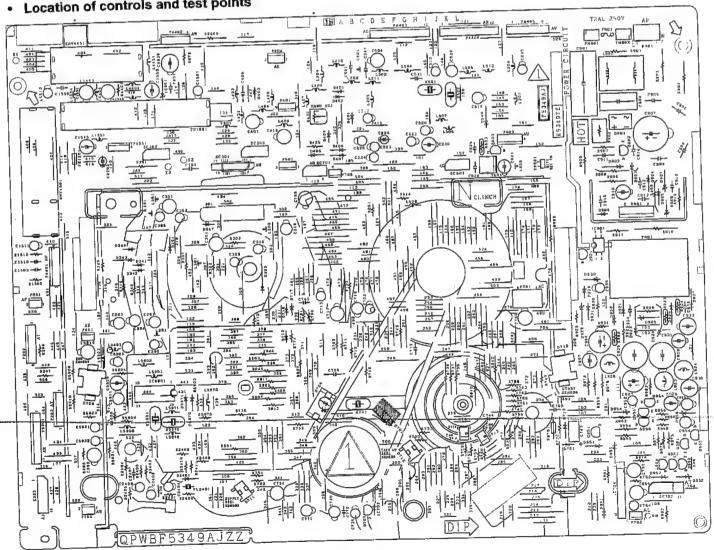


Figure 5-1.

#### SERVO CIRCUIT ADJUSTMENT

### ADJUSTMENT OF PAL SYSTEM HEAD SWITCHING POINT

Measuring instrument	Dual-trace oscilloscope Colour TV monitor
Mode	Playback
Cassette	Alignment tape (VROCPSV)
Test point	TP502 (H.SW.P.) to CH-1, VIDEO OUT jack to CH-2 (CH-1 trigger slope switch at (+), Internal trigger at CH-1 side.)
Specification	6.5 ± 0.5H (lines)

Remove the front panel and play the alignment tape.

(VROCPSV)

The parity server.

(Playback picture on the monitor screen.)

 Make for a moment short-circuit between TP5001 and TP5002, both located on the operation PWB.
 Make the test points short-circuited and see if the REC LED and the TIMER LED light up.
 (See Note below ①)

- Press the PLAY button, in the automatic adjustment mode.
- Make sure the REC LED is flashing during the automatic adjustment.
- When the automatic adjustment is over, the REC LED goes out.
- 6. Press the STOP button to return to normal mode.
- Make sure the head switching point has been properly adjusted. Play back the alignment tape and check to seeif the waveform on the oscilloscope screen is as shown in figure 5-2.

If out of spec, call the test mode again. Press the FF or REW button to get the specified value.

#### Note:

① Set-up of TEST mode.

When the adjustment of HEAD SWITCHING POINT, AUTO TRACKING function is invalid.

- ② When the cassette housing control ass'y is removed, set-up of mechanism operating mode.
- 1) Replug the AC power cord it a few minutes later.
- Make a short-circuit between TP5005 and TP5006, both located on the operation PWB, to center the tracking.
- 3) AC power cord is plugged in.
- 4) You can make mechanism operating mode.

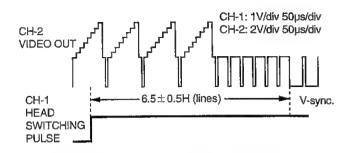


Figure 5-2.

### ADJUSTMENT OF PAL SYSTEM SP/LP SLOW TRACKING PRESET

Measuring instrument	Colour TV monitor
Mode	Playback
Cassette	Self-recorded tape (SP/LP mode) (See Note below)
Control	Tracking control buttons (+) or (-)
Specification	Minimized noise on monitor screen

- Have the unit to receive a good TV broadcast or feed a video signal to the VIDEO IN jack.
- Set the tape speed in SP mode by using the remote control and record the signal on tape.
- 3. Rewind and play the tape where signal was recorded in above step.
- 4. Press the SLOW button on the remote control,and playback the recorded portion in the slow mode.
- Make for a moment short-ciucuit between TP5001 and TP5002, both located on the operation PWB.
   Make the test points short-circuited and see if the REC LED and the TIMER LED light up.
- Look at the monitor screen and adjust the (+) or (-)
  TRACKING buttons so that the there is noise disappears from the screen.
- 7. Press the STOP button to return to normal mode.
- Play the tape a few seconds then press the SLOW button again and make sure there is no noise in the screen.

(For the LP mode put adjustment at the same adjustment way as SP mode.)

#### Notes:

Self-recorded tape means a cassette whose program was recorded by the unit being adjusted.

# ADJUSTMENT OF PAL SYSTEM FV (False Vertical Sync) OF STILL PICTURE

101 tiotal 4 / 1		
Measuring instrument	Colour TV monitor	
Mode	Playback still	
Cassette	Self-recorded tape (SP mode) (See Note below)	
Control	Tracking control buttons (+) or (-)	
Specification	No vertical jitter of picture	

- Play a cassette which was recorded by the unit in SP mode.
- 2. Press the PAUSE/STILL button to freeze the picture.
- Look at the monitor screen and adjust (+) or (-)
  TRACKING buttons so that the vertical jitter of the
  picture to be minimized.
- Play and freeze the self-recorded tape in SP mode and make sure vertical jitter of the picture is not noticeable.
  - (For the LP mode put adjustment at the same adjustment way as SP mode.)

#### Note:

Self-recorded tape is a cassette whose program was recorded by the unit being adjusted.

# ADJUSTMENT OF NTSC SYSTEM HEAD SWITCHING POINT

Measuring instrument	Dual-trace oscilloscope Colour TV monitor		
Mode	Playback		
Cassette	Alignment tape (VROATSV)		
Test point	TP502 (H.SW.P.) to CH-1, VIDEO OUT jack to CH-2 (CH-1 trigger slope switch at (+), Internal trigger at CH-1 side.)		
Specification	6.5 ± 0.5H (lines)		

- Remove the front panel and play the alignment tape. (VROATSV)
  - (Playback picture on the monitor screen.)
- Make for a moment short-circuit between TP5001 and TP5002, both located on the operation PWB.
   Make the test points short-circuited and see if the REC LED and the TIMER LED light up. (See Note below ①)
- 3. Press the PLAY button, in the automatic adjustment mode.
- Make sure the REC LED is flashing during the automatic adjustment.
- When the automatic adjustment is over, the REC LED goes out.
- 6. Press the STOP button to return to normal mode.
- Make sure the head switching point has been properly adjusted. Play back the alignment tape and check to seeif the waveform on the oscilloscope screen is as shown in figure 5-3.
  - If out of spec, call the test mode again. Press the FF or REW button to get the specified value.

#### Note:

- Set-up of TEST mode.
   When the adjustment of HEAD SWITCHING POINT, AUTO TRACKING function is invalid.
- ② When the cassette housing control ass'y is removed, set-up of mechanism operating mode.
- 1) Replug the AC power cord it a few minutes later.
- Make a short-circuit between TP5005 and TP5006, both located on the operation PWB, to center the tracking.
- 3) AC power cord is plugged in.
- 4) You can make mechanism operating mode.
- With the PAL system head switching point already adjusted, it is not necessary to adjust the NTSC system head switching point. Just observe the waveform at the above test point and makes sure that it is as specified.

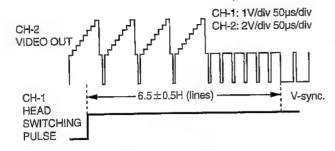


Figure 5-3.

## ADJUSTMENT OF NTSC SYSTEM SP/EP SLOW TRACKING PRESET

Measuring instrument	Colour TV monitor
Mode	Playback
Cassette	Self-recorded tape (SP/EP mode) (See Note below)
Control	Tracking control buttons (+) or (-)
Specification ,	Minimized noise on monitor screen

- Have the unit to receive a good TV broadcast or feed a video signal to the VIDEO IN jack.
- Set the tape speed in SP mode by using the remote control and record the signal on tape.
- Rewind and play the tape where signal was recorded in above step.
- Press the SLOW button on the remote control, and playback the recorded portion in the slow mode.
- Make for a moment short-ciucuit between TP5001 and TP5002, both located on the operation PWB. Make the test points short-circuited and see if the REC LED and the TIMER LED light up.
- Watching the monitor screen, adjust the tracking (+) and (-) buttons so that the noise on the screen be minimum.
- 7. Press the STOP button to return to normal mode.
- Play the tape a few seconds then press the SLOW button again and make sure there is no noise in the screen.
  - (For the EP mode put adjustment at the same adjustment way as SP mode.)

#### Notes

Self-recorded tape means a cassette whose program was recorded by the unit being adjusted:

## ADJUSTMENT OF NTSC SYSTEM FV (False Vertical Sync) OF STILL PICTURE

Measuring instrument	Colour TV monitor
Mode	Playback still
Cassette	Self-recorded tape (SP mode) (See Note below)
Control	Tracking control buttons (+) or (-)
Specification	No vertical jitter of picture

- Play a cassette which was recorded by the unit in SP mode.
- 2. Press the PAUSE/STILL button to freeze the picture.
- 3. Look at the monitor screen and adjust (+) or (-) TRACKING buttons so that the vertical jitter of the picture to be minimized.
- 4. Play and freeze the self-recorded tape in SP mode and make sure vertical jitter of the picture is not noticeable.
  - (For the LP mode put adjustment at the same adjustment way as SP mode.)

#### Note:

Self-recorded tape is a cassette whose program was recorded by the unit being adjusted.

### ADJUSTMENT OF NTSC SKEW COMPEN-SATION

Measuring instrument	Colour TV monitor
Mode	Playback still (SP mode)
Cassette	Alignment tape (VROATSV)
Control	R5410 (Flicker control)
Specification	No flicker on the monitor TV screen


- Play the alignment tape (VROATSV) and place the unit to the playback still mode.
- Look at the monitor screen and adjust R5410 so that the flicker of the picture to be minimized.

## Y/C CIRCUIT ADJUSTMENT

#### CHECKING OF VIDEO E-E LEVEL

Oscilloscope
E-E or Record
EIA colour bar (1.0Vp-p PAL and NTSC system)
VIDEO OUT jack
1.0 ± 0.2Vp-p

- 1. Connect a 75 ohm terminating resistor to the VIDEO OUT jack and connect an oscilloscope across this terminating resistor. (See Note below.)
- 2. Feed a colour bar signal to the VIDEO IN jack.
- 3. Make sure that the E-E signal amplitude is 1.0Vp-p as shown in Figure 5-4.
- 4. For the NTSC mode, put to checking in the same way as PAL mode.

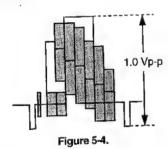

#### Notes:

If the 75 ohm terminating resistor is missing, the signal amplitude will be doubled.

# CHECKING OF WHITE CLIP LEVEL

01,120,111	
Measuring instrument	Oscilloscope
Mode	E-E or Record (PAL LP/NTSC EP mode)
Input signal	EIA colour bar (1.0Vp-p PAL and NTSC system)
Test point	Pin(48) of IC401, GND
Specification	190 ± 5% (See note below)
	"

- 1. Connect a oscilloscope to pin(48) of IC401 and GND.
- 2. Feed the colour bar signal to the VIDEO IN jack and set the unit in E-E or recording mode.
- 3. Make sure that the overshoot of the video signal is clipped at 190% as shown in Figure 5-5.
- 4. For the NTSC mode, put to checking in the same way as PAL mode.

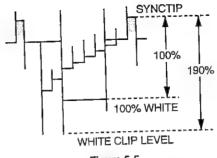


Figure 5-5.

#### Note:

From sync tip to white peak, the level is 100%. The white clip level is 90% above the white level.

#### CHECKING OF RECORD LEVEL

CHECKING	HECKING OF RECOTE ELITE	
Measuring instrument	Dual-trace oscilloscope	
Mode	Record mode (PAL LP/NTSC EP mode)	
Input signal	EIA colour bar (1.0Vp-p PAL and NTSC system)	
Test point	Chroma (Red) R514 terminal lead at L509 side (Sig.) ~ GND Sync tip R225 terminal lead at L210 side (Sig.) ~ GND	
Specification	Chroma (Red): 170~230mVp-p Sync tip: 720~880mVp-p	

1)

- Feed the colour bar signal to the VIDEO IN jack and set the unit in recording mode.
- 2. Connect a dual -trace oscilloscope to each test point shown in table.
- 3. Make sure so that the amplitude of the chrome (Red) portion and the sync tip portion are specified as shown in Figure 5-6.
- 4. For the NTSC mode, put to checking in the same way as PAL mode.

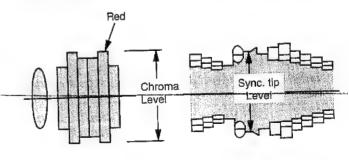


Figure 5-6 (a).

Figure 5-6 (b).


#### CHECKING OF PLAYBACK LEVEL

0112012113	SHEOKING OF FEMALES	
Measuring instrument	Oscilloscope	
Mode	Record/Playback (PAL LP/NTSC EP mode)	
Input signal	EIA colour bar (1.0Vp-p PAL and NTSC system)	
Test point	VIDEO OUT jack	
Specification	1.0 ± 0.2Vp-p	

- 1. Be sure that E-E level has been correctly specificed.
- Connect a 75 ohm terminating resistor to the VIDEO OUT jack and connect an oscilloscope across this terminating resistor. (See Note below.)
- Feed a colour bar signal to the VIDEO IN jack and set the unit in recording mode.
- 4. Play the colour bar portion of the recorded tape.
- 5. Make sure that the output signal amplitude is 1.0Vp-p as shown in Figure 5-7.
- 6. For the NTSC mode, put to checking in the same way as PAL mode.

#### Note:

If the 75 ohm terminating resistor is missing, the signal amplitude will be doubled.

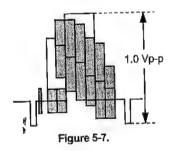

#### ADJUSTMENT OF S. PICTURE

Measuring instrument	Colour TV monitor
Mode	Record/Playback (PAL SP mode)
Input signal	Monoscope signal
Test point	TP402 (Sig) ~ TP403 (GND)
Control	R430 (S. Picture control)
Specification	

- Record the PAL monoscope signal in the SP mode. Play back the signal.
- 2. Connect a 1M ohm resistor between the test points TP402 (SIG) and TP403 (GND).
- 3. With the picture perfect on the monitor screen, slowly turn R430 (S.PICTURE control) until there will be problem with the picture.
- 4. Then disconnect the above resistor, Finally make sure the picture on the screen turns perfect again.


#### CHECKING OF PLAYBACK LEVEL

•11E •11	
Measuring instrument	Oscilloscope
Mode	Record/Playback (PAL LP/NTSC EP mode)
Input signal	EIA colour bar (1.0Vp-p PAL and NTSC system)
Test point	VIDEO OUT jack
Specification	1.0 ± 0.2Vp-p

- 1. Be sure that E-E level has been correctly specificed.
- Connect a 75 ohm terminating resistor to the VIDEO OUT jack and connect an oscilloscope across this terminating resistor. (See Note below.)
- 3. Feed a colour bar signal to the VIDEO IN jack and set the unit in recording mode.
- 4. Play the colour bar portion of the recorded tape.
- 5. Make sure that the output signal amplitude is 1.0Vp-p as shown in Figure 5-7.
- For the NTSC mode, put to checking in the same way as PAL mode.

#### Note:

If the 75 ohm terminating resistor is missing, the signal amplitude will be doubled.

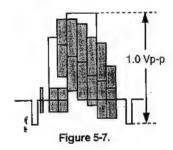

#### ADJUSTMENT OF S. PICTURE

Measuring instrument	Colour TV monitor
Mode	Record/Playback (PAL SP mode)
Input signal	Monoscope signal
Test point	TP402 (Sig) ~ TP403 (GND)
Control	R430 (S. Picture control)
Specification	

- Record the PAL monoscope signal in the SP mode. Play back the signal.
- Connect a 1M ohm resistor between the test points TP402 (SIG) and TP403 (GND).
- 3. With the picture perfect on the monitor screen, slowly turn R430 (S.PICTURE control) until there will be problem with the picture.
- 4. Then disconnect the above resistor, Finally make sure the picture on the screen turns perfect again.

# Hi-Fi AUDIO CIRCUIT ADJUSTMENT. IMPORTANT NOTES ON HI-FI SECTION.

 Though adjustment procedures are written for the left channel, those for the right channel are basically the same.

Words shown in the bracket "[ ]" are for the right channel only.

- 2. SERVICING OF THE Hi-Fi block.
  - 1) "RECORD MODE".

Under this condition record a stereo broadcast on tape and adjust control.

2) "PLAYBACK MODE".

Under this condition play a Hi-Fi tape and adjust

(You can select the audio output channels in the playback mode by pressing the MENU button on the remoto control or the SET UP button on the VCR. Set the desired Audio Output mode by pressing the (+) or (-) button.

The Audio Output mode will change in the normally select Hi-Fi L+R mode with the pressing the (+) or (-) button both the L and R audio channels are taken from the Hi-Fi mode track. The L and R indicators light up on the Multi-function display in this mode.)

#### · Location of controls and test points

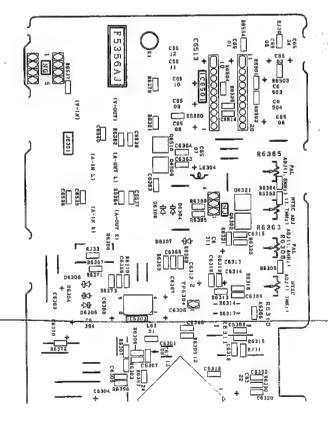


Figure 5-8.

#### CHECKING OF E-E LEVEL

Measuring instrument	AC milli-voltmeter
Mode	E-E or REC mode
Input signal	1kHz, -8dBs
Test point	AUDIO OUT jack
Specification	-8 ± 2dBs

- 1. Feed the audio signal shown in table to the left channel of the AUDIO IN jack.
- Connect an AC milli-voltmeter to the left channel of the AUDIO OUT jack and right channel of the AUDIO OUT jack.
- 3. Put the unit in E-E or record mode and make sure that the milli-voltmeter read is specified value.

#### NOTE:

Check the level is less than 2dBs both Left and Right channels.

# ADJUSTMENT OF FM CARRIER FREQUENCY

	The state of the s
Measuring instrument	Frequency counter
Mode	E-E or REC mode
Input signal	Not required
Test point	TP6301 (Sig.) ~ TP6302 (GND)
Controls	R6310 [R6363] NTSC Carrier frequency control R6308 [R6365] PAL Carrier frequency control
Specification	1.3 [1.7] MHz ± 5kHz (at NTSC mode) 1.4 [1.8] MHz ± 5kHz (at PAL mode)

- 1. Put the unit in A/V input mode. Do not feed any signal to the VIDEO IN JACK.
  - (Disconnect any cable from video input terminal.)
- Put the unit in E-E or recording mode and connect a frequency counter to test points TP6301 (Sig.) and TP6302 (GND).
- Put the unit in NTSC mode and adjust R6310 [R6363] (NTSC carrier control) so that the counter read is specified value.
- 4. In the next, place the unit in PAL mode and adjust R6308 [R6365] (PAL carrier control) so that the counter read is specified value.

# CHECKING OF LINEAR AUDIO PLAYBACK LEVEL

Measuring instrument	AC milli-voltmeter
Mode	Playback
Input signal	Alignment tape.(VROCPZJS)
Test point	AUDIO OUT jack
Specification	-12.0 ± 2dB

- Connect an AC milli-voltmeter to the AUDIO OUT jack.
- 2. Playback the Alignment tape. (VROCPZJS)
- 3. Make sure that the output level is as specified.

# CHECKING OF HI-FI AUDIO PLAYBACK LEVEL

Measuring instrument .	AC milli-voltmeter
Mode	Playback
Cassette	Alignment tape (VROCBFFS)
Test point	AUDIO OUT jack
Specification	-8.0 ± 2dBs (at RCA jack)

- Connect an AC milli-voltmeter to the AUDIO OUT jack.
- 2. Play the alignment tape (VROCBFFS).
- 3. Make sure that the AUDIO OUT level is as specified.

#### Note

Check the PLAYBACK level is less than 2.0dBs both Left and Right channels.

# CHECKING OF HI-FI/LINEAR AUDIO SELF-RECORD/PLAYBACK LEVEL

Measuring instrument	AC milli-voltmeter
Mode	Record/playback
Input signal	1kHz, -8.0dBs
Test point	AUDIO OUT jack
Specification	-8.0 ± 3dBs

- 1. Feed the audio signal shown in table to the Left channel AUDIO IN jack.
- Connect an AC milli-voltmeter to the Left channel AUDIO OUT jack and Right channel AUDIO OUT jack,
- Make sure so that the milli-voltmeter reads spcified value.

#### Note:

CHeck the PLAYBACK level is less than 2.0dB both Left and Right channels.

# CHECKING OF ERASE VOLTAGE AND OSCILLATION FREQUENCY

Measuring instrument	Oscilloscope			
Mode	Record			
Cassette	Full erase head			
Test point	T6301			
Specification	70 ± 5kHz, 40Vp-p or greater			


- 1. Put the unit in record mode.
- 2. Connect an oscilloscope across the full erase head.
- Make sure the erase voltage across the full erase head is approx. 40Vp-p or more and frequency is 70 ± 5kHz.

#### LCD DISPLAY CIRCUIT ADJUSTMENT

#### CONSTRAST ADJUSTMENT

Measuring instrument	Oscilloscope					
Mode E-E						
Input signal	PAL video signal (white 50%)					
Test point	TP8941 (G output) ~ GND(TP8943)					
Control	R8902 (CONTRAST ADJ.)					
Specification	Luminance level to be the same (+0.1Vp-p)					

- 1. In the A/V mode, feed the PAL video signal (white 50%) to the video input terminal.
- Connect the oscilloscope between TP8941 (G output) and GND. Adjust R8902 (contrast control) so that the normal white portion and the inverted one of the G output waveform be at the same level.

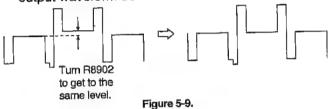

#### H-POSITION ADJUSTMENT

Measuring instrument	Colour Monitor TV			
Mode	Playback			
Cassette	Alignment tape (VROCPSV)			
Control	R9021 (H-POSITION ADJ.)			
Specification	Monoscope pattern to be centered on screen			

- 1. Play back the alignment tape (VROCPSV).
- Observing the monitor screen, turn R9021 (H-position control) until the monoscope pattern gets centered on the screen.

# COMMON BIAS ADJUSTMENT (ROUGH ADJUSTMENT)

Measuring instrument	DC voltmeter
Mode	E-E
Input signal	PAL video signal (white 50%)
Test point	TP9045 (COM-BIAS ADJ.)
Control	R9061 (COM-BIAS ADJ.)
Specification	1.5 ± 0.1Vp-p

- In the A/V mode, feed the PAL color bar signal to the video input terminal. Connect the DC voltmeter between TP9045 (common bias) and GND.
- Turn R9061 (common bias control) until the DC voltmeter reading becomes 1.5V.

#### WHITE BALANCE ADJUSTMENT

Measuring instrument	Oscilloscope				
Mode E-E					
Input signal	PAL video signal (white 50%)				
Test point	TP8941 (G output) - GND, TP8940 (R output) - GND, TP8942 (B output) - GND				
Control	R8966 (SUB BRIGHT-R ADJ.), R8961 (SUB BRIGHT-B ADJ.)				
Specification	Luminance level to be the same (+0.1Vp-p)				

- Before making this adjustment, make sure that the contrast has been completely adjusted.
- Call the A/V input mode and feed the PAL vudeo signal (50% white) to the video input terminal.
- Connect the oscilloscope between TP8940 and GND, and adjust R8966 to have the specified luminance value. Reconnect the oscilloscope between TP8942 and GND, and adjust R8961 to have the same luminance level.

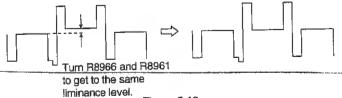


Figure 5-10.

# BURSTCLEANING ADJUSTMENT (IN PAL MODE ONLY)

Measuring instrument	Oscilloscope					
Mode	E-E (BLUE BACK mode)					
Input signal	No signal					
Control	C8911 (PAL COLOUR BURST ADJ.)					
Specification	Make such adjustment that the will be no horizontal streaks.)					

- 1. In the PAL mode, make the blue background on the LCD panel.
- Watching the LCD panel, adjust C8911 so that there will be no horizontal streaks. (Be sure to call the PAL mode. In the NTSC mode, the blue background mode does not change with C8911.)

# COMMON BIAS ADJUSTMENT (FINE ADJUSTMENT)

Measuring instrument	Colour Monitor TV				
Mode E-E					
Input signal NTSC 10-step-wave video s					
Control	R9021 (H-POSITION ADJ.)				
Specification	Vertical stripes to disappear from screen				

- 1. In the A/V mode, feed the NTSC 10-step-wave video signal to the video input terminal.
- Observing the monitor screen, slowly turn R9061 (common bias control) until the vertical stripes disappears from the screen.

#### Note:

Be sure to turn the control slowly. The changing image cannot be observed if the control is turned quickly.

#### **RF CIRCUIT**

#### ADJUSTMENT OF RF AGC CIRCUIT

Measuring instrument	Oscilloscope
Mode	Good TV Commercial broadcast reception
Test point	TP1553 (Sig.) TP1554 (GND) (Located on the main PWB)
Control	VR101 RF AGC control (Located on IF PACK)
Specification	Just before shrinking (See Figure 5-9)

 Have the unit received good TV commercial broadcast reception.

(Input field stregth: 85 dBμV of antenna terminal.)

 Connect an oscilloscope to test points TP1553 (Sig.) TP1554 (GND).

Observe the video output terminal waveform on the oscilloscope.

Adjust VR101 (RF AGC control) in the IF pack until the noise disappears from the oscilloscope screen and the waveform nearly comes into sync.

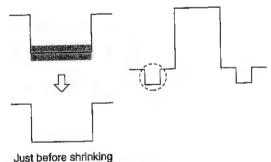


Figure 5-11.

#### CHECKING OF TUNER AUDIO LEVEL


- Make weighting comparison of the sound volume between in the TV Through mode and in the VCR E-E mode to see if the volume is the same as each other.
- If the volume is not equal, turn the VR102 control on the IF pack to reach the same volume level.


# 6. MECHANISM OPERATION FLOWCHART AND TROUBLESHOOTING GUIDE


# MECHANISM OPERATION FLOWCHART


\* This flowchart describes the outline of the mechanism's operation, but does not give its details.


CASSETTE INSERTION - STOP

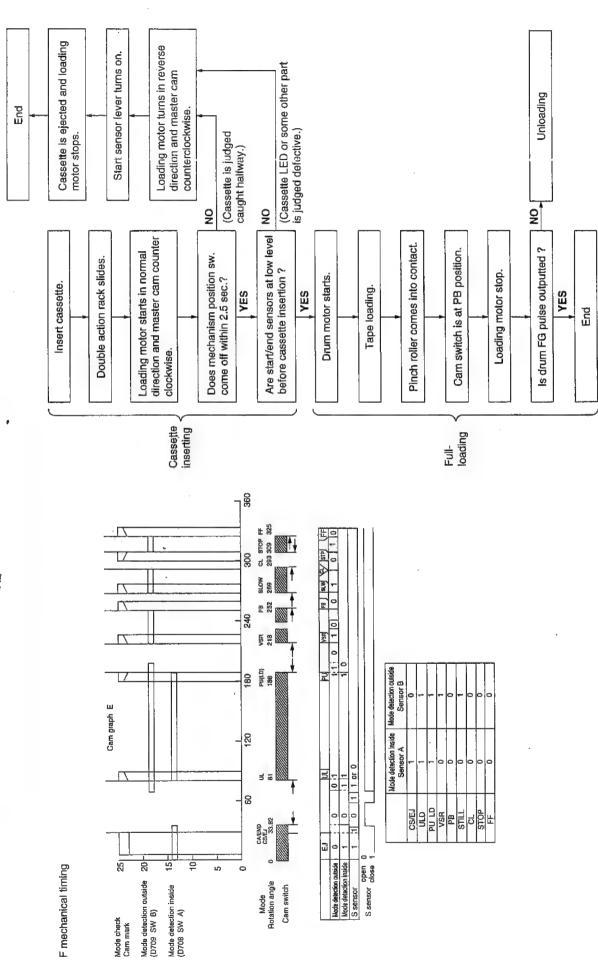


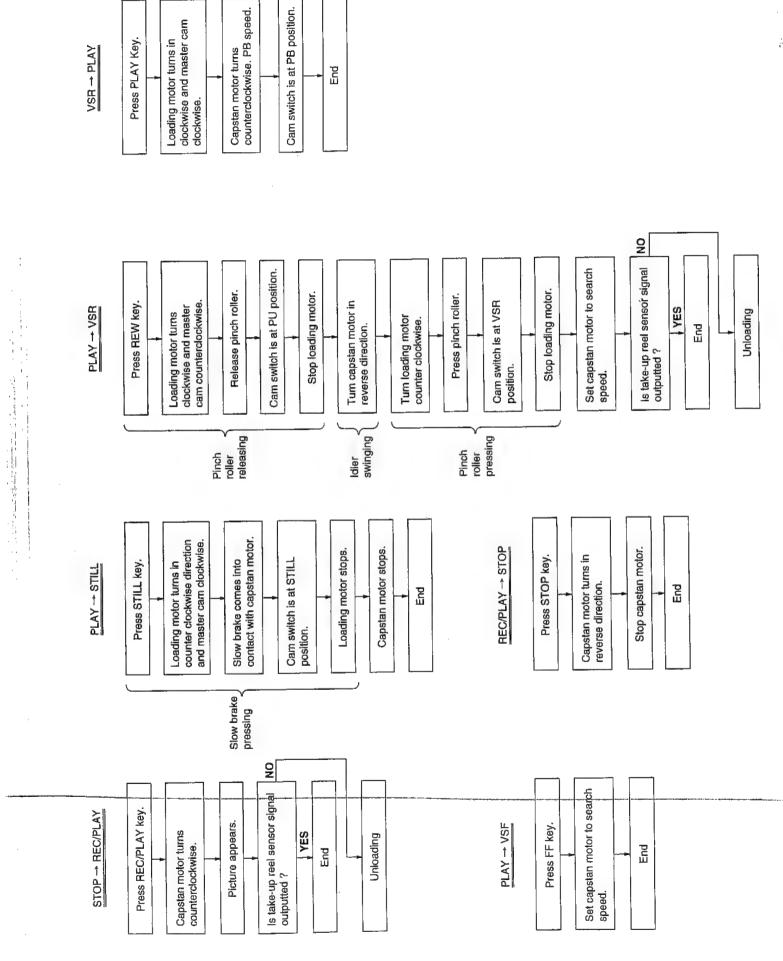

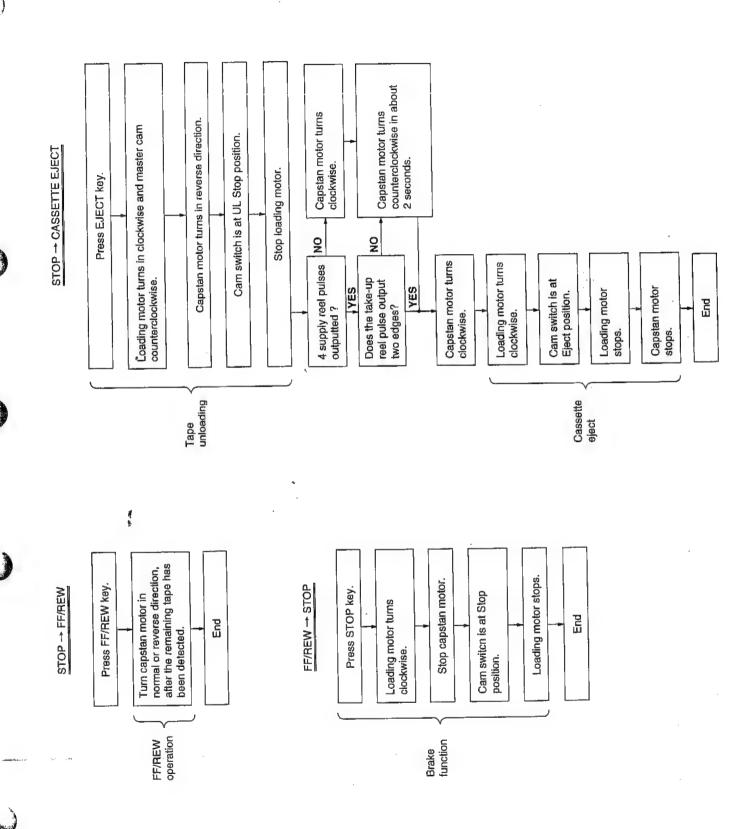


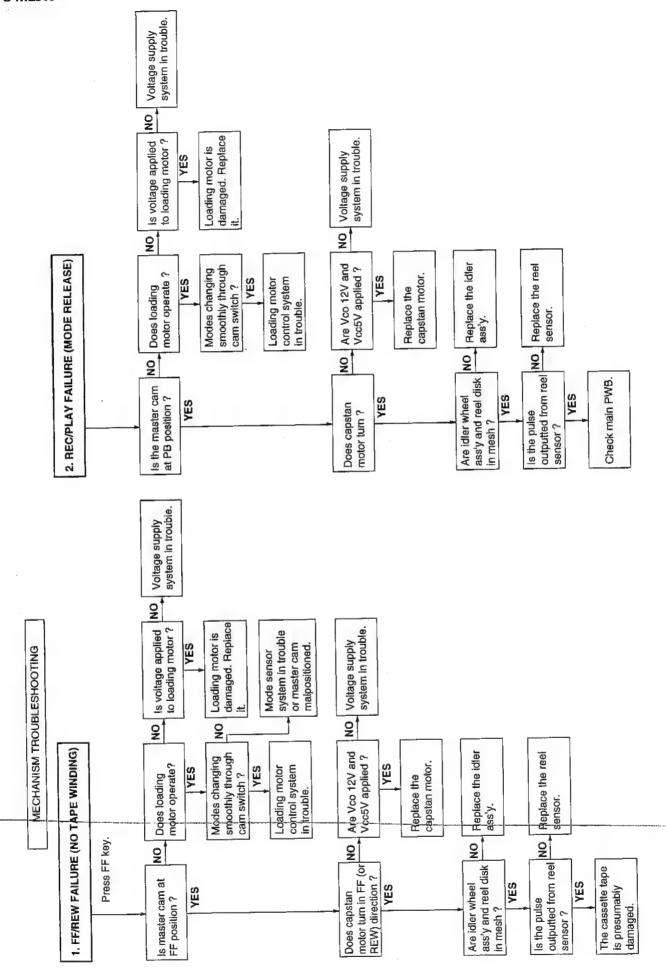


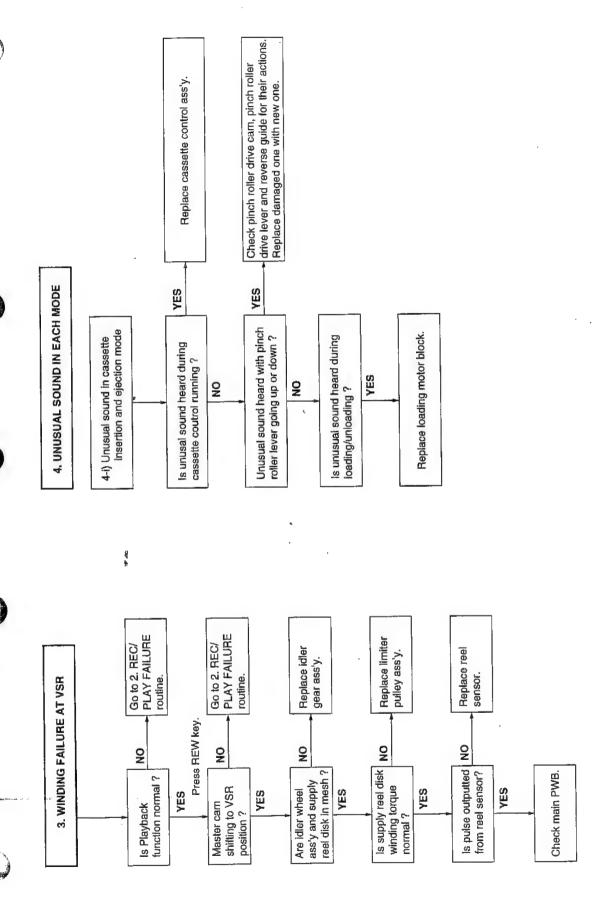


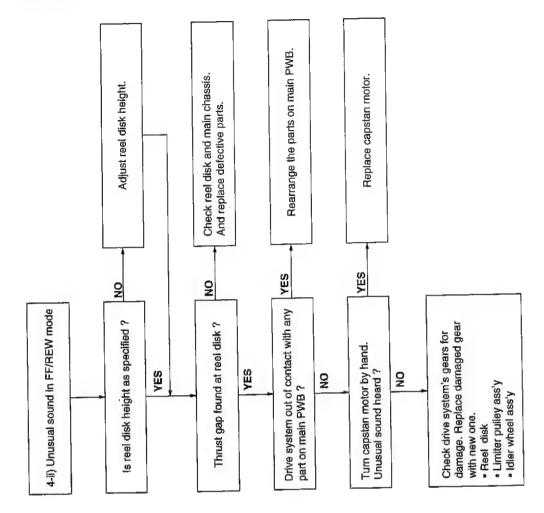



Check primary circuit, Q901, Q902, C913 thru to C915, C910 and D925.

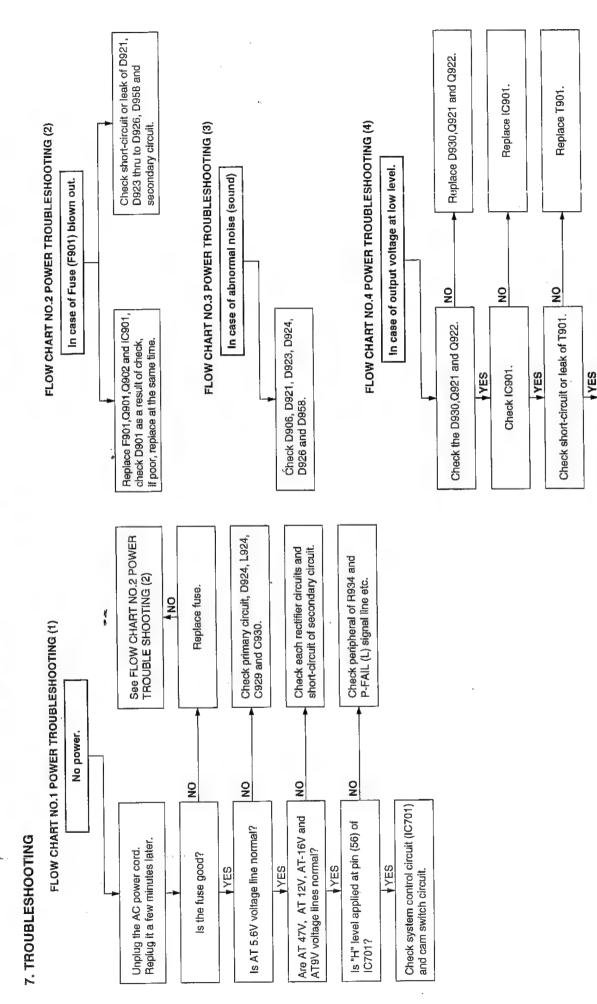

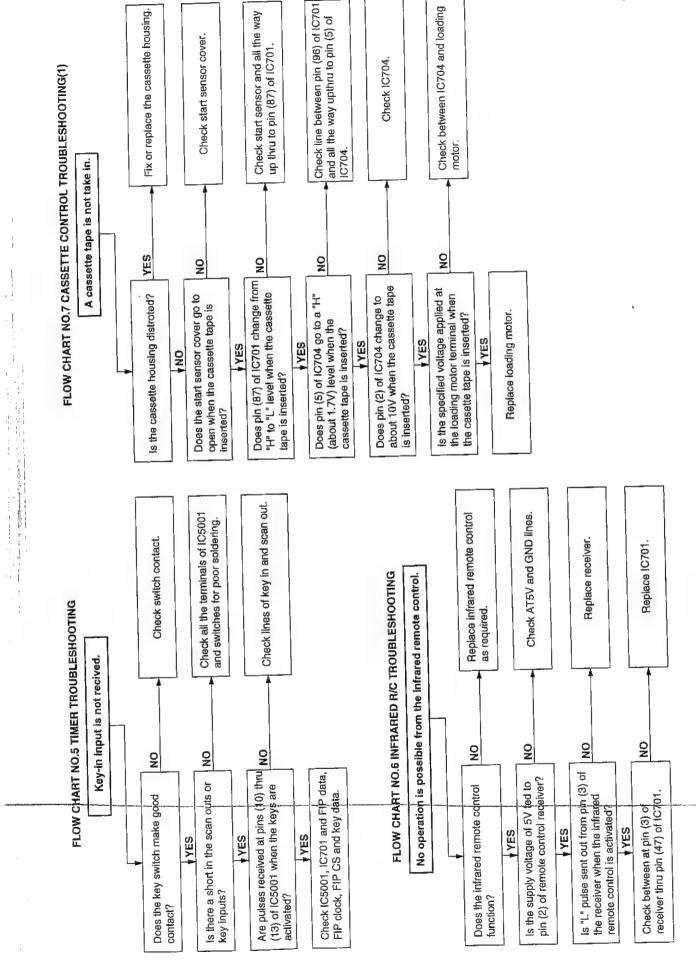

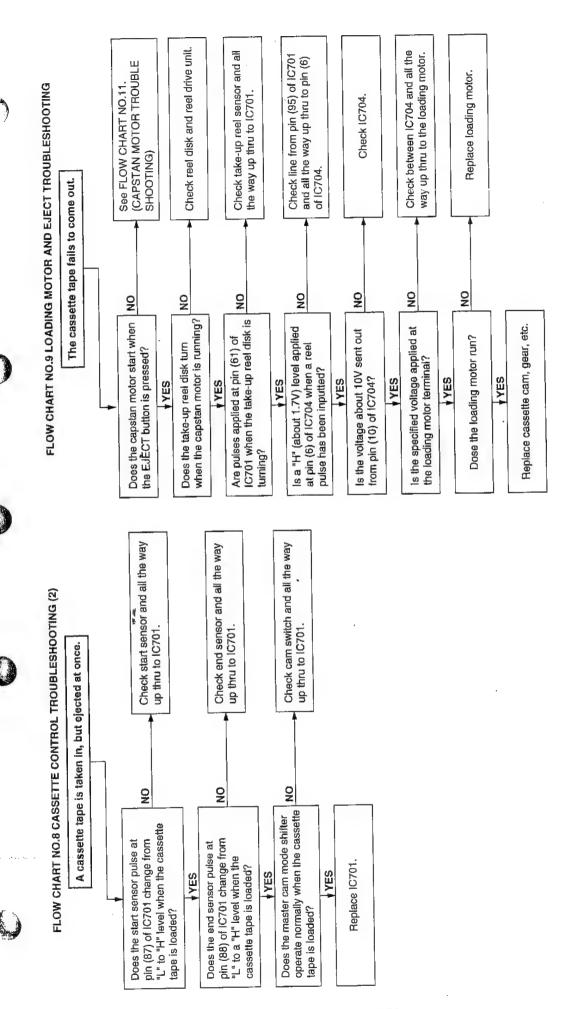

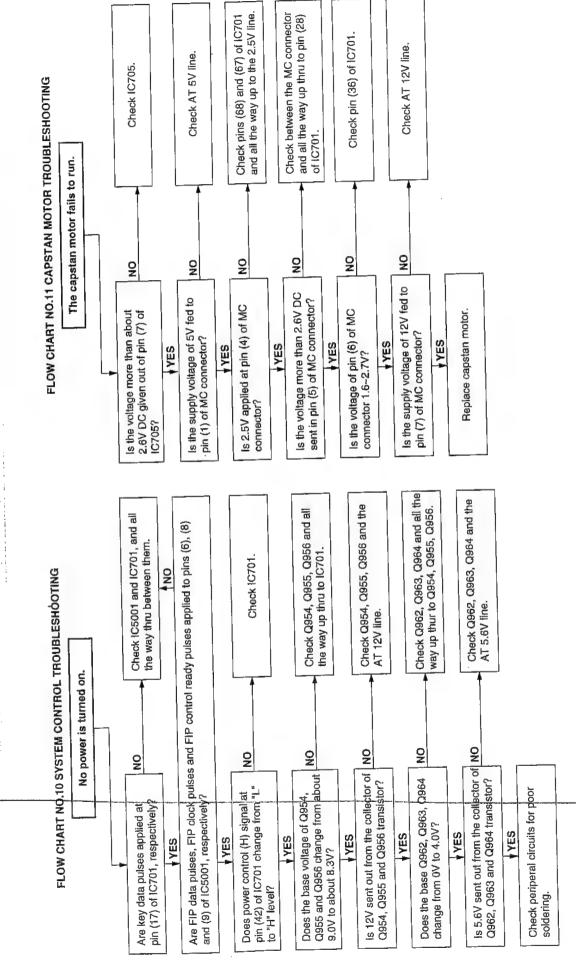

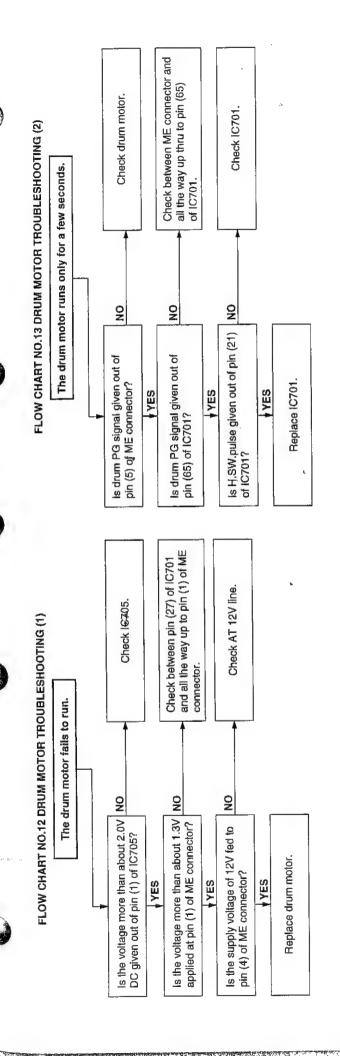

2

Is the drum motor rotating?

YES

YES

]]]]]--4.6V

D-FG

--- 4.6V 9

D-PG.

Is the drum PG signal and drum FG signal present on pins (65) and (66) of IC701,respectively?


Replace IC701


Check drum motor and the between AD and ME harness.


Š


signats present on pins (5) and (3) Are the drum PG and drum FG

of AD connector?

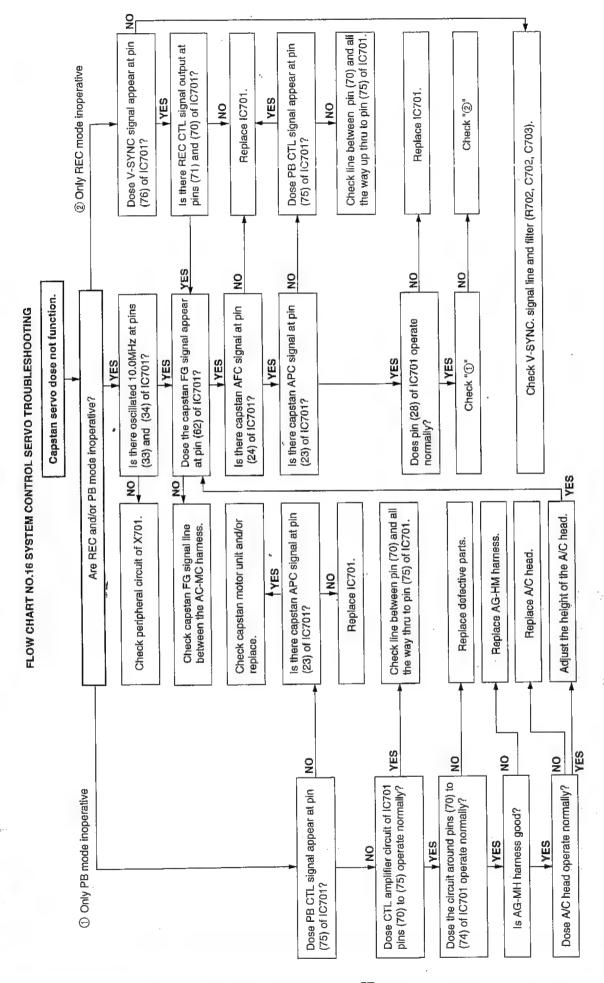

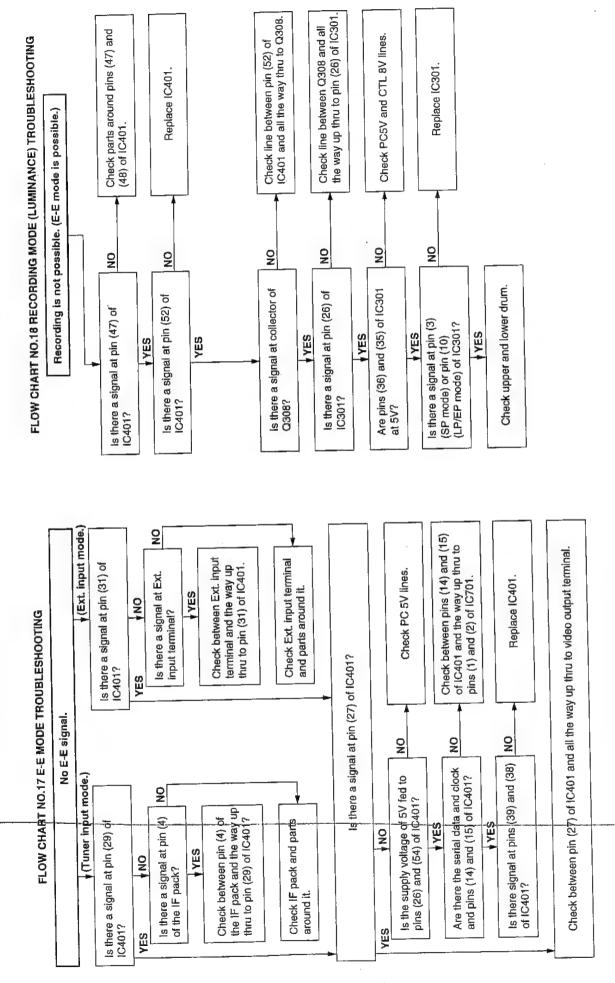

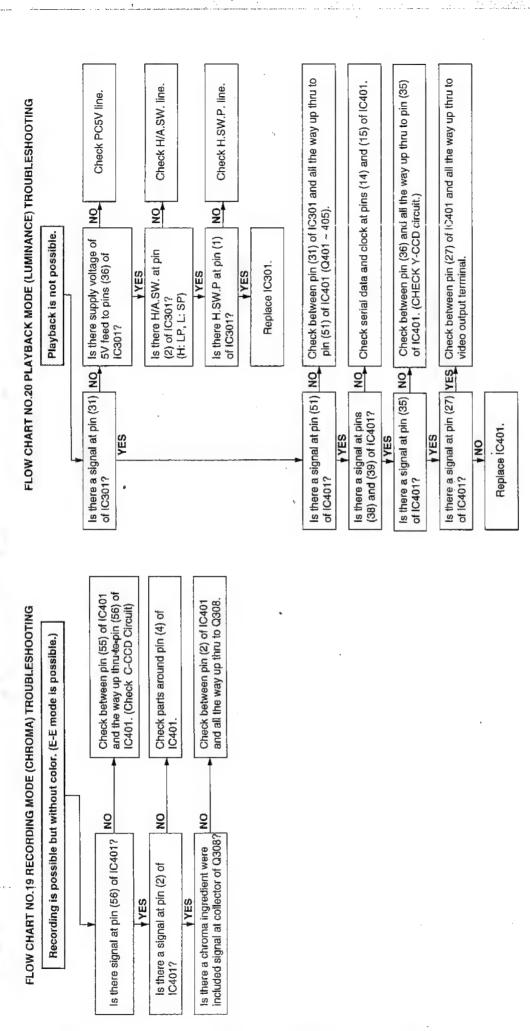


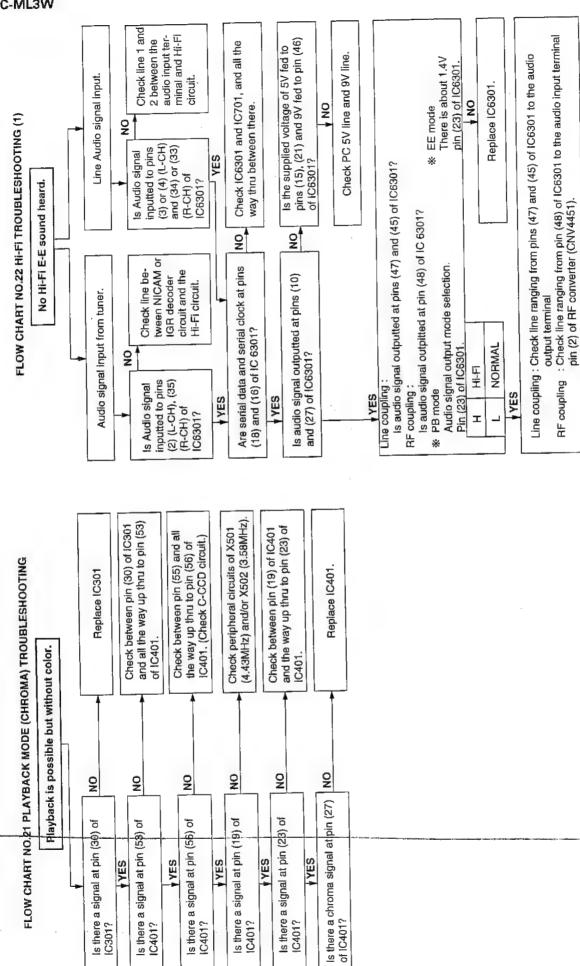



IC401?


10401?


IC401?

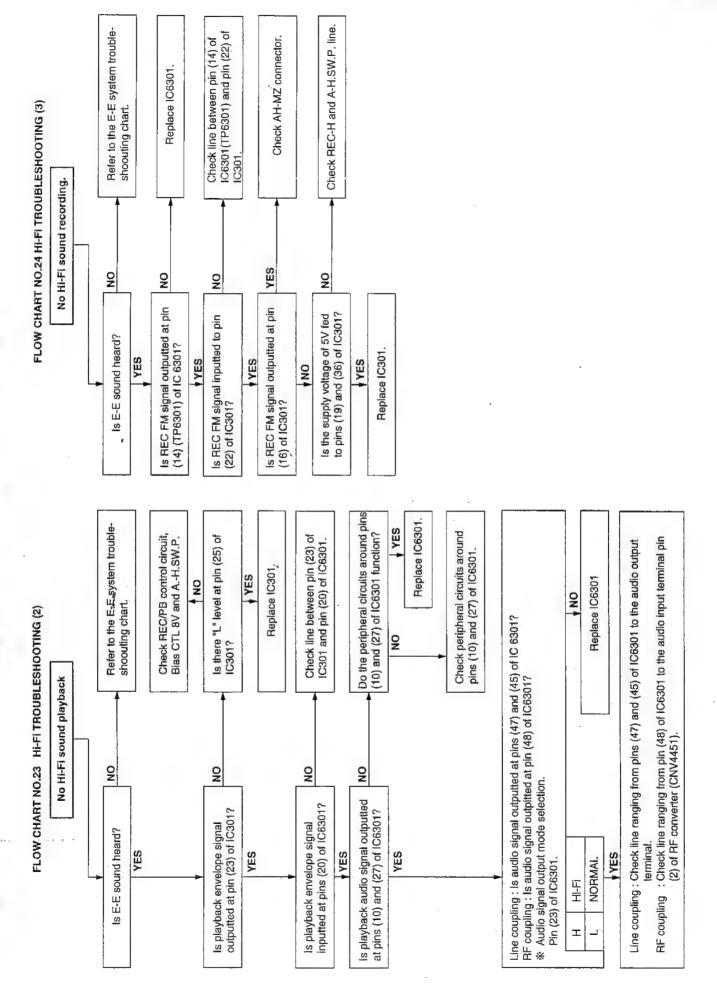

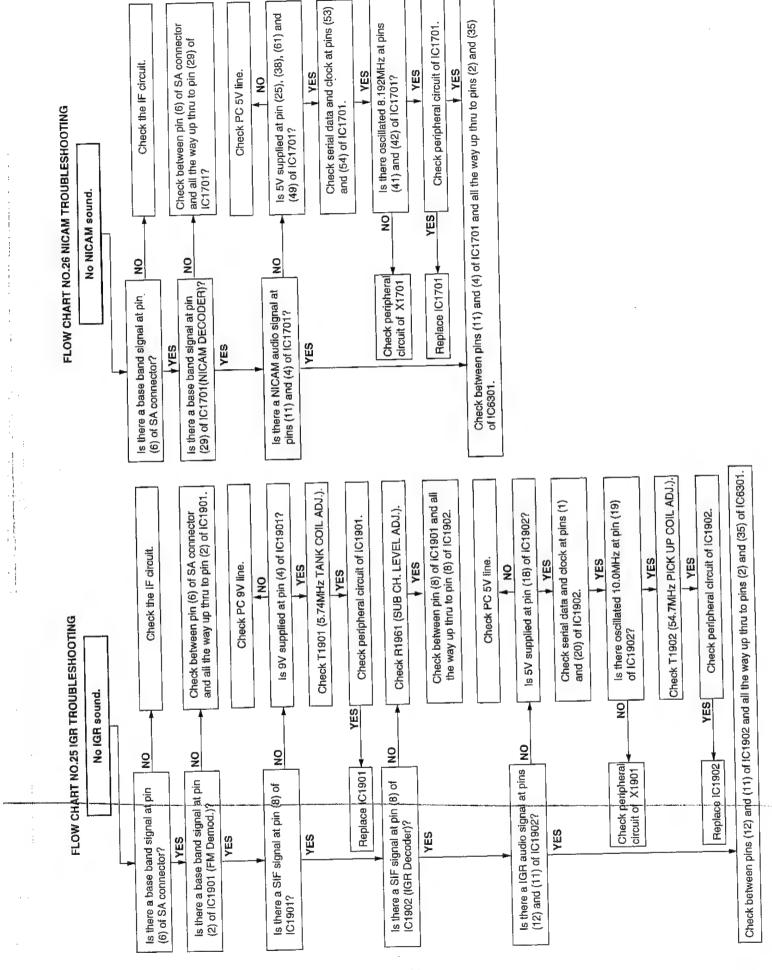


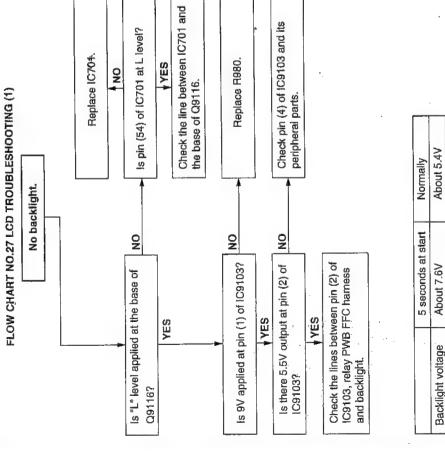

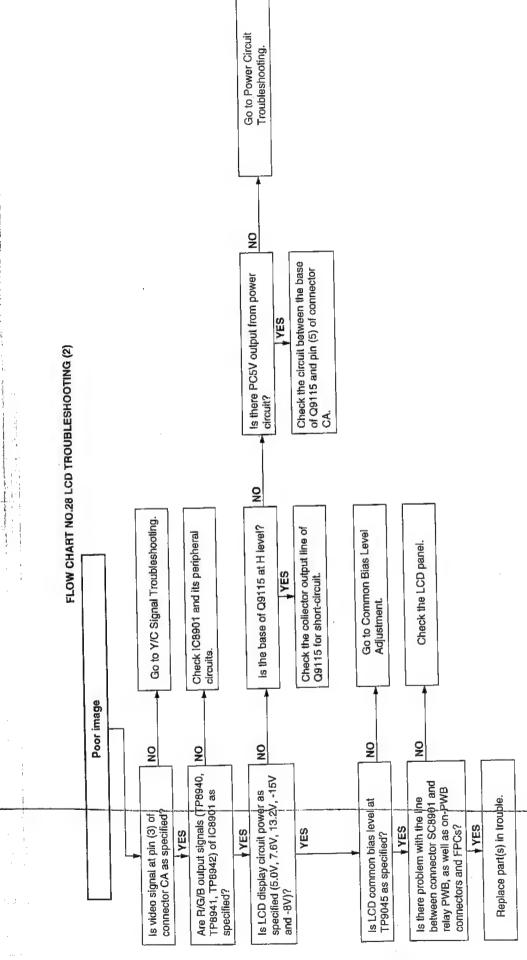

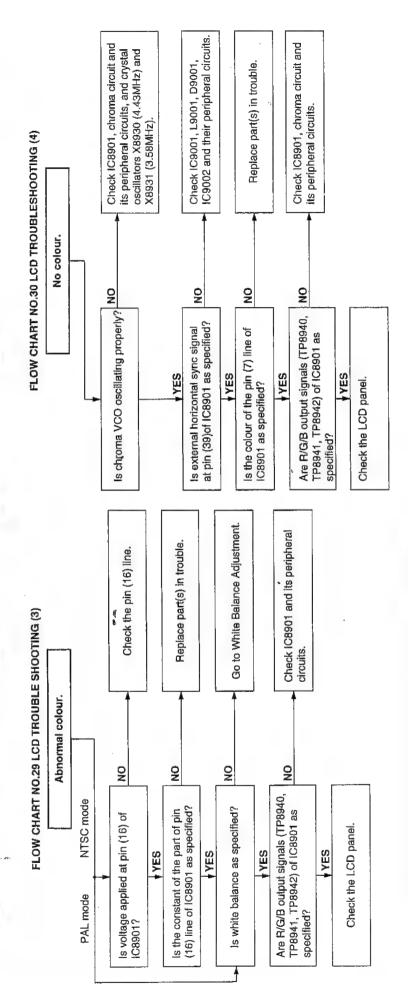

Note: The LCD gives colours in the PAL and NTSC3.58 modes. In the SECAM, NTSC4.43 and NTSC NT-PAL TV modes, however, the unit does not give any colours.

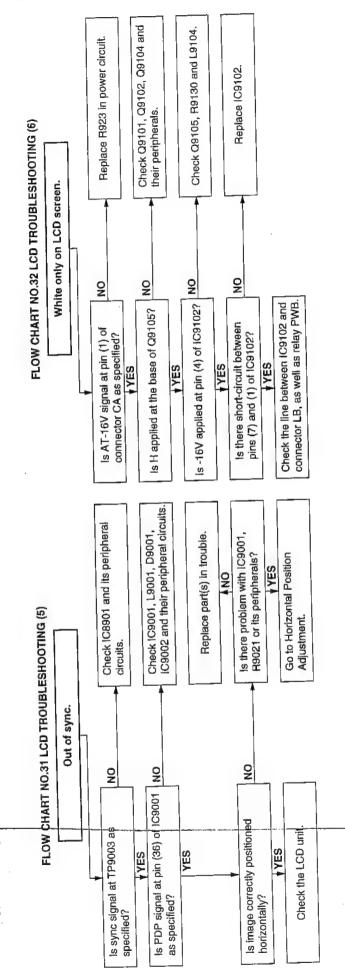

#### REPLACEMENT OF IC703 (E2PROM)

«Servicing precautions»

When the IC703 (EEPROM) has been replaced, it is necessary to program the memory again.

- 1. Set the unit to the power off mode (power on standby).
- Make an instantaneous short-circuit between TP5001 and TP5002 on the operation PWB. Make sure the REC LED and the timer LED lights up. The unit is now in the test mode and Jumper No. (JP-0) appears on the LCD screen.
- 3. Using the channel (+) and (-) buttons, enter the JP-0 thru JP-31 function numbers (displayed on the LCD screen) on the EEPROM map sequentially. Press the DISPLAY button to turn on a selected function, or the CLEAR button to turn it off.
  - \* When the DISPLAY button is pressed, the memory function turns on and the REC LED and the timer LED go out.
  - \* When the CLEAR button is pressed, the memory function turns off and the REC LED and the timer LED light up.
- 4. Go through the JP-1 to JP-31 entries. Make an instantaneous short-circuit between the test points TP5001 and TP5002 again in order to bring the unit back to the normal mode (clock display).

LSVV										
	No.	FUNCTION	ML3/ML3W/NL3	мнз30						
	JP0	COROUR 0	0	0						
	1	COROUR 1	0	0		*****				
	2	VPS PDC	0	0	******					********
	3	SPATIALIZER	0	1						
	4	VCR 0	0	0						
	5	VCR 1	0	0						
т	6	SYSTEM 0	1	1						
j	7	SYSTEM 1	1	1		******				
M E	8	R/C CODE	0	1					**************	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
R	9	P-IN-P	0	0						ov
	10	LCD	1	0	*************************					
	11		0	0						
	12	DUAL SCART	1	1		\$ \$ 100 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0				
	13	FRONT A/V	0	0				**************************************		\$#####################################
	14	LP/EP	1	1						
	15	(0: 00) OEM	4	1						
	16	G-CODE0	1	1						
	17	G-CODE1	0	0						
	18	NICAM 0	1	1		********				
	19	NICAM 1	0	0						ma*******
	20	S. PICTURE	0	0	,		*****			
S Y	21	DECODER	0	0						
S	22	AUTO CLOCK/SORT	0	0						
CO	23	Hi-Fi	1	1						,
N	24	HEAD0	0	1						
	25	HEAD1	1	0						
	26	NTSC SKEW	1	1						
	27	INSTANT REPLA	y 1	1						***********
	28		0	0						
	29		0	0			.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	**********		
	30		0	0				**********		
	31		0	0						

(Note: "1"; REC LED and the TIMER LED go out ,"0"; REC LED and TIMER LED light up)

#### 2. 分解和组装

#### 2-1主要部件的分解

上部壳盖

: 松去四支固定螺丝(1)

底板

: 松去两支固定螺丝(2)

和六支固定螺丝(3)。

前面板

:松去两支固定螺丝(4),

取下高速走带方向突

变旋钮(5)和音量旋钮 (6)。然后松去六支销

卡(7), 拆下一条全平

电缆(8)。

液晶显示板

: 松去三支固定螺丝(A),

打开液晶显示板下面(B)

25mm左右,并向下(C)滑

移15mm左右,取出之。

(安装时按相反步骤进行)

MPX电路印刷电路板 · : 松去四支固定螺丝(9)


支架

和一支固定螺丝(10)。

Hi-Fi电路印刷电路板 : 松去两支固定螺丝(11)

和一支固定螺丝(12)。

(注意:在安装时,必须将接地线的垫圈部位置

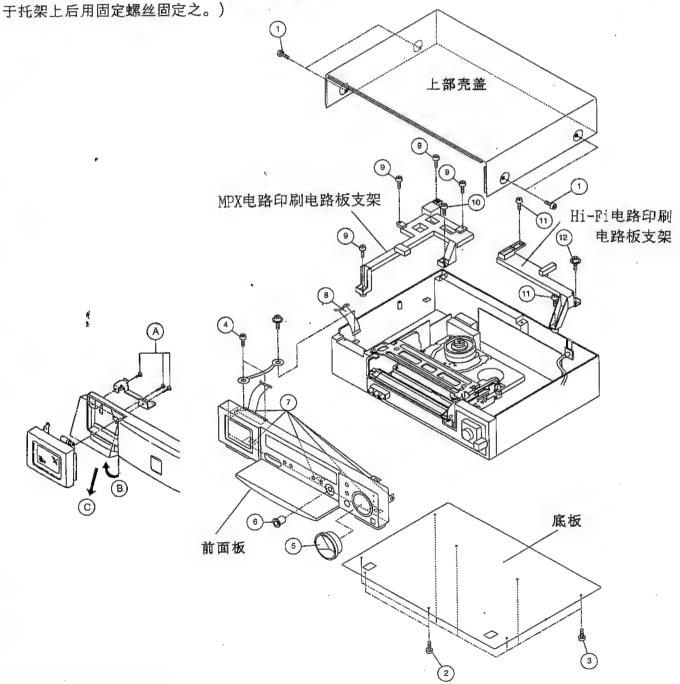

# VC-ML3W

: 松去一支固定螺丝(13), 工作电路印刷电路板

拆下一条全平电缆(14)、 三个接线器(15)及两支

卡销(16)。

LCD电路印刷电路板

: 取出一个接线器(17),

松去一支固定螺丝(18)

和两支卡销(19)。

MPX电路印刷电路板

:取出一个接线器(20)和

两个接线器(21)。

机械装置/主电路印刷 :取出一个接线器(22),

电路板组件

松去一支固定螺丝(23)、

(24)、(25)、(26)及两 支固定螺丝(27),然后 取出接线器(28)。松去 一支固定螺丝(29),拆 下接地线,接着拆开两 支卡销(30)。 将天线接线端组件提起, 从主框架上取出机械装 置/主电路印刷电路板 组件。注意避免碰嗑磁 带盒室机构控制器下部 的录象用片状(REC TIP) 开关。

LCD电路印刷电路板 (28 (15) (26 (24) (19) (23) (18) (14) (30) (30) (19) MPX电路印刷电路板 (22 机械装置/主电路 印刷电路板组件 - 主框架 (16) 16 工作电路印刷电路板

天线接线端盒

: 松去一支固定螺丝(31)。

Hi-Fi电路印刷电路板:拆下一个接线器(32)

机芯底盘/磁带盒室

和四个接线器(33)。

机构控制器组件

: 松去一支固定螺丝(34),

取出屏敝盒。

拆下三条全平电缆和 两个接线器(35)、然

后松去主电路印刷电

路板后面的四支卡销


(36)。

将机芯底盘/磁带盒 室机构控制器提起, 取出主电路印刷电路 板, 然后松去两支固

定螺丝(37)。

: 松去两支固定螺丝(38)。

磁带盒室机构 控制器

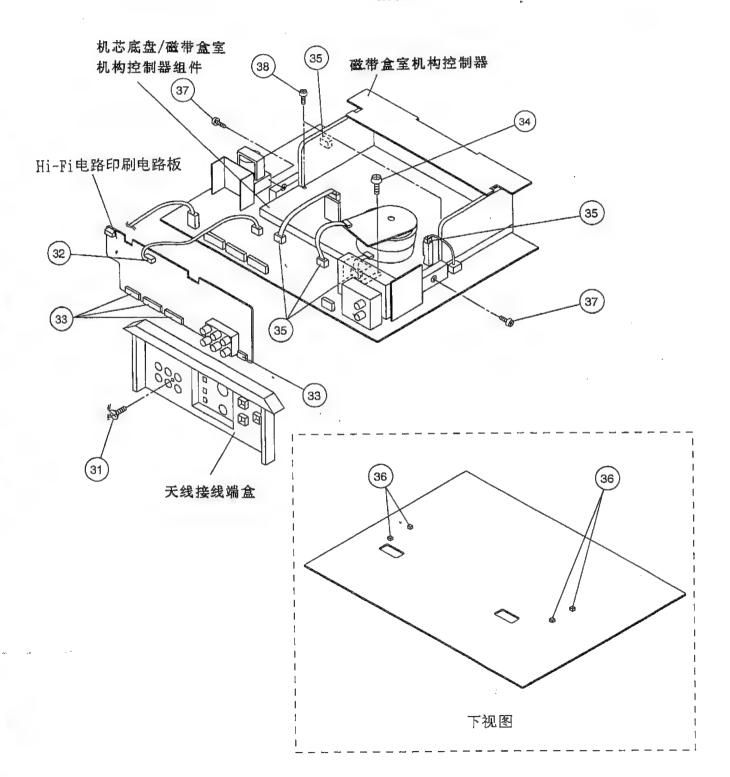

## 2-2盒室控制机构组装的注意事项


#### 盒室控制机构的组装

安置盒室控制器电路于盒室机构之前,先对其自身进行初期设定。初期设定的进行分电路设定和机械设定。

#### 电路设定:

- (1)短接工作电路印刷电路板上的TP插头(TP500\*)的TP5005与TP5006之间。
- (2)插AC引线插头于AC电源插座,以确认盒室机构退回至其初始位置(\*1)。
- (3)拔出AC引线插头,拆去TP5005与TP5006之间的短路。

注意:此方法用于盒室机构已设定好其印刷电路板之场合。

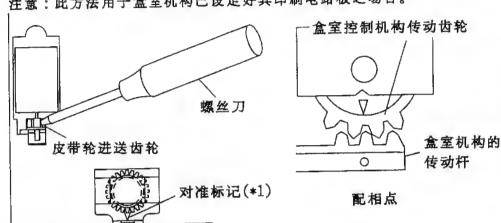

#### 机械设定:

用螺丝刀拨转磁带装挂马 达皮带轮进送齿轮,让盒 室机构退回至其初始位置 (\*1)。确认其动作到位后, 再安置盒室控制器电路于 其机构之上。(此方法用 于盒室机构未设装印刷电 路板之场合。)

#### 盒室机构与印刷电路板的连接


将盒室机构上的两个凸块对准主电路印刷电路板上的两个定位参考记号(圆形为正参考,椭圆形为副参考)。然后垂直放下盒室机构,注意切勿让其机构的边缘部碰伤附近的其他元件。 旋紧固定盒室机构和主电路印刷电路的两支螺丝(一支用于固定盒室机构和前置放大器屏蔽,另一支位于主电路印刷电路板焊线侧的磁带装挂马达近旁)。插接盒室机构和主电路印刷电路板间的扁平型电缆插接器(AG、AD和AH)以及导线插接器(AE和AL)。

#### 应特加注意的元件:


带头感应器、带尾感应器: D710、D709

录象功能触点开关: \$701

盒室机构与主电路印刷电路板间的MC-AC 插接器(板间插接器)也应加以特别注意。

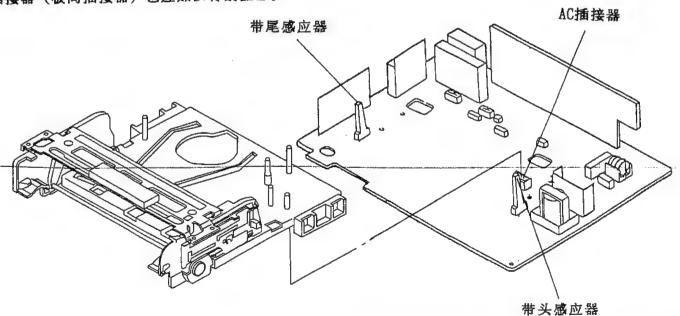


## 3.主要机械部件的配置(俯视)及其功能

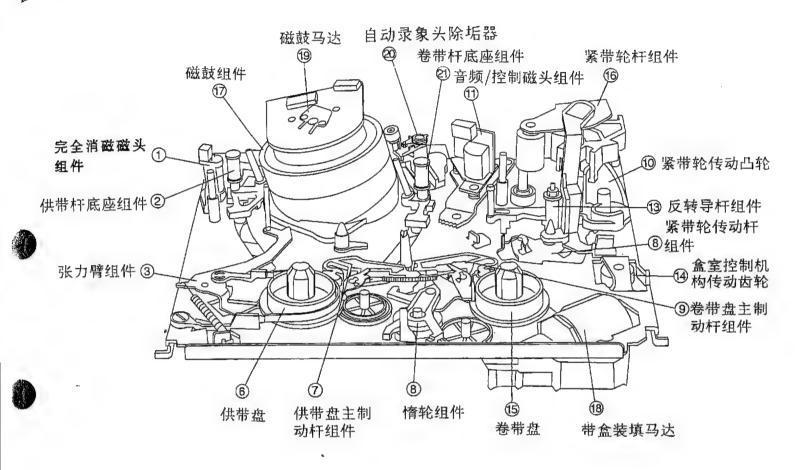

序号	功能	序号	功能
3.	张力臂组件 检测走带时录象磁带的松紧程度,并通过张 力带对供带盘产生制动作用。	13.	反转导杆组件 拉挂磁带,并且通过其高导杆和低导杆控制 其走带高度。
7.	供带盘主制动杆组件 于录象机动作停止时以及录象机处快进或倒 带状态时,对供带盘产生制动作用, 以防止磁带的松弛。	16.	紧带轮杆组件 于走带状态中,压装磁带于主导轴。
9.	卷带盘主制动杆组件 于录象机动作停止时以及录象机处快进或倒 带状态时,对卷带盘产生制动作用,以防止 磁带的松弛。	18.	带盒装填马达 其马达之作用在于为装填状态机构提供带盒 填入及磁带装挂的动力。其动力通过马达皮 带的传动,转为主凸轮及磁带盒室控制机构 的动作。

# 主要机械部件的配置 (仰视) 及其功能

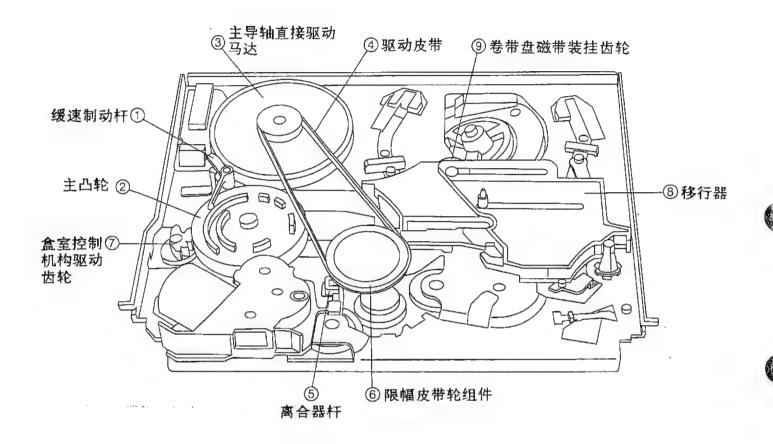

序号	功 能	序号	功能
1.	缓速制动器 于缓速静止状态时,其制动器相触于与主凸轮 连动的主导轴,对其轴产生适当的制动作用。	6.	限幅皮带轮组件 将主导轴直接驱动马达的动力经带盘惰轮传送 给带盘。
3.	<del>主导轴直接驱动马达</del> 提供走带所需动力。其动力的转换由带盘皮带 实现。	8.	移行器 将主凸轮的运动传输至制动器组件、磁带装挂 齿轮、张力臂及离合器杆。
4.	驱动皮带带动限幅皮带轮转动,以驱动磁带的运转。	9.	卷带盘磁带装挂齿轮 通过磁带装挂继动齿轮,移动卷带杆底座及导辊, 并将磁带环绕于磁鼓。另外,其齿轮还有传动力 于供带盘磁带装挂齿轮之作用。

## 4.机械部件的调整、更换及装配

这里我们将为您介绍一些较简单的保养调试方法。 这些方法与需要特殊的仪器和工具的复杂检修(例如, 磁鼓的组装或更换等)相比更为容易简单。 我们相信,下表所列便于使用的工具在您为本录 象机定期保养以维持其原有的工作状态中无疑能起很 大的作用。

## 机械部件调整必需的工具

检查修理时,应准备下列工具才能顺利进行修理工作。

序号	工具名称	零件编号	编码	形状	<b>备</b> 注
1	<b>带盘高度调整工具</b>	JiGRH0002	BR	<i>Q</i>	- 用于检查、调整带盘高度。
2	主平面调整工具	JiGMP0001	BY	6	一一用了位置、胸頭市益問及。
3	音頻/控制磁头傾斜调整 工具	9DAACH-A323U	вх		用于设定音频 / 控制磁头的 傾斜角度。
	转矩測量计(90克)	JiGTG0090	СМ		·
4	转矩測量计(1.2公斤)	JiGTG1200	CN		用于检查、调整供带轮和卷
5	转矩測量计測头	JiGTH0006	AW		带轮的转动力矩。
6	盒匣磁带式转矩測量计	JiGVHT-063	CZ		用于检查、调整卷带轮的转 动力矩以及测量磁带反向张 力。
	张力測量计(300克)	JiGSG0300	BF		分为300克和2.0公斤两量级, 用于张力測量。
7	张力測量计(2.0公斤)	JiGSG2000	BS		
	六角扳手(0.9毫米)	JiGHW0009	AE		用于松弛或紧固特制六角螺栓。
8	六角扳手(1.2毫米)	JiGHW0012	AE		
	六角扳手(1.5毫米)	JiGHW0015	AE	8	
	校正用磁带 (NTSC)	VROATSV	CD		
9	校正用磁带 (PAL)	VROCPSV	СК	O	
	校正用磁带	VROCBFFS	СВ		专用于机器的电路微调。
	校正用磁带 VROCPZJS CA				
11	张力測量计接续器	JiGADP003	вк		用于张力测量计。

序	工具名称	零件编号	编号	形状	备 注
12	专用螺丝刀	JiGDRIVERH-4	АР		用于导辊高度调整。
14	扭转改锥(5公斤)	JiGTD1200	СВ		用于扭转树脂制工具。标准 扭转值为5公斤。
		JIGDRIVER110-7	AS		用于音频/控制磁头高度和 X位置的调整。
15	15 套管改锥	JiGDRIVER110-4	AV		用于更换供带阻抗滚子。
		JIGDRIVER110-55	AR		用于更换反转导杆。
16	反转导杆高度调整工具	JiGRVGH-F18	BU	T	用于反转导杆的高度调整。

## 机械部件的定期保养期间

为保持机械部件的正常工作性能,务必按下表定期进行维护保养。

保养间隔部件名称	每500 小时	每1000 小时	毎1500 小时	海2000 小时	可能出现症状	备 注
		-	<u> </u>			
等辊组件 供带阻抗滚子				0		如发生不正常的旋转或 显著的摇摆, 就需更换 该部件。
		-		<u> </u>		-X OPIT 6
供带阻抗滚子(内侧)					水平噪音线出现, 磁头不时被磁带缠	
供带阻抗滚法兰					绞。	
定位导杆		0				用指定清洁剂擦拭与磁 带接触部份。
斜杆				0		
上部磁鼓组件和下部磁鼓组件	_	00	0	00	信号/噪声比过小,无彩色表现。 装人校正用磁带时,包络线非 平坦。	ملاح من المنا وقع الوقع المنا الأن وحمر المنا التي
完全消磁磁头				0	色彩过淡,图象闪跳。	用指定清洁剂擦拭与磁带接触部份。
音頻/控制磁头		_		0	声音太小或者噪音太大。	
主导轴直接驱动马达				0	磁带不转,色彩不均。	
紧带轮				0	不走带,磁带松弛。	用指定清洁剂擦拭橡胶
带盘皮带				0	不走带, 磁带松弛, 快进或倒带 时走带不正常。	与橡胶接触部份。
张力带组件				0	带盒不填入或不退出。	
装填马达			·	0	市盖个具入以个返山。	
带盘情轮组件				0	不走带。	
带盘皮带轮组件						
离合器齿轮组件				0		
供带/卷带主制动杆				0	磁带松弛。	
AHC (自动录象头除垢器)		0				除垢器滚轮部位的磨耗过 大时,就需更换该部件。 更换时,只要更换录象头 除垢器臂组件即可。

注意:〇:部件更换

□:部件清洗(用不起毛的网布蘸异丙醇擦拭)

△:部件注油(注有标记之部件应该每1000小时用高级轴油点注润滑)

如发现所测数值超过或不及规定范围, 务必对该部件进行清洗或加以更换

## 磁带盒室控制机构的拆 卸及安裝

- ●盒室控制机构的拆卸
- 1.退出磁带盒匣,设机构于出盒状态。
- 2. 从电源插座中拔出电源引线插头。
- 3. 按下述步骤的要求顺序进行拆卸。
  - a)松去紧固磁带盒室控制机构的紧固螺丝①。
  - b)按箭头方向移动磁带盒室控制机构,然后 将其向上拉出。

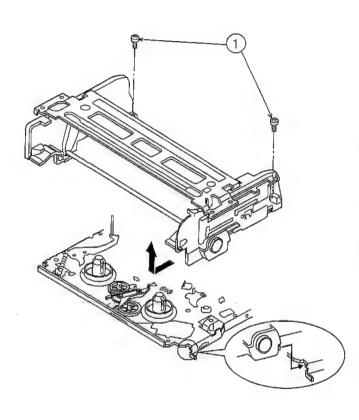


图4-1

## ●盒室控制机构的组装

1.安装盒室控制机构前,短接工作电路印刷电路板上的TP5005与TP5006之间,然后,插入电源引线插头,盒室控制机构驱动齿轮开始转动。机芯底盘窗口处正好看见大齿转时转动停止。按图4-2所示,盒室控制机构驱动齿转的第二齿条与盒室控制机构驱动角板的第三齿条啮合,以便调整机芯底盘上的盒室控制机构位置。

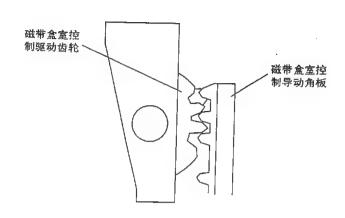


图4-2

- 2.按拆卸步骤的相反顺序进行组装。 注意:
- ①拆卸或组装时,如使用带磁螺丝刀,务请注意不要让其触碰音频/控制(A/C)磁头、完全消磁(FE)磁头以及磁鼓。
- ②拆卸或组装磁带盒室控制机构时,务请谨慎 小心,切勿磕碰其机构,同时注意不要让工 具等碰撞导向销、磁鼓等精密度较高的部件。
- ③组装之后,填装一录象带盒于盒室控制机构中。

## 无盒室控制机构的走带 测试

- 1. 电源接通之前,短接工作电路印刷电路板上的 TP5005与TP5006之间。
- 2.插电源引线插头于电源插座。
- 3. 开启电源开关。
- 4. 用手打开磁带盒匣端口之盖。
- 5. 用胶带张贴之以保持其开盖状态。
- 6. 置其于机芯底盘中的走带机构。
- 7.应将500克的重物牢固地安置于录象带盒上。
- 8.作磁带的走带测试。

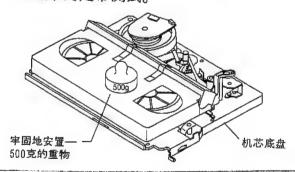


图4-3


注:压其重物不得超过500克。

# 带盘座的更换及其高度的检测和调整

#### ●带盘座的拆卸

- 1. 拆去磁带盒室控制机构。
- 2. 从张力臂上取出张力带。
- 3. 用手松开供带/卷带用辅助制动器,拆去供 带用主制动器和卷带用主制动器。
- 4. 松开带盘座上的卡销, 拆去供带盘座和卷带 盘座。

<出盒或Ⅲ停止状态时>

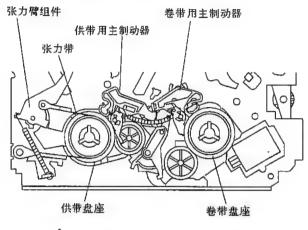


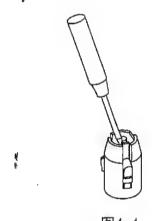


图4-4

## 注意: 拆卸时,应按图中箭头所示方向按压张力带, 以免使锁扣变形。

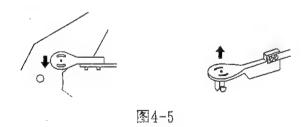

## ●供带盘座的更换

- 1.清擦供带盘座轴,并注油加以润滑。
- 2. 将带盘座的接合部与带盘继动齿轮啮合, 然 后将准备好的新供带盘座插套入其轴。

- 3.环张力带与供带盘座装置安置就位,并在松 开供带用辅助制动器之状态下,将其端插入 张力臂之插孔。
- 4. 检查供带盘座的高度。

#### 注意

- ①安置供带盘座时,务请格外小心,切勿弯折扭曲张力带。
- ②切勿碰伤供带用主制动器与带盘继动齿轮。

#### ●卷带盘座的更换

- 1. 清擦卷带盘座轴,并注油加以润滑。
- 2. 松开卷带用辅助制动器,接着将带盘座的接合部与带盘继动齿轮啮合,然后将准备好的新卷带盘座插套入其轴。
- 3.检查卷带盘座的高度后,安置卷带用主制动器就位。

#### 注意:


务请小心谨慎, 切勿碰伤卷带用主制动器。

\*带盘座更换之后,须检查调试视频搜索倒带, 时的反向张力(见第82页),以及其制动力、 矩(见第84页)。

## ●带盘高度的检测和调整

#### 注意:

将主平面板设置于机芯底盘,注意切勿磕碰磁鼓(见图4-6所示)。

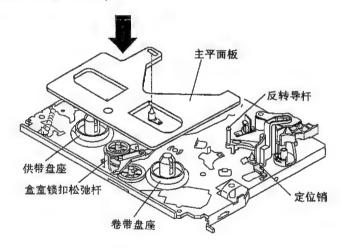

用手指松开反转导杆,使主平面板设置。




图 4-6

# VC-ML3W

●检查带盘座是否低于图示A位置而高于B位置。 如果所测高度不在AB两位置的要求范围内, 则通过更换带盘座下面的滑动垫圈对其高度 进行调整。

#### 注意:

带盘座只要一经更换, 就必须对其进行高度的 检测和调整。

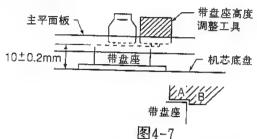

## 快进状态时卷带转矩的 检测和调整

- ●拆去磁带盒室控制机构。
- ●电源接通之前,短接工作电路印刷电路板上的 TP5005与 TP5006之间。

### ●转矩测量计的设置

- 1.设转矩测量计的刻度于0,然后将其转矩测量计安置于卷带盘座上。
- 2.触按倒带(REW)键,置盒室控制机构于倒带 状态。
- 3. 缓慢地旋转卷带盘座, 置移行器于倒带状态。

## ●倒带状态时的转矩检测

- 1.用手缓慢地沿卷带方向旋转转矩测量计(2~3秒/转)。
- 2.检查所测卷带转矩值是否大于69mN·m (700gf·cm)。

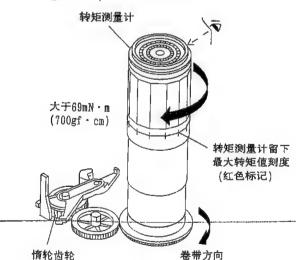


图4-8

### ●快进状态时的转矩调整

 如果所測卷带转矩超出或不及规定值范围, 则需用清洗液清擦主导轴直接驱动马达皮带 轮、带盘皮带及其皮带轮。然后,再测量之。 2. 如果清擦后所测卷带转矩仍不符合规定要求,则需更换传动皮带。

#### 注意:

- 1.设置及计测时,须用手向下按住转矩测量计, 以免卷带盘的旋转甩飞安置于其上的转矩测 量计。
- 2.作卷带转矩检测时,不宜让带盘座锁扣时间过长。

## 倒带状态时卷带转矩的 检测和调整

- 拆去磁带盒室控制机构。
- ●电源接通之前,短接工作电路印刷电路板上的 TP5005与TP5006之间。

#### ●转矩测量计的设置

- 1. 设转矩测量计的刻度于(), 然后将其转矩测量计安置于卷带盘座上。
- 2.触按倒带(REW)键,置盒室控制机构于倒带 状态。
- 3.缓慢地旋转卷带盘座,置移行器于倒带状态。

### ●倒带状态时的转矩检测

- 1.用手缓慢地沿卷带方向旋转转矩测量计 (2~3秒/转)。
- 2.检查所测卷带转矩值是否大于69mN·m (700gf·cm)。

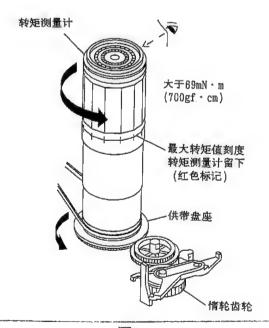


图4-9

## ●倒带状态时的转矩调整

1.如果所测卷带转矩超出或不及规定值范围, 则需用清洗液清擦主导轴直接驱动马达皮带 轮、传动皮带及限幅皮带轮。然后,再测量 之。 2. 如果清擦后所测卷带转矩仍不符合规定要求,则需更换传动皮带。

#### 注意:

- 1. 设置及计测时,须用手向下按住转矩测量计, 以免卷带盘的旋转甩飞安置于其上的转矩测 量计。
- 2. 作卷带转矩检测时, 不宜让带盘座锁扣时间 过长。

## 再现状态时卷带转矩的 检测和调整

- 1. 拆去磁带盒室控制机构。
- 2. 电源接通之前, 短接工作电路印刷电路板上的 TP5005与TP5006之间。
- 3. 用手揭开盒匣磁带式转矩测量计端口盒盖, 用两张胶带张贴之以保持其开盖状态。
- 4. 装填盒匣磁带式转矩测量计于录象机中。

规定值为LP 10.5±3.8 mN·m (107±39 gf·cm)

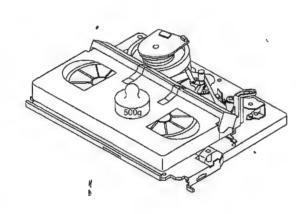


图4-10

- 5.加一500克的重物于盒匣磁带式转矩测量计上。
- 6. 触按录象(REC)键,设录象机于录象状态。
- ●再现状态时卷带转矩的检测
- 1. 检查所测转矩值是否于10.5 ± 3.8 mN·m (107 ± 39 gf·cm)。
- 2.由于带盘旋转的不均匀性,所测转矩值有可能产生波动现象。这时应取波动值的中心值为其测定值。
- 3. 触按录象(REC)键,置录象机为LP录象状态, 检查这时的卷带转矩是否满足上述要求。
- ●再现状态时卷带转矩的调整 如果所测卷带转矩超出或不及其规定值范围, 则需更换限幅皮带轮组件。

注:压一重物于测量计之上,以防其翘起。

## 视频搜索倒带状态时卷带 转矩的检测和调整

- ●拆去磁带盒室控制机构。
- ●电源接通之前,短接工作电路印刷电路板上的 TP5005与TP5006之间。

#### ●设置

- 1.触按再现(PLAY)键,设录象机于再现状态。
- 2. 触按倒带(REW)键,设录象机于视频搜索倒带 状态。
- ●视频搜索倒带状态时的转矩检测
- 1.置转矩测量计于供带盘座之上,逆时针方向缓慢地旋转之(1~2秒/转),检查所测转矩值是否于14.0±3.9mN·m(144±40gf·cm)的规定范围内。



图4-11

#### ●视频搜索倒带状态时的转矩调整 如果所测视频搜索倒带状态时的卷带转矩超出 或不及其规定值范围 测零再换限幅皮带轮组

或不及其规定值范围,则需更换限幅皮带轮组件。

#### 注意

应将转矩测量计牢固地安置于供带盘座之上,否则,所测值并非真实。

#### 注意:

由于限幅皮带轮旋转的不均匀性,所测转矩值 有可能产生波动现象。这时应取波动值的中心 值为其测定值。

## 视频搜索倒带状态时的 反向张力的检测

- ●拆去磁带盒室控制机构
- ●电源接通之前,短接工作电路印刷电路板上的 TP5005与TP5006之间。

#### ●检测反向张力

- 1.触按再现(PLAY)键,设录象机于再现状态。
- 2.触按倒带(REW)键,设录象机于视频搜索倒 带状态。
- 3. 置转矩测量计于卷带盘座之上, 逆时针方向 缓慢地旋转之(2~3秒/转),检查所测转矩 值是否于2.7±1mN·m(28±10gf·cm)的规 定范围内。

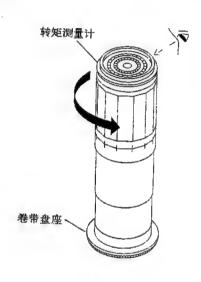


图4-12

#### 注意:


- 1.应将转矩测量计牢固地安置于卷带盘座之上, 否则,所测值并非真实。
- 2.在加负荷于带盘座之状态下,转矩测量计所 示的数值是真实的转矩测量值。

# 紧带轮压力的检测

- ●拆去磁带盒室控制机构。
- ●电源接通之前,短接工作电路印刷电路板上的 TP5005与TP5006之间。

#### ●检测

触按再现(PLAY)键,设录象机于再现状态。

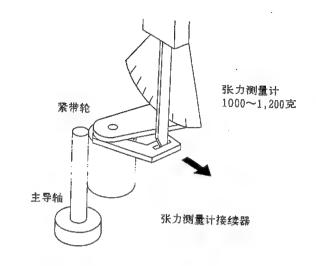

#### 图4-13

- 1. 拨移紧带轮, 使之与主导轴分离。
- 2. 通过套挂张力测量计接续器将张力测量计设 置于紧带轮轴之上。
- 3.慢慢放松压力,让紧带轮渐渐靠拢主导轴。 在紧带轮与主导轴相触的瞬间,测量计上的 读数就是所要计测的压力值。
- 4.检查所测压力值是否在900~1,200克的规定 范围内。

## 张力杆位置的检测和 调整

- ●拆去磁带盒室控制机构。
- ●电源接通之前,短接工作电路印刷电路板上的 TP5005与TP5006之间。

#### ●设置

- 1.揭开录象带(E-180)盒盖,用两片胶带将开
- 2. 装入开盖的录象带带盒于盒室机构。
- 3. 在录象带带盒上加500克的重物。
- 4.用E-180录象带的带头部份进行检调。

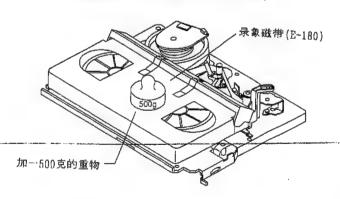


图4-14

1.安置好录象带带盒,触按录象(REC)键,让 挂带机构挂好磁带后,检查张力杆的位置。

- 2.通过观察检查张力杆中心是否位于与供带侧导轴左侧离开1.3mm之位置。其重调方法如下。
- ③张力杆调整器的调整范围
- ④张力杆调整凸轮的调整范围



图4-15

## ①张力杆左端偏移至虚线的左侧时:

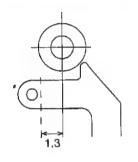


图4-16

插一字口螺丝刀于张力杆调整器,顺时针旋转之。

## ②张力杆左端偏移至虚线的右侧时:

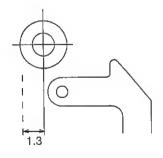


图4-17

插一字口螺丝刀于张力杆调整器,逆时针旋转之。

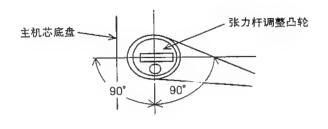


图4-18

调整张力杆调整器,使凸轮上的圆型标志处于 左右90°范围内。

## 录象/再现状态时反向 张力的检测和调整

- ●拆去磁带盒室控制机构。
- ●电源接通之前,短接工作电路印刷电路板上的 TP5005与TP5006之间。

#### ●设置

- 1.揭开录象带转矩计盒盖,用两片胶带将开盖固定。
- 2. 装入开盖的录象带转矩计于盒室机构。
- 3. 在转矩计盒盖上加500克重物。

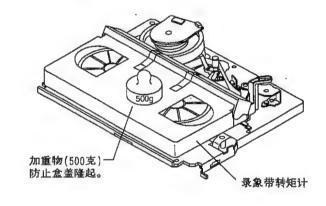


图4-19

#### ●反向张力的检测

- 1.触按录象(REC)键,设录象机于录象状态。
- 2. 检查所测反向张力值是否在31~38g·cm的规 定范围内。

#### 注意:

- 1. 确认走带时,不发生磁带高出定位导杆的现象。
- 2. 确认磁带自始至终不发生松弛或损伤现象。

# VC-ML3W

- ●反向张力的调整
- 1.录象带转矩计所测读数小于规定值时,向A 方向移动张力弹簧。
- 2.录象带转矩计所测读数大于规定值时,向B 方向移动张力弹簧。


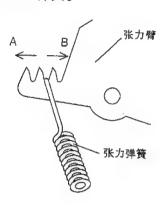


图4-20

## 制劲力矩的检测

●供带侧制动力矩的检测

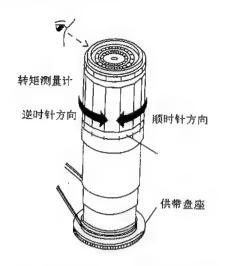


逆时针方向:5.9~3.8mN.m(60~100gf.cm) 順时针方向:10~32mN.m(100~330gf.cm)

#### 图4-21

- ●拆去磁带盒室控制机构。
- ●电源接通之前,短接工作电路印刷电路板上的 TP5005与TP5006之间。
- ●设定方法
- 1.设转矩测量计的刻度于0,置其于供带盘座之上。
- 2.转换快进(FF)状态为停止(STOP)状态。
- 3. 拔出交流电源插头。
- ●检测方法
- 1.用手沿供带制动的顺时针方向和逆时针方向旋转转矩测量计(约每2秒旋转一次),使转矩测量计的刻度盘与供带盘以同样的转速旋转。然后,检查所测值是否满足其规定要求:顺时针方向制动力矩=10~32mN.m(100~330gf.cm);逆时针方向制动力矩=5.9~9.8mN.m(60~100gf.cm)。另外,两者所测值还得满足顺时针方向制动力矩至少等于逆时针方向制动力矩的两倍之规定要求。

#### ●卷带侧制动力矩的检测

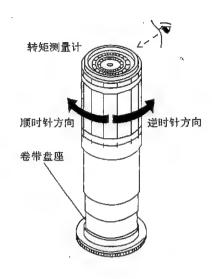

逆时针方向:9.8~34mN.m(100~340f.cm) 順时针方向:4~8.3mN.m(40~85gf.cm)

图4-22

- ●拆去磁带盒室控制机构。
- 电源接通之前,短接工作电路印刷电路板上的 TP5005与TP5006之间。

## ●设定方法

- 1.设转矩测量计的刻度于0,置其于卷带盘座之
- 2.转换快进(FF)状态为停止(STOP)状态。
- 3. 拔出交流电源插头。

#### ●检测方法 #

1.用手沿卷带制动的顺时针方向和逆时针方向旋转转矩测量计(约每2秒旋转一次),使转矩测量计的刻度盘与卷带盘以同样的转速旋转。然后,检查所测值是否满足其规定要求:逆时针方向制动力矩=9.8~34nN.m(100~340gf.cm);顺时针方向制动力矩=4~8.3 mN.m(40~85gf.cm)。另外,两者所测值还得满足逆时针方向制动力矩至少等于顺时针方向制动力矩的两倍之规定要求。

#### ●供带侧以及卷带侧制动力矩的调整

- 1. 如果供带侧或卷带侧制动力矩所测值不符合规定要求,则应清擦供带盘座或卷带盘座制动杆及其垫圈,然后重新检测之。
- 2. 如果清擦后重测制动力矩还不符合规定要求,则需更换主制动器组件。

#### 注意:

主制动器一经更换,则需进行高度的检测与调整(见第79页所述),以及制动力矩的检测。

## 音频/控制(A/C)磁头的 更换

- 1. 拆去磁带盒室控制机构。
- 2. 设录象机于磁带卸挂状态后,拔去其电源引线插头。

#### 2

- ●A/C磁头的拆卸
- 1.松开螺丝 A 、 B 、 O 、 ◆ D 及 ◆ 。
- 2. 松焊A/C磁头印刷电路板与A/C磁头的连线。 注意:
- 1. 拆裝更换后,必须进行磁带走行检查调整 (见第66页所述)。拆裝过程中,无论是什么情况,都不得用手或他物触碰A/C磁头。

2. 松去 A、 B、 © 螺丝时,注意防止其弹 簧弹出遗失。

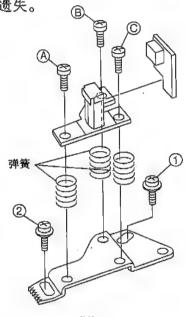
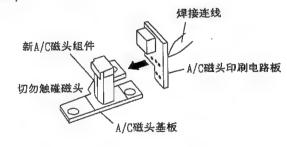


图4-23

- ●A/C磁头的更换
- 1.焊接拆下的A/C磁头印刷电路板与更换用新A/C磁头的连线。
- 2.用滑动式卡钳,使A/C磁头臂(底面)与A/C磁 头基板(螺丝位置)间的高度调至10.3mm(3处) (见下图)




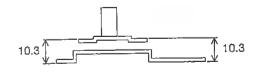


图4-24

# AC-WF3M

3. 将A/C磁头臂齿轮左侧的标志与机芯底盘上的标志对齐,暂时旋紧螺丝①和②,直至A/C磁头臂顺利旋转为止。

(注:暂时旋紧时的力矩以0.2N.m为宜)

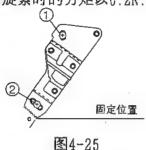


注意:

如果螺丝①与②的夹紧力矩不一致,正式旋紧时可能难以调整A/C磁头的高度。

## [A/C磁头的高度粗调]

#### ●设置

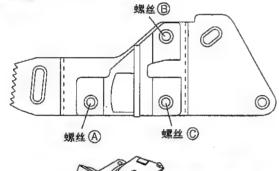

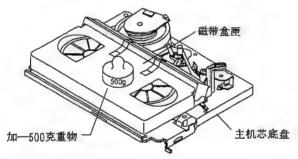


图4-26

- ①装入录象带于机芯底盘中。
- ②触按再现(PLAY)键,设录象机于再现状态。
- ③旋转螺丝 ② ,以对A/C磁头高度进行粗调, 使磁带达至下面所示位置为宜。

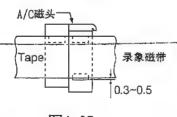


图4-27

#### ●调整

调节螺丝 ② ,使控制磁头底边缘低于磁带底边缘0.3~0.5mm为宜。

## 反转导杆的高度调整

#### [反转导杆的高度调整]

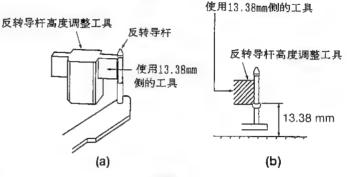
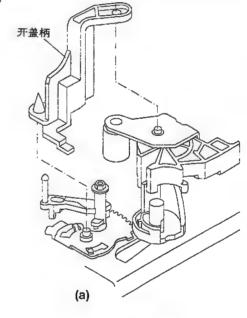


图4-28

- ①拆下开盖柄。 (图4-29(a))
- ②先于录象带装挂状态下调整13.38mm端,然 后再沿逆时针方向旋转反转导杆的高度调整 螺母至36°。
- ③录象带装挂动作结束后,设录象机于再现状态,检查靠近反转导杆处的录象带是否皱折。
- ④用一般市场上贩卖的套管改锥旋转高度调整 螺母。



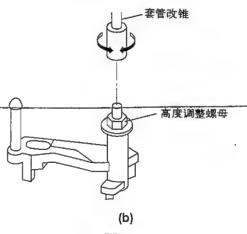


图4-29

## 走带情况的调整

- 1 拆去磁带盒室控制机构。
- 2. 电源接通之前,短接工作电路印刷电路板上的 TP5005与TP5006之间。
- 3.检测和调整张力杆的位置。(见第82页)
- 4. 检测和调整视频搜索状态时的反向张力。 (见第82页)
- 5.设定A/C磁头于规定位置。(见第85页)
- 6. 按下述步骤对走带情况进行粗调。
  - a)连接示波器于再现色彩包络线输出(TP501) 的测试点。设示波器同步于外接。这样, 再现色彩信号便会被磁头转换脉冲(TP502) 所触发。
  - b) 先松开导辊底部的固定螺丝,然后再用 六角扳手(JIGHW0009)调节该固定螺 丝,直至能轻松圆滑地旋动导辊之程度 为止。(切勿把固定螺丝过松紧,否则 会造成导辊不稳定状态。)(见图4-30)

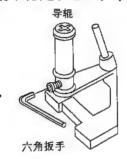


图4-30

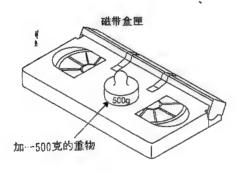


图4-31

c)将校正用磁带 (单象管图案) 盒匣安置于 带盘座上, 然后, 将录象机设定于再现状 态。

(施加—500克的重物于带盒之上,以防走带时带盒的翘起)。

d)于X位置调整状态(见电路调整有关章节 所述),触按跟踪键(+)和(-),调输出 包络线波形从最大至最小,以及从最小至 最大。同时观察其波形是否达至平坦状态。

- e)如通过上述调节,其输出包络线波形无法 达至平坦状态,则需用导辊调整用螺丝刀, 对供带侧和卷带侧的导辊进行粗调,直至 输出包络线波形达至平坦。
- f)旋转螺丝 (A) ,以防由定位导杆法兰在磁带 上起皱。

将磁带转回至原始位置后,检查在定位导 杆法兰部位有无发生起皱现象。

(1)无起皱时

顺时针方向旋转螺丝 (A) ,以在法兰部位产生起皱现象,然后松开螺丝 (A) ,直至完全消除起皱现象为止。

(2)起皱时

逆时针方向旋转螺丝 A ,直至完全消除起皱现象为止。

参考:

顺时针方向旋转螺丝 @ 时,在下部法 兰上会产生起皱现象。



图4-32

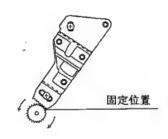


图4-33

#### 注意

- 1. 将跟踪调节控制钮设定于其中间位置,然后 调整 X 位置,使再现色彩包络线波形达至最大、以便进行走带情况的粗调。
- 2.粗调过程中,应特别注意触电等之危险。

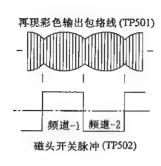


图4-34

- 7.A/C磁头高度和方位角的调整
  - a)连接示波器于音频输出端。
  - b)装入预先录有1kHz线性音频信号的校正用磁带,调节螺丝 B 和 ©,使音频输出达至最大。然后,调节螺丝 A,以消除定位导杆法兰上产生的起皱现象。(见第87页-6-f)。按螺丝 B、 © 及 A 之顺序重复进行该调整,使音频输出达至最大。
  - c)装入预先录有6kHz线性音频信号的校正用磁带,最后,调节螺丝®,使音频输出达至最大。
- 8. 走带系统以及X位置的调整
  - a)连接示波器于测试点TP501,作再现彩色包络线输出。设示波器同步于外接。这样, 再现彩色信号将被磁头开关脉冲 (TP502) 所触发。

- b)再现走带检查用校正磁带。
- c)触按跟踪键的(+)或(-),使输出包络线波形从最大转至最小,然后又从最小转为最大。用高度调整用螺丝刀调整供带盘侧和卷带盘侧导辊的高度,使输出包络线尽可能达至平坦。
- d)如果走行中的磁带低于或高于螺旋扫描导 前,再现彩色输出便会呈现图4-35所示波 形。
- e)按第87页步骤6的项目e)要求,调节输出 包络线的最大平坦度。
- f)触按跟踪键的(+)或(-),检查包络线波形的平坦度反应。
- g)于磁带卸挂状态,用导辊设定螺丝紧固导 辊。
- h)再现走带检查用校正磁带,检查输出包络 线波形是否发生变化。
- 9.A/C磁头X位置的调整
  - a)在X位置的调整状态下(见各电路的调试之项),短接工作电路印刷电路板上的TP 5005与TP5006之间,使跟踪控制处于中央位置。
  - b)用调整螺丝刀移动A/C磁头臂,然后调节 A/C磁头位置,使磁头开关脉冲高侧的包 络线达至最大。 最后,旋转螺丝①和②。(此时,应按螺

丝①和②之顺序进行)。(见图4-36①和②)。 (参考:最后的旋紧力矩以0.6N.m为宜)。

c)调节再现转换点。

	磁带高于螺	旋扫描导前	磁带低于螺旋扫描导前		
	供带侧	卷 带 侧	供幣侧	卷带侧	
	顺时针方向旋转供带 盘侧导辊(导辊降低), 使其输出波形包络线 达至平坦。	顺时针方向旋转卷带 盘侧导辊(导辊降低), 使其输出波形包络线 达至平坦。	逆时针方向旋转供带 盘侧导辊(导辊升高), 让磁带高过螺旋扫描 导前。然后,顺时针	逆时针方向旋转卷带盘侧导辊(导辊升高), 让磁带高过螺旋扫描导前。然后,顺时针	
- 调 整 · · ·			方向旋转供带盘侧导 辊,使其输出波形包 络线达至平坦。	方向旋转卷带盘侧导 辊,使其输出波形包 络线达至平坦。	

d)再现已录有内容的磁带,以检查包络线波 形和音频信号波形的状态。

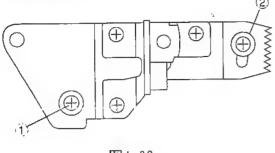


图4-36

## 主导轴直接驱动马达的 拆卸和组装

- 拆去磁带盒室控制机构。
- ●直接驱动马达的拆卸(按图中所示顺号进行)
- 1. 拔开主印刷电路板上的板间插接器的连接。
- 2. 拆去带盘皮带①。
- 3. 松去螺丝②。

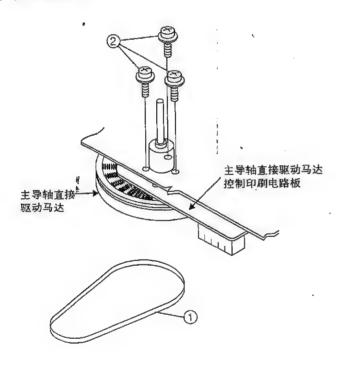


图4-37

#### ●直接驱动马达的组装

- 1.将主导轴直接驱动马达就位于机芯底盘。这时,应注意不要让主导轴磕碰机芯底盘。 然后,用三支螺丝将其紧固。
- 2. 套好带盘皮带。连接好主印刷电路板上的板 间插接器。

#### 注意:

- 1.组装完毕,转动主导轴直接驱动马达,检查 其转动是否圆滑。
- 2.检测、调整其伺服电路。

#### 主导轴直接驱动马达的装拆

- 1. 设装置于磁带出盒状态。
- 2. 拔出电源插头。
- ●直接驱动马达的拆卸(组装时按此相反顺序 进行)
- 1. 拨开FFC电缆线的插接(1)。
- 2. 松去直接驱动马达定子组件的固定螺丝(2)。
- 3. 取出直接驱动马达定子组件(3)。
- 4. 取出直接驱动马达转子组件的固定螺丝(4)。
- 5.取出直接驱动马达转子组件(5)。

#### 注意:

- 1. 拆卸直接驱动马达定子组件时, 磁鼓接地弹 管会弹出接地弹簧的压扣环。 注意切勿丢失其接地弹簧。
- 安装时,必须先将直接驱动马达转子组件的安装孔与下部磁鼓组件的安装孔对齐,然后紧密固定之。

接着再按类似要领安装上部磁鼓。

- (将上部磁鼓的槽口与直接驱动马达转子的 安装孔对齐。)
- 3.操作中, 切勿碰伤上部磁鼓和视频磁头。
- 4. 安装时,必须小心谨慎,切勿损伤霍尔效应 器、直接驱动马达定子、转子以及其它组成 部件。
- 5. 更换组装完毕, 必须进行再现转换点的调试。

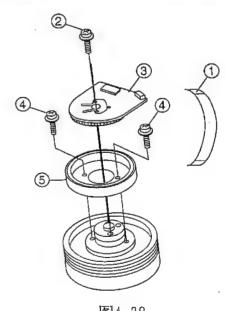
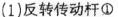



图4-38


### 需要进行下述配相调整 的机械部件的组装

- 1.组装紧带轮组件、反转导杆组件和紧带轮传 动凸轮。(于机芯底盘前面)
- 2. 安装移行器。(于机芯底盘背面)
- 3. 安装主凸轮。(于机芯底盘背面)
- 4.安装连接齿轮、慢放制动器以及磁带挂装马 达。(于机芯底盘背面)
- 1.紧带轮组件、反转导 杆组件与紧带轮传动 凸轮(机芯底盘前面) 的组装


按下图所示数字的顺序进行组装。




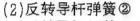

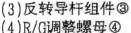



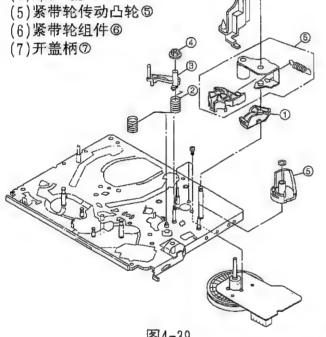

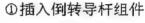


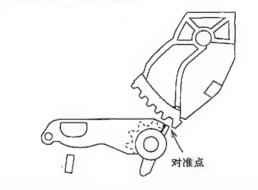


图4-39

②插入紧带轮传动凸轮

逆时针方向旋转反转导杆组件, 直至碰至停止器为止。

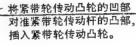

将紧带轮传动杆组件的凹 部对准机芯底盘的凸部, 插入紧带轮传动杆组件。

紧带轮传动杆组件

图4-40-1

## ④插入开盖柄

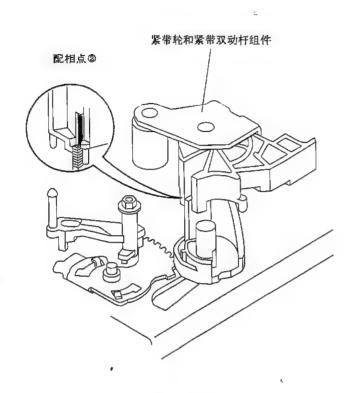


图4-40-2


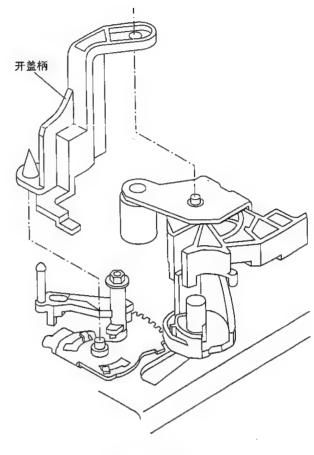


图4-40-3

# 2.移行器(机芯底盘背面)的组装

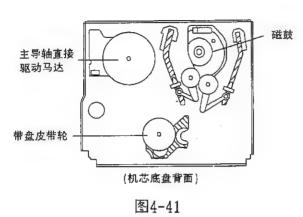

1.检查磁带装挂齿轮是否于下图所示的插孔处 ①。

- 2.按要求安装移行器。这时,必须注意移行器的6个插孔和3个松解钉。
- 3.为在插孔①处进行配相调整,请见下图的配相点②的说明。
- 4.在插孔①和④处加上垫圈,紧固移行器。

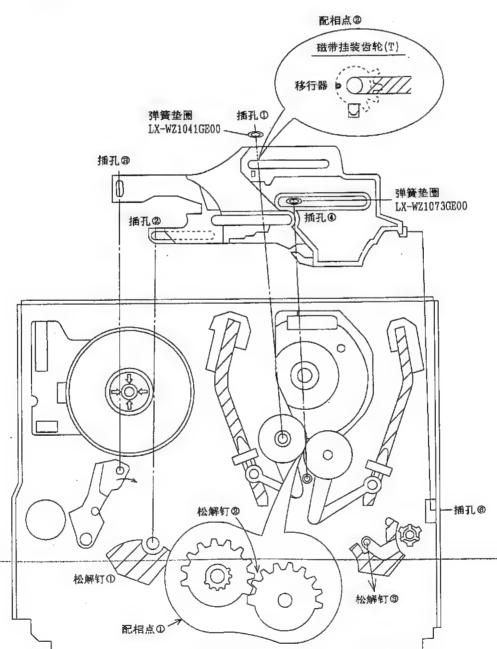


图4-42

3.主凸轮(机芯底盘背面)的安装

(1)首先检查移行器位置是否满足下图所示要求。

(2)按下图所示要求安装主凸轮。

注意:

如下图所示, 调整主凸轮与盒室控制机构传动。 齿轮间的配相点。

(3)加弹簧垫圈,固定主凸轮。

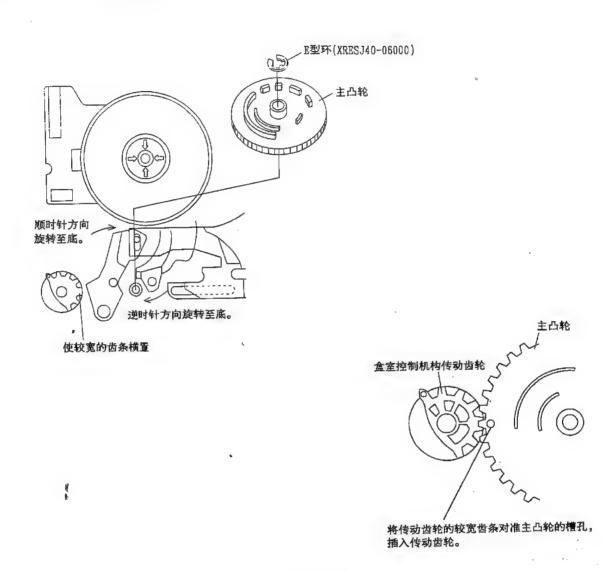


图4-43

#### VC-ML3 VC-ML3W

## 磁带装挂马达的更换

●马达的拆卸

松去两支紧固螺丝。

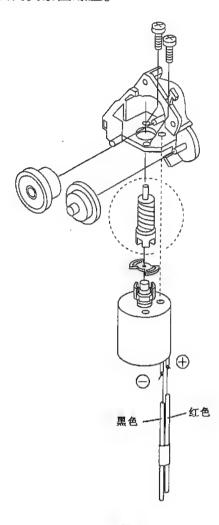


图4-44

## ●马达的更换

①取出旧的磁带装挂马达。按上图 (图4-44) 所示要求装换新的磁带装挂马达。

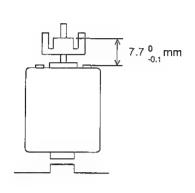


图4-45

用小于98N(10kgf)的力压入磁带装挂马达皮带轮。检查皮带轮是否离马达的间距是否满足7.7-%.1mm的要求。

# 盒室控制机构的组装

①框架组件

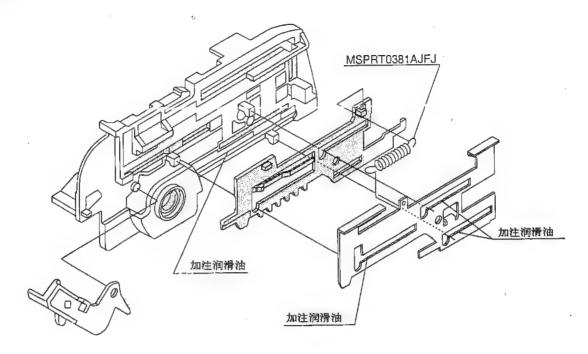


图4-46

# VC-ML3W

②同步齿轮、左侧传动齿轮和右侧传动齿轮

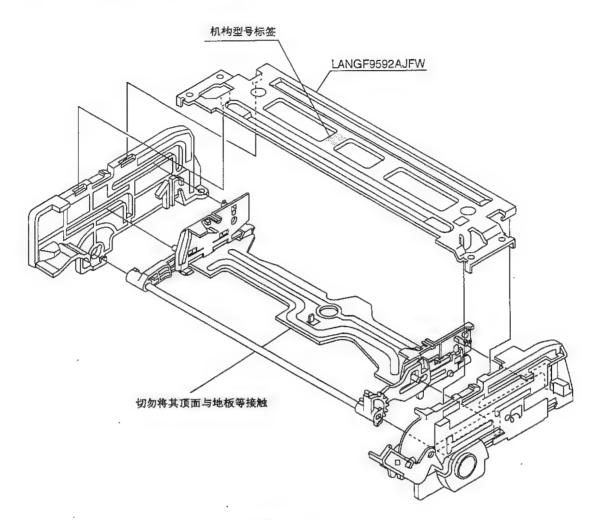


图4-47

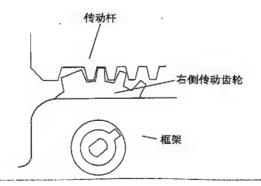


图4-48

## 5 各电路的调试

注:

●调试前 在更换录象机磁头之类的电子元件以及机械部件之后,经常需要进行本节所述的电气调试。 在调试之前,检查机械装置以及所有的电子元件是否处于良好的工作状态,否则,调试不能顺利完成。

- ●需要的检测用仪器
  - ○彩色电视机监视器
  - O音频信号发生器
  - O盲流伏特计
  - O空白录象带
  - O调试用螺丝刀
  - O彩条信号发生器
  - O计频器

- O双踪示波器
- O交流毫伏特计
- ○校正用磁带(VROCPSV)
- O校正用磁带(VROATSV)
- ○校正用磁带(VROCBFFS)
- O校正用磁带(VROCPZJS)

☆调整注意事项:

定时器电路中的IC703静电可编程式只读寄存器E<sup>2</sup>PROM发生更换时,应接下述要求重编其 记忆程序。

按录象机型号而导,IC703的 $E^2$ PROM的记忆程序已于出厂前按规定加以设定。

因此,应根据录象机型号要求,正确设定其记忆功能。

此外,对伺服电路还应进行磁头转换点、慢动作演放以及静止画面的调整。

## ●主电路控制调节与测试点的位置

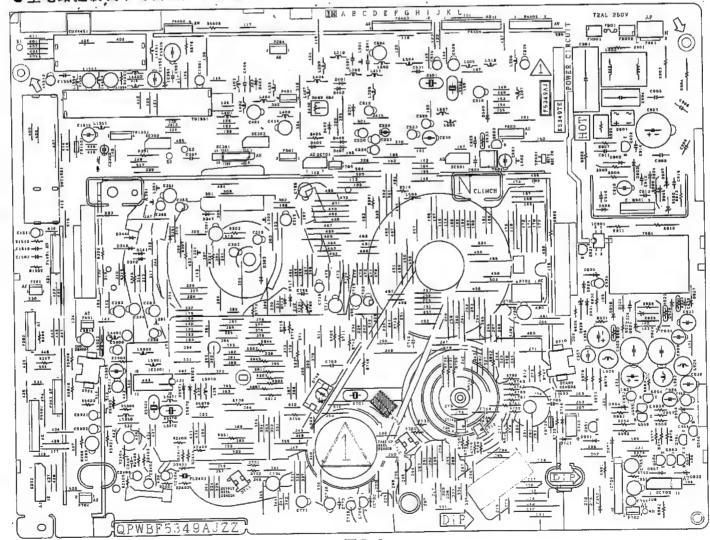


图 5-1

## 伺服电路的调整

PAL制式磁头转换点的调试

检测仪器	双轨迹示波器 监控用彩色电视机
工作状态	再现
使用磁带	校正用磁带(VROCPSV)
為法院	TP502(磁头转换点)接频道-1 视频输出插孔端接频道-2 (頻道-1触发倾斜开关于 (+),内触发于频道-1)
規定要求	6.5 ± 0.5H (线路)

 松开前面板。插入校正用磁带(VROCPSV), 再现之。


(再见图象表示于监测用电视机莹屏。)

- 2.对工作电路印刷电路板上的TP5001与TP5002 之间进行瞬间短接处理。 短接测试点后,检查REC LED和定时器LED是 否点亮。(见下注①)
- 3.设录象机于自动调整状态,触按再现(PLAY) 键。
- 4.在自动调试中,检查RED LED是否闪动。
- 5.在自动调试完毕后,检查RED LED是否熄灭。
- 6. 触按停止(STOP)键, 让录象机返回至正常工作状态。
- 7. 磁头开关转换点的调整完毕后,再现校正用磁带,以检查示波器上呈现的波形是否符合图5-2 所示的规定要求。

所测值不符合规定要求之场合,再次呼出测试点,触接快进(FF)键或倒带(REW)键以调至规定要求之范围内。

#### 注:

- ①调试状态的设定。
  - 磁头转换点的调整过程中, 自动跟踪功能无效。
- ②盒室控制机构被取出状态下,机械工作状态的设定。
- 1) 几分钟后再重新插入电源引线插头。
- 2)短接工作电路印刷电路板上的TP5005与 TP5006之间,使跟踪控制处于中央位置。
- \_3) 插入电源引线插头。
  - 4) 这样, 便可得机械动作状态。

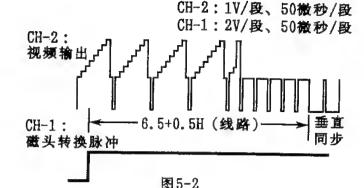

PAL制式SP(标准)/LP(慢速)方式跟踪预设的 调试

检测仪器	监控用彩色电视机
工作状态	再现
使用磁带	自录磁带 (SP/LP方式) (见下注)
调整点	磁迹跟踪键(+)或 (一)
规定要求	监控用彩色电视机荧 屏上噪声线最小程度。

- 1. 设录象机于电视台节目接收状态,或向其视频输入端输入视频信号。
- 2. 用遥控器设录象机于SP(标准)走带方式, 装入自录磁带录象之。
- 3. 录象后, 倒带, 再现其录象信号。
- 4. 触按遥控器上的慢放 (SLOW) 键, 慢动作再现之。
- 5.对工作电路印刷电路板上的TP5001与TP5002 之间进行瞬间短接处理。 短接测试点后,检查REC LED和定时器LED是 否点亮。
- 6.观察监控用电视机荧屏,触按磁迹跟踪键(+)或(一),将荧屏上呈现的噪声线(雪花)调至最小程度。
- 7. 触按再现(PLAY)键, 让录象机返回至正常工作状态。
- 8. 以标准状态再现录象带数秒后, 再触按慢放 (SLOW)键,检查电视荧屏上的噪声线是否明 显。

(LP方式的调整亦按与SP方式的调整方法相同进行之)。

#### 注:

自录磁带意指于电路调整状态时录象用磁带。

PAL制式静止画面FV(虚假垂直同步)的调试。

检测仪器	监控用彩色电视机
工作状态	再现状态静止画面
使用磁带	自录磁带(SP方式) (见下注)
调整点	磁迹跟踪键(+)或()
规定要求	电视荧屏上无垂直晃抖

- 1. 装入自录磁带, 用SP方式录象后, 再现之。
- 2. 触按暂停/静止(PAUSE/STILL)键,静止再现图象。
- 3.观察监控用电视机荧屏,触按磁迹跟踪键(十) 或(一),将荧屏上呈现的噪声线(雪花) 调至最小程度。
- 4.用SP方式再现自录磁带,静止再现图象,检查电视荧屏上的噪声线是否明显。 (LP方式的调整亦按与SP方式的调整方法相同进行之)。

注:

自录磁带意指于电路调整状态时录象用磁带。

NTSC制式磁头转换点的调试

检测仪器	双轨迹示波器 监控用彩色电视机
工作状态	再现
使用磁带	校正用磁带 (VROATSV)
点近衡	TP502(磁头转换点)接频道-1 视频输出插孔端接频道-2 (頻道-1触发倾斜开关于 (+),内触发于频道-1)
规定要求	6.5±0.5H(线路)

1. 松开前面板。插入校正用磁带(VROATSV), 再现之。

(再见图象表示于监测用电视机莹屏。)


- 2.对工作电路印刷电路板上的TP5001与TP5002 之间进行瞬间短接处理。 短接测试点后,检查REC LED和定时器LED是 否点亮。(见下注①)
- 3.设录象机于自动调整状态, 触按再现(PLAY) 键。

- 4.在自动调试中、检查RED LED是否闪动。
- 5.在自动调试完毕后、检查RED LED是否熄灭。
- 6. 触按停止(STOP)键, 让录象机返回至正常工作状态。
- 7.磁头开关转换点的调整完毕后,再现校正用磁带,以检查示波器上呈现的波形是否符合图5-3 所示的规定要求。 所测值不符合规定要求之场合、触按快进

所测值不符合规定要求之场合,触按快进 (FF)键或倒带(REW)键以调至规定要求之范 围内。

#### 注:

- ①调试状态的设定。
  - 磁头转换点的调整过程中, 自动跟踪功能无效。
- ②盒室控制机构被取出状态下,机械工作状态的设定。
- 1) 几分钟后再重新插入电源引线插头。
- 2)短接工作电路印刷电路板上的TP5005与 TP5006之间,使跟踪控制处于中央位置。
- 3) 插入电源引线插头。
- 4) 这样, 便可得机械动作状态。
- ③如果已经调整过PAL制式磁头转换点,即不需调整NTSC制式磁头转换点。 边观察测试点上显示出的波形边检查是否符合规定要求。

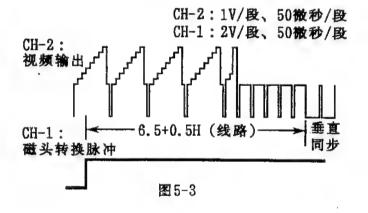

NTSC制式SP(标准)/EP(慢速)方式跟踪预设的调试。

检测仪器	监控用彩色电视机
工作状态	再现
使用磁带	自录磁带(SP/EP方式) (见下注)
调整点	磁迹跟踪键(+)或
规定要求	监控用彩色电视机荧 屏上噪声线最小程度。

- 1. 设录象机于电视台节目接收状态,或向其视频输入端输入视频信号。
- 2. 用遥控器设录象机于SP(标准)走带方式, 装入自录磁带录象之。
- 3. 录象后, 倒带, 再现其录象信号。
- 4. 触按遥控器上的慢放 (SLOW) 键, 慢动作再 现之。
- 5.对工作电路印刷电路板上的TP5001与TP5002 之间进行瞬间短接处理。 短接测试点后,检查REC LED和定时器LED是 否点亮。(见下注①)
- 6. 观察监控用电视机荧屏,触按跟踪键(+)或 (一),将荧屏上呈现的噪声线调至最小程度。
- 7. 触按再现(PLAY)键, 让录象机返回至正常工作状态。
- 以标准状态再现录象带数秒后,再触按慢放 (SLOW)键,检查电视荧屏上的噪声线是否明显。

(EP方式的调整亦按与SP方式的调整方法相同进行之)。

#### 注:

自录磁带意指于电路调整状态时录象用磁带。

NTSC制式静止画面FV(虚假垂直同步)的调试

检测仪器	监控用彩色电视机
工作状态	再现状态静止画面
使用磁带	自录磁带(SP/EP方式) (见下注)
调整点	磁迹跟踪键(+)或()
规定要求	电视荧屏上无垂直晃抖

- 1. 装入自录磁带, 用SP方式录象后, 再现之。
- 2. 触按暂停/静止(PAUSE/STILL)键, 静止再现 图象。
- 3.观察监控用电视机荧屏,触按磁迹跟踪键(+) 或(一),将荧屏上呈现的噪声线(雪花) 调至最小程度。
- 4. 用SP方式再现自录磁带,静止再现图象,检查电视荧屏上的噪声线是否明显。 (EP方式的调整亦按与SP方式的调整方法相同进行之)。

#### 注:

自录磁带意指于电路调整状态时录象用磁带。

#### NTSC制式歪斜补偿的调整

检测仪器	监控用彩色电视机
工作状态	再现状态静止画面(SP方式)
使用磁带	校正用磁带 (VROATSV)
调整点	R5410 (闪烁控制)
规定要求	监控用电视机荧屏上无闪烁 现象

- 1. 装入校正用磁带(VROATSV),设录象机于再 现静止状态。
- 2.观察监控用电视机荧屏,调节R5410,使荧屏 上的图象闪烁现象调至最小程度。

# 亮度/色度信号电路的调整

## 视频 E-E 增益的调整

测量仪器	示波器
工作状态	E-E 或录象
输入信号	EIA 彩条(1.0 Vp_p PAL 和 NTSC)
测试点	视频输出端
规定要求	1.0 ±0.2 Vp-p

- 将 75Ω 端电阻接到视频输出端,再接示波器两探针于该电阻两端。(见下注)
- 2. 输入彩条信号到视频输入端。
- 3. 让 E—E 信号的振幅达到如图 5—4 所示的1.1 Vp\_p 的规定要求。
- 4. 对 NTSC 制式而言,其调整方法与 PAL 制式相同。

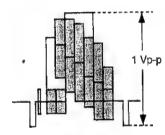



图 5-4

注:如果不接 75Ω 端电阻,则输出波形幅值应为上述 值的两倍。

## 白色限幅的调整

测量仪器	示波器
工作状态	E-E 或录象 (PAL LP/NTSC EP 方式)
输入信号	EIA 彩条(1.0 Vp_p PAL 和 NTSC)
测试点	IC401的(48)脚,GND
规定要求	190±5%(见下注)

- 1. 在 IC401 芯片的(48) 脚与 GND 之间接示波器。
- 2. 设录象机于 E—E 或录象状态。向视频输入端输入 彩条信号。
- 3. 检查视频信号过调量的限幅是否符合图 5-5 所示的 190%的规定要求。
- 4. 对 NTSC 制式而言,其调整方法与 PAL 制式相同。

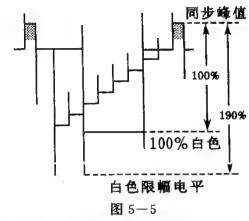


注:从同步峰值至白色峰值,其电平为100%。于白色电平之上,白色限幅电平为90%。

## 记录电平的调整

测量仪器	双踪示波器
工作状态	记录(录象)方式 (PAL LP/NTSC EP 状态)
輸入信号	EIA 彩条 (1.0 Vp_p PAL 和 NTSC)
测试点	色度(红) R514 电阻与 L509 的连接点~ GND 同步信号峰值 R225 电阻与 L210 的连接点~
规定要求	色度(红): 170±230 mVp-p 同步信号峰值: 720±880 mVp-p


- 1. 设录象机于记录状态。向视频输入端输入彩条信号。
- 2. 用双踪示波器测量上表中的每一点。
- 3. 让色度(红)及同步信号顶部的振幅达到如图 5-6 所示的规定要求。
- 4. 对 NTSC 制式而言,其调整方法与 PAL 制式相同。

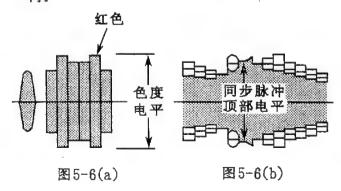

## 再现增益的调整

检测仪器	示波器
工作状态	记录/再现(PAL LP/NTSC EP 状态)
输入信号	EIA 彩条(1.0Vp-p PAL 和 NTSC)
测试点	视频输出端
规定要求	1.0 ±0.2 Vp-p

- 1. 先确认 E-E 电平的调试已符合规定要求。
- 2. 在视频输出插孔端接一只 75Ω 终端电阻。示波器 跨接此终端电阻。(见下注)
- 3. 向视频输入插孔端输入彩条信号。设录象机于记录状态。
- 4. 再现记录有输入彩条信号部分的磁带内容。
- 5. 检查这时的输出信号幅值是否符合图 5—7 所示的 1.1Vp—p 的规定要求。
- 6. 对 NTSC 制式而言,其调整方法与 PAL 制式相同。
- 注:如果不接 750 端电阻,则输出波形幅值应为上述 之两倍。

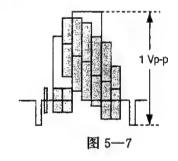

## 超高画质图象的调试

检测仪器	单象管图案
工作状态	记录/再现(PAL SP 状态)
使用磁带	校正用磁带(VROCPSV)
测试点	TP402 (信号) ~TP403 (接地)
调整点	R430 (超高画质图象控制)
规定要求	

- 1.在SP状态下记录PAL制式单象管图案信号,再现之。
- 2.接1兆 Q 电阻器于测试点TP402(信号)与TP403 (接地)之间。
- 3.在监控用彩色电视机荧屏上呈现无瑕的图象 后,缓慢地旋转R430(超高画质图象控制), 直至其无瑕的图象呈杂乱状态为止。
- 4. 拆开电阻器,最后检查荧屏上呈现的图象是 否回复至无瑕的图象。

## Hi-Fi音频电路的调试 Hi-Fi音频电路调整的注意要点

 下述各项调整步骤均以左声道的调整为说明 对象。右声道的调整基本与其相同,步骤说 明在此省略。


记于括号"[]"中的数值、代号等是右声道省略了说明的调整数值、代号等。

- 2. Hi-Fi 音频电路模块的测试调整
  - 1)记录工作状态 在此工作状态下用录象带记录电视节目的 立体声信号,并为其作控制调节。
  - 2) 再现工作状态 在此工作状态下演放录有Hi-Fi内容的录 象带、并为其作控制调节。

(可通过遥控器上的项目(MENU)键或录象 机前面的设定(SET UP)键选定音频输出声 道于再现工作状态。

再通过(+)或(一)键对音频输出方式进行选定。触按(+)或(一)键选定音频输出方式于"Hi-Fi L+R"(左右两声道Hi-Fi)。这样,左右两声道均被设定于Hi-Fi输出方式。选定结束后,多功能显示器上左右声道指示器分别点亮。)

#### ●控制调节与测试点的位置

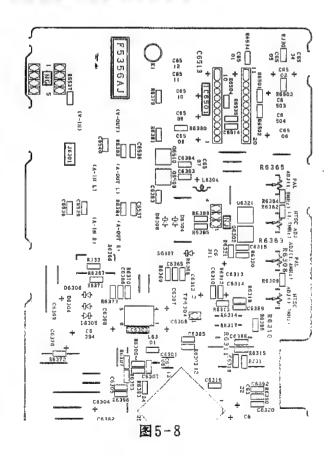

#### E-E电平的调试

检测仪器	交流毫伏特计
工作状态	E-E或记录 (录象)
输入信号	1kHz,-8dBs
测试点	音频输出插孔
规定要求	-8 ± 2dBs

- 1.向音频输入插孔的左声道终端输入上表所述 的音频信号。
- 2. 接交流毫伏特计于音频输出插孔的左右声道 终端。
- 3. 设录象机于E-E或记录(录象)状态。检查 交流毫伏特计所测的读数是否符合上表所述 的规定要求。

(检查其电平是否满足规定值-2dB的规定要求)。

#### M载波频率的调试

检测仪器	计频器
工作状态	E-E或记录 (录象)
输入信号	无规定要求
测试点	TP6301(信号)~TP6302(接地)
调整点	R6310 (R6363) NTSC制式 载波频率控制 R6308 (R6365) PAL制式 载波频率控制
规定要求	1.3 (1.7) MHz ± 5kHz (NTSC制式) 1.4 (1.8) MHz ± 5kHz (PAL制式)

- 1. 设录象机于A/V(声象)输入状态。切勿向 视频输入插孔输入任何信号。(拆去视频输 入端的所有接线。)
- 2.设录象机于E-E或记录(录象)状态。接计 频器于测试点TP6301(信号)和TP6302(接 地)。
- 3. 设录象机于NTSC制式,调节R6310 [R6363] (NTSC制式载波频率控制),使计频器所测的读数达至上表所述的规定要求。
- 4. 再设录象机于PAL制式,调节R6308(R6365) (PAL制式载波频率控制),使计频器所测的 读数达至上表所述的规定要求。

# VC-ML3W

#### 线性音频再现电平的调试

检测仪器	交流毫伏特计
工作状态	再现
输入信号	校正用磁带(VROCPZJS)
测试点	音频输出插孔
规定要求	-12.0 ± 2dBs

- 1. 接交流毫伏特计于音频输出插孔。
- 2. 装入校正用磁带(VROCPZJS), 再现之。
- 3. 检查交流毫伏特计所测的音频输出电平值是 否符合规定要求。

所测值不符合规定要求之场合, 则检查偏流。

#### Hi-Fi音频再现电平的调试

检测仪器	交流毫伏特计
工作状态	再现
输入信号	校正用磁带(VROCBFFS)
测试点	音频输出插孔
规定要求	-8.0dBs ± 2dBs

- 1. 接交流毫伏特计于音频输出插孔。
- 2. 装入校正用磁带(VROCBFFS), 再现之。
- 3. 检查交流毫伏特计所测的音频输出电平值是 否符合规定要求。

注意:检查左右声道的再现电平值均为不大于 2.0dB。

#### Hi-Fi/标准音频自录/再现电平的调试

检测仪器	交流毫伏特计
工作状态	记录(录象)/再现
输入信号	1kHz, -8.0dBs
测试点	音频输出插孔
规定要求	-8.0dBs ± 3dBs

- 1. 向音频输入插孔的左声道终端输入上表所述 的音频信号。
  - 2. 接交流毫伏特计于音频输出插孔的左声道和 右声道终端。
  - 3. 检查交流毫伏特计所测的读数是否符合规定 要求。

注意:检查左右声道的再现电平值均为不大于 2.0dB。

#### 消磁电压和振荡频率的调试

检测仪器	示波器
工作状态	记录 (录象)
测试点	完全消磁磁头
调整点	T6301
规定要求	70 ± 5kHz,大于40Vp-p


- 1. 设录象机于记录(录象)状态。
- 2.接示波器于完全消磁磁头之两端。
- 3. 检查其磁头两端的消磁电压是否近似于或大于40Vp-p, 以及频率为70 ± 5kHz。

## 液晶显示器(LCD)电路的 调试

#### 对比度电路的调试

检测仪器	示波器
工作状态	E-E
输入信号	PAL制式视频信号 (50%白色)
测试点	TP8941 (绿色信号输出端) ~GND (接地端)(TP8943)
控 制	R8902 (对比度控制)
规定要求	亮度信号电平应为相同程度 (+0.1 Vp-p)。

- 1.在声象 (A/V) 状态下,向视频输入端输入 PAL制式视频信号 (50%白色)。
- 2.接示波器于TP8941 (绿色信号输出端)与 GND (接地端)之间。调节R8902 (对比度控制),使标准白色信号部分与翻转的绿色信号输出波形部分的电平达至相同程度。

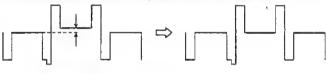

旋转R8902, 以达 至相同程度的电平值。

图5-9

## 水平位置的调试

检测仪器	彩色电视机监视器
工作状态	再现状态
使用磁带	校正用磁带(VROCPSV)
控 制	R9021 (水平位置控制)
规定要求	单象管图案应位于荧屏的 中央部

- 1. 装入校正用磁带 (VROCPSV),再现之。
- 2. 边观察监控用彩色电视机边旋转R9021 (水平位置控制),直至单象管图案移至荧屏的中央部为止。

#### 共用偏转的调试 (精调)

检测仪器	直流伏特计
工作状态	E-E
输入信号	PAL制式视频信号 (50%白色)
测试点	TP9045 (共用偏转控制)
控制	R9061 (共用偏转控制)
规定要求	1.5 ± 0.1 Vp-p

- 1.在声象(A/V)状态下,向视频输入端输入 PAL制式彩条信号。接直流伏特计于TP9045 (共用偏转控制)与GND(接地端)之间。
- 2.旋转R9061 (共用偏转控制),使直流伏特 计所测的读数达至1.5V±0.1Vp-p的规定要求。

## 白色平衡的调试

检测仪器	示波器
工作状态	E-E
输入信号	PAL制式视频信号 (50%白色)
测 试 点	TP8941 (绿色信号输出端) ~GND (接地端), TP8940 (绿色信号输出端)~GND (接地端), TP8942 (蓝色信 号输出端)~GND (接地端)
控 制	R8966 (副亮度红色控制) R8961 (副亮度蓝色控制)
规定要求	亮度信号电平应为相同程度 (+0.1 Vp-p)。

- 1.该调整应在对比度调整完毕后进行。
- 2. 调录象机于声象信号输入状态,向视频输入端输入PAL制式视频信号(白色50%)。
- 3.接示波器于TP8940与GND(接地端)之间。再 接示波器于TP8942与GND(接地端)之间。然 后调节8966(前者)和R8961(后者),使各 亮度信号电平达至相同程度。

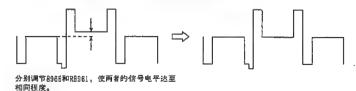


图5-10

# VC-ML3W

## 彩色同步信号的调试 (仅限于PAL制式)

检测仪器	示波器
工作状态	E-E (蓝色背景状态)
输入信号	无信号
控 制	C8911 (PAL制式彩色同步信号 控制)
规定要求	调至水平噪声线消失为止。

- 1.设液晶显示板荧屏于PAL制式的蓝色背景状态
- 2.观察液晶显示板荧屏,调节C8911,直至完全 消失水平噪声线为止。

(必须设定于PAL制式。在NTSC制式的蓝色背景状态下旋转C8911亦不会出现变化。)

#### 共用偏转的调试 (微调)

检测仪器	彩色电视机监视器
工作状态	E-E
輸入信号	NTSC制式10阶梯波视频信号
控 制	R9021 (水平位置控制)
规定要求	消去荧屏上的垂直线条

- 1. 在声象 (A/V) 状态下, 向视频输入端输入 NTSC制式10阶梯波视频信号。
- 2.边观察监控用彩色电视机边缓慢地旋转 R9061 (共用偏转控制),直至荧屏上消去 垂直线条为止。

#### 注意:

切勿快速地旋转控制旋钮,否则不能观察进行变化的图象。

# 射频电路

## 射频 AGC 电路调试

	*
检测仪器	示波器
工作状态	良好的电视工业广播接收方式
测试点	TP1553 (信号) TP1554(地) (位于主印刷电路板中)
控 制	VR101 射頻 AGC 控制 (位于中頻包电路中)
规定要求	恰好在收缩之前(见图 59)

- 1. 让录象机接收到电视工业广播信号。(输入场强: 85dBμV 天线端)。
- 2. 接示波器于测试点 TP1553(信号)与 TP1554(地) 之间。
- 3. 在示波器上观察视频输出端的波形。调节位于中频 包电路中的 VR101(射频 AGC 控制),直到示波器 屏上的噪声消失为止,且该波形几乎进入同步。



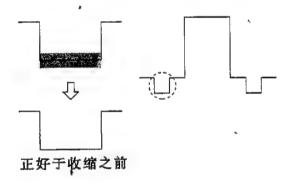



图5-11


## 音频电平调谐器的检查


- 1. 在 TV Through 方式或 VCR E—E 方式下,对其音量进行比较是否相同。
- 2. 如果音量不相同,则调节中频包电路中的 VR102, 使得两者音量完全相同。

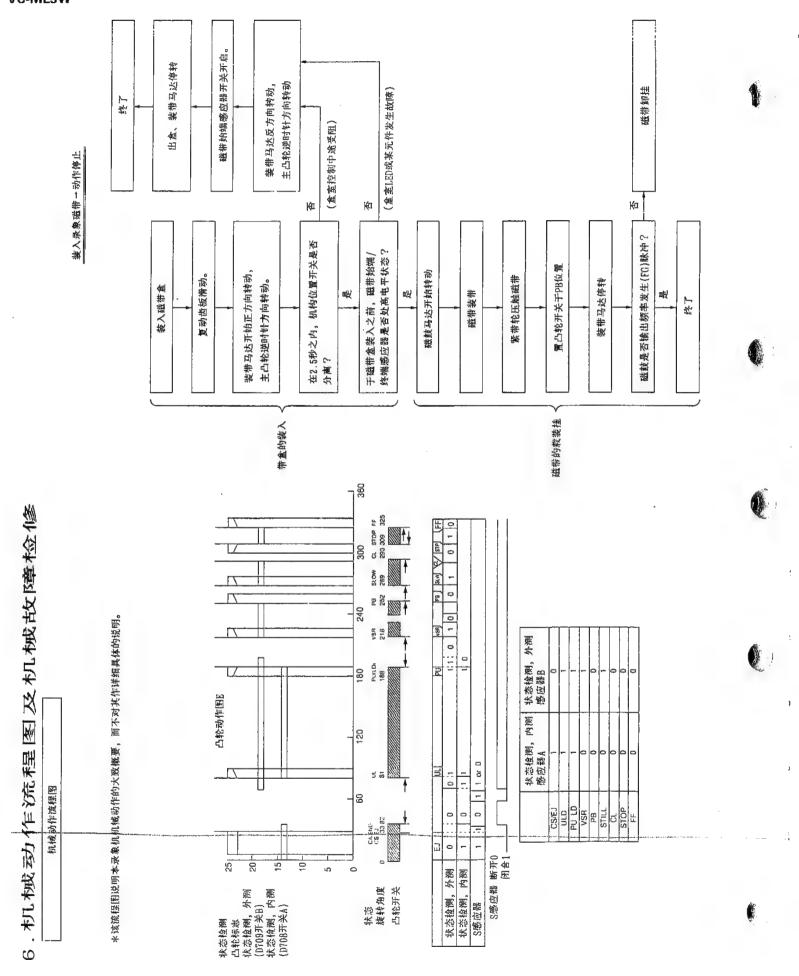


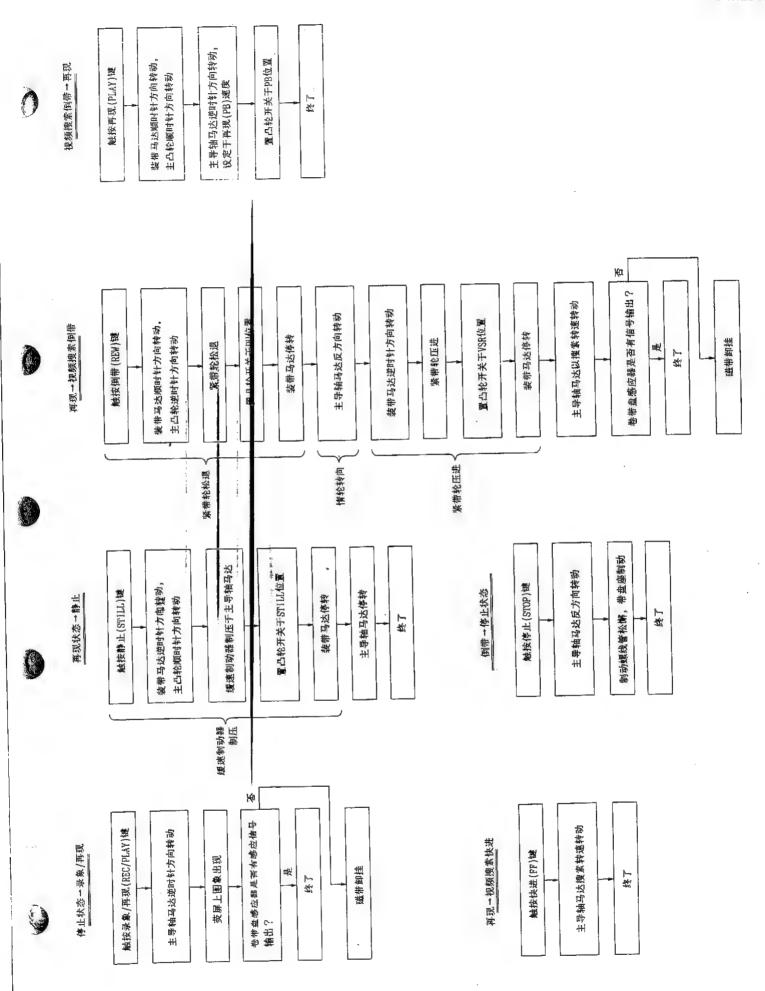


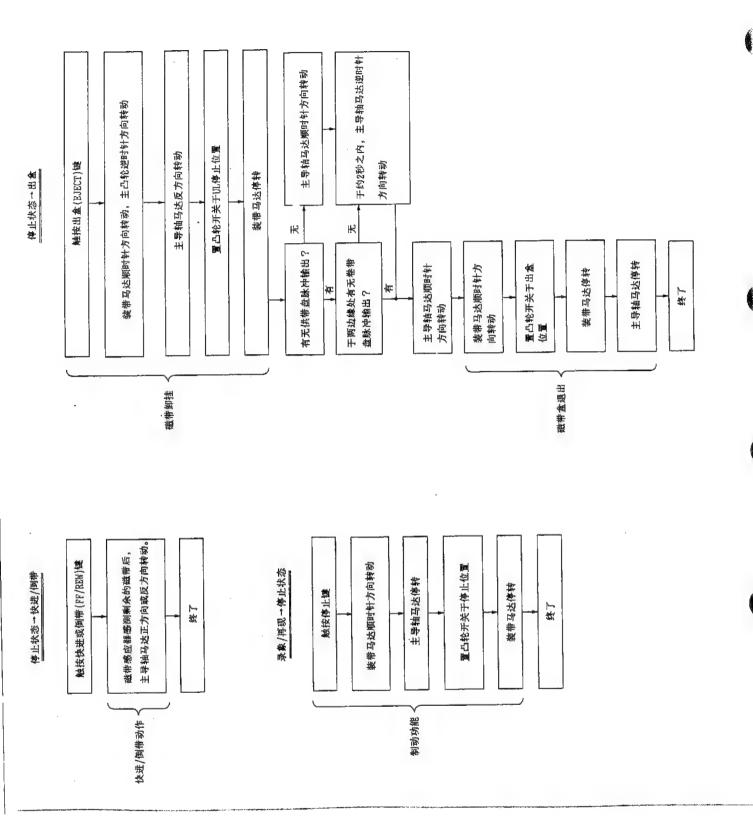


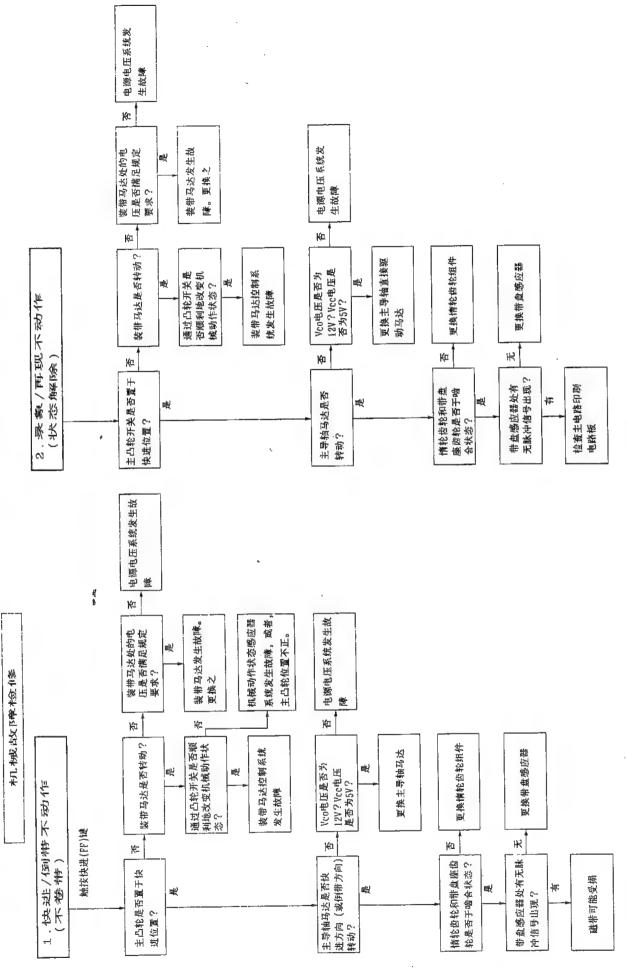


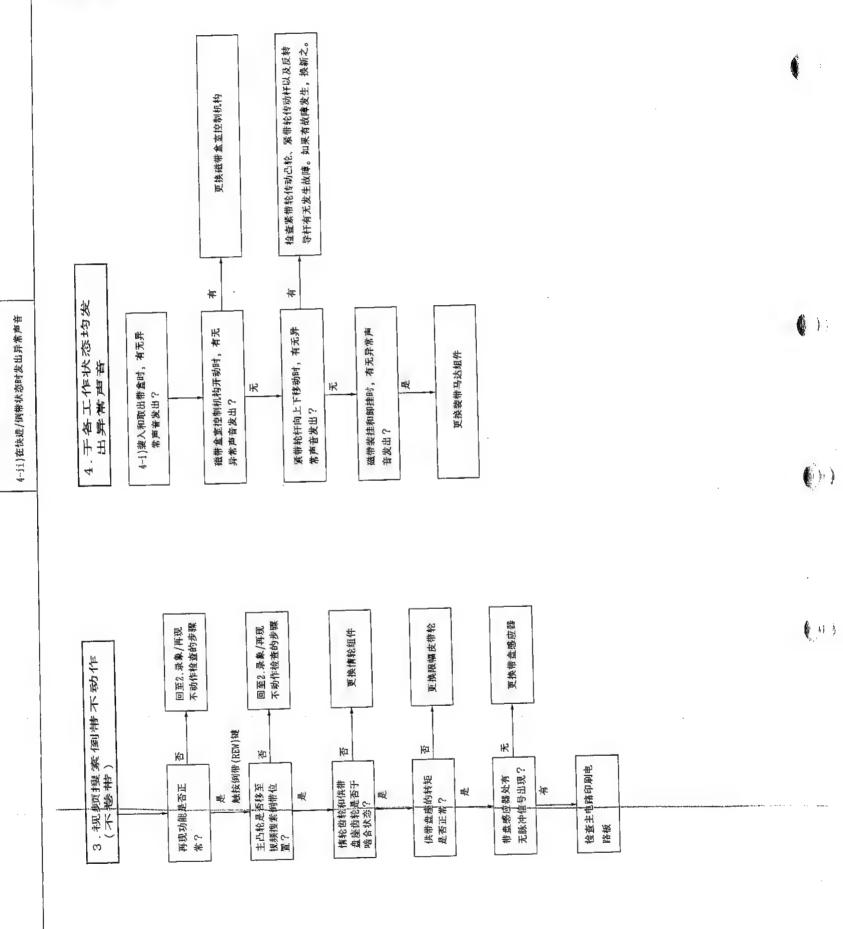


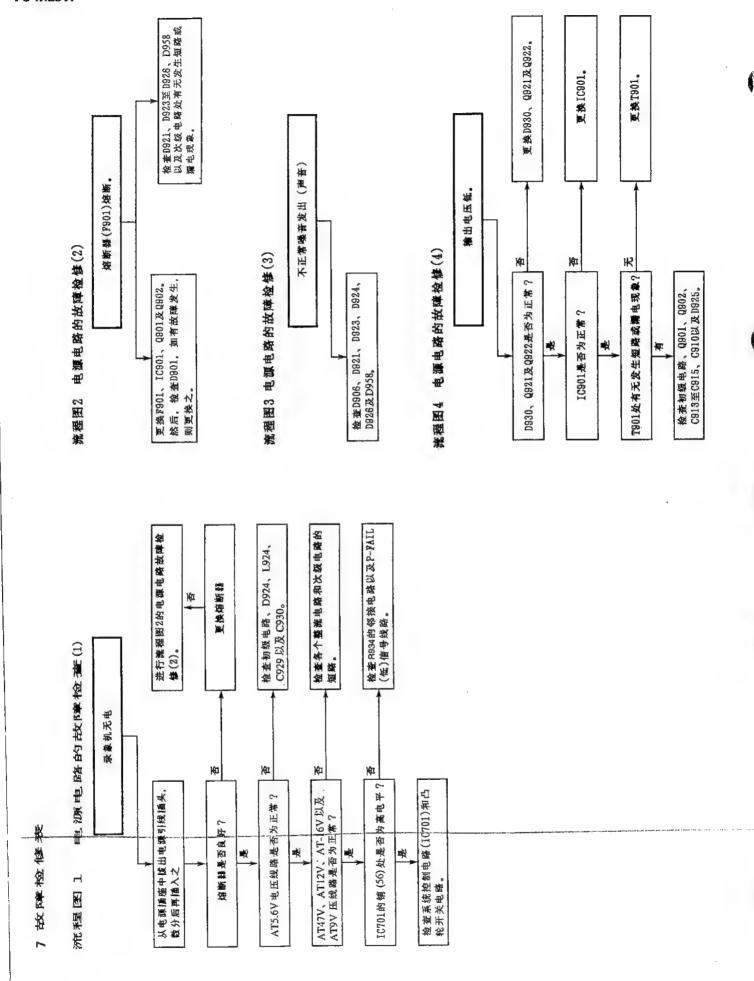


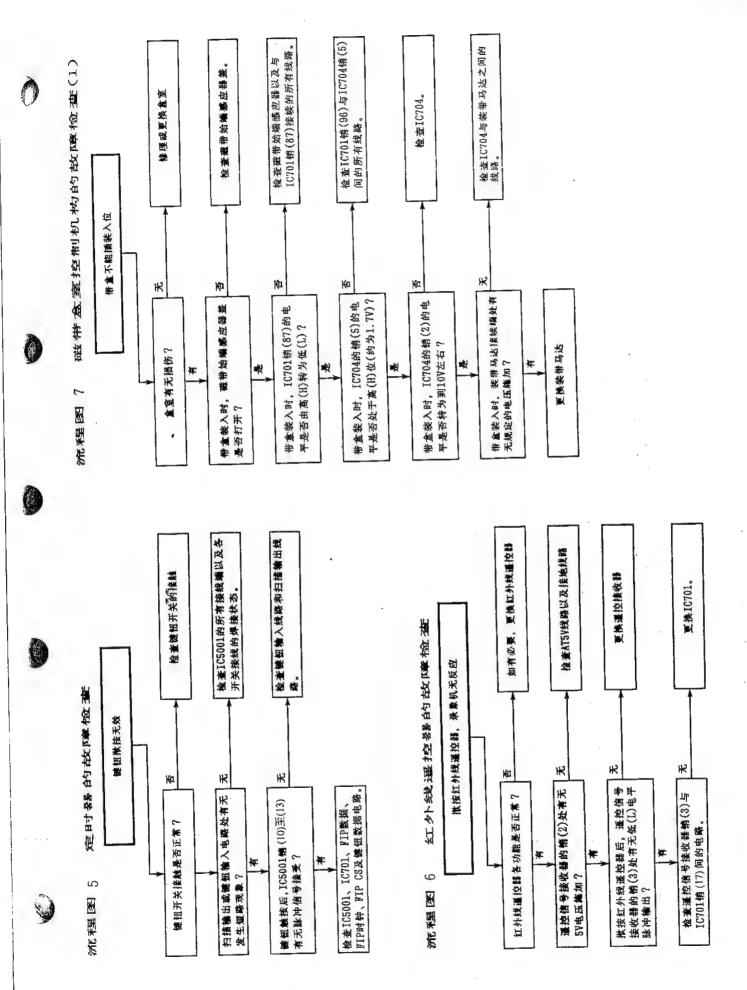


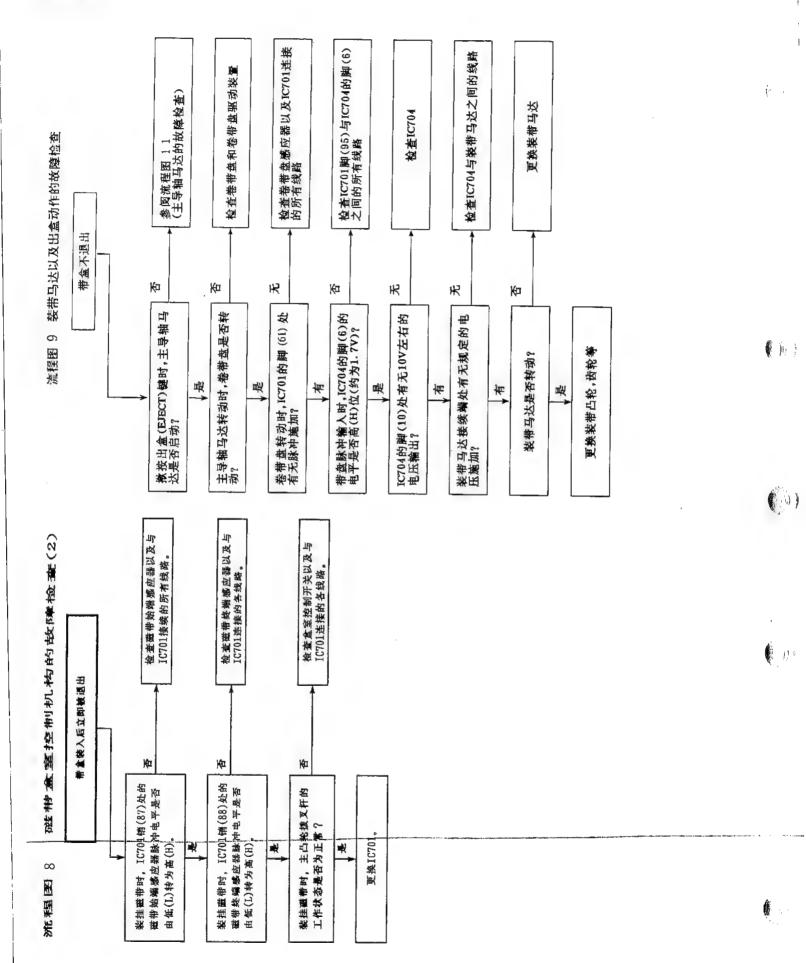

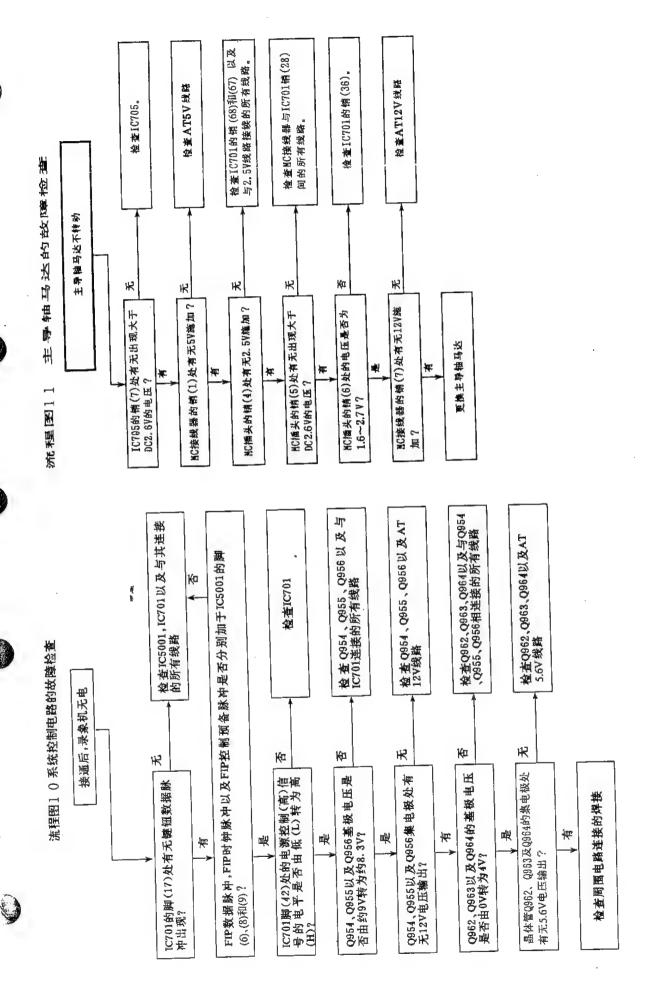


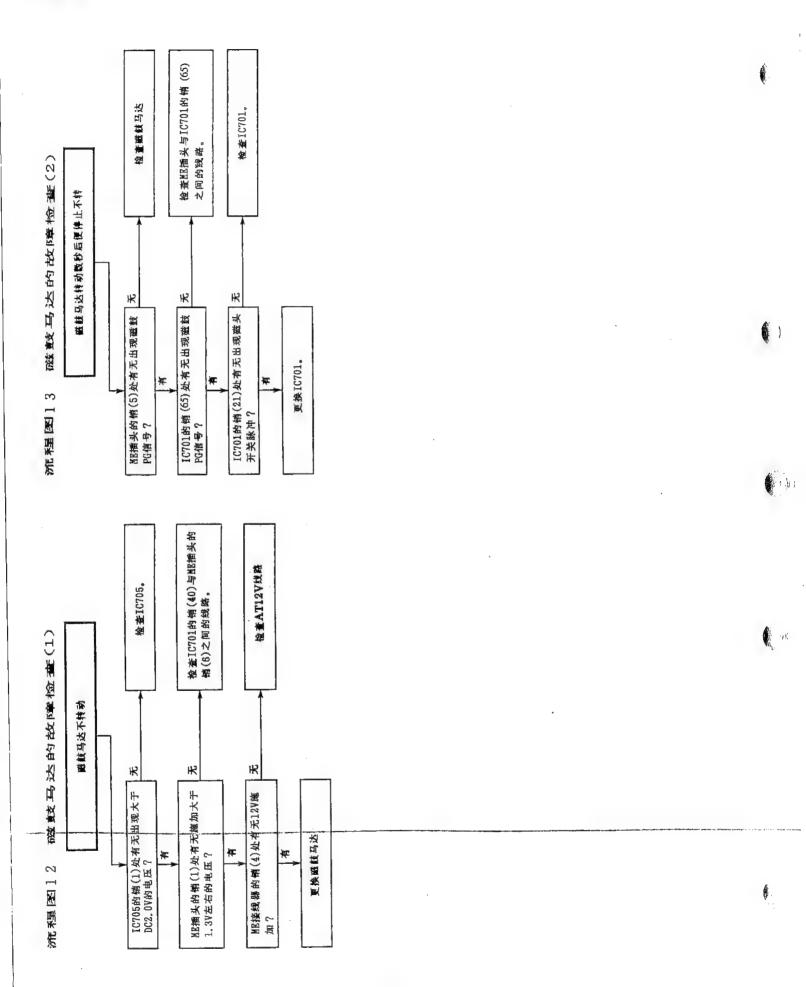


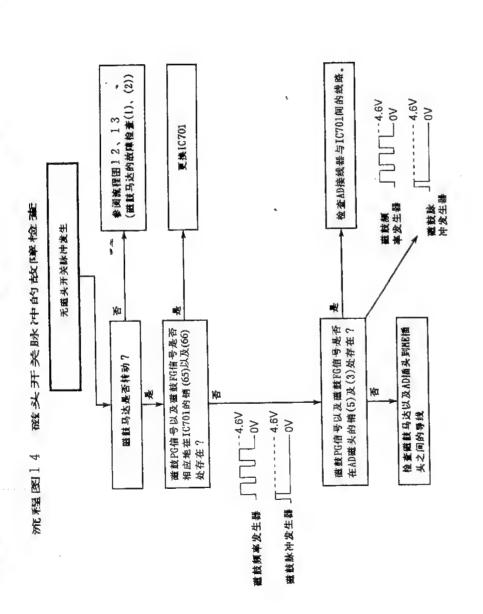

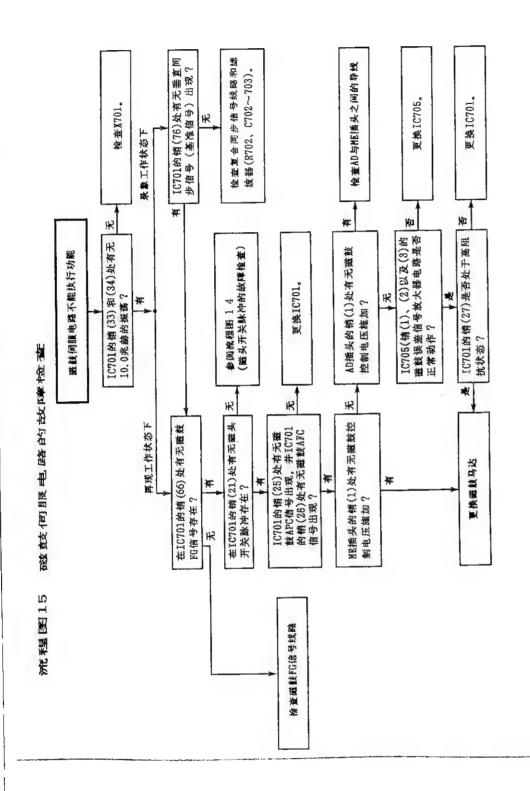


( )

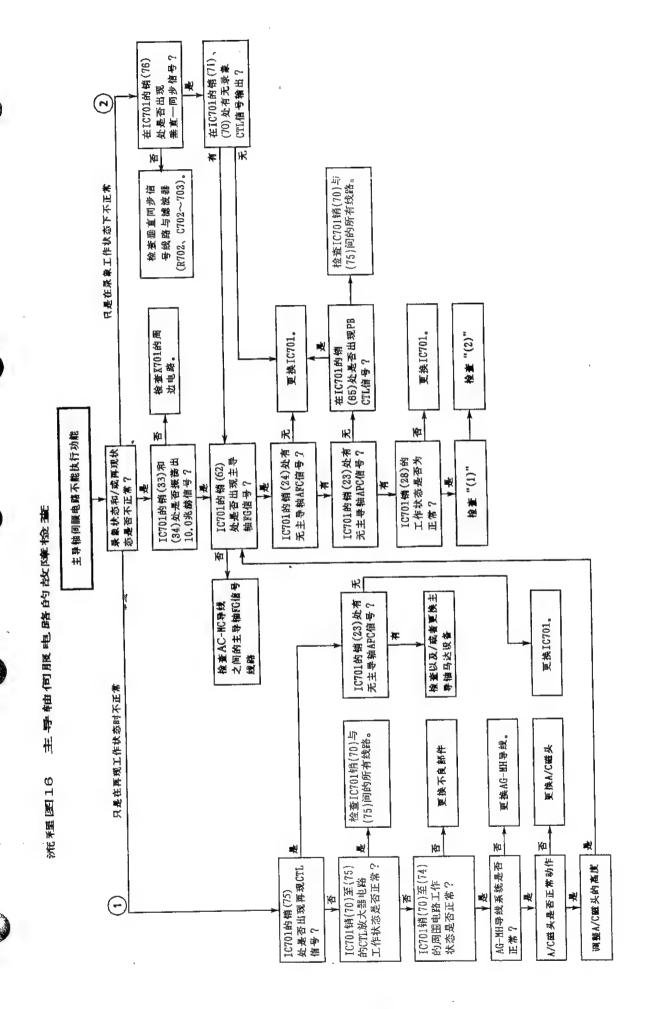


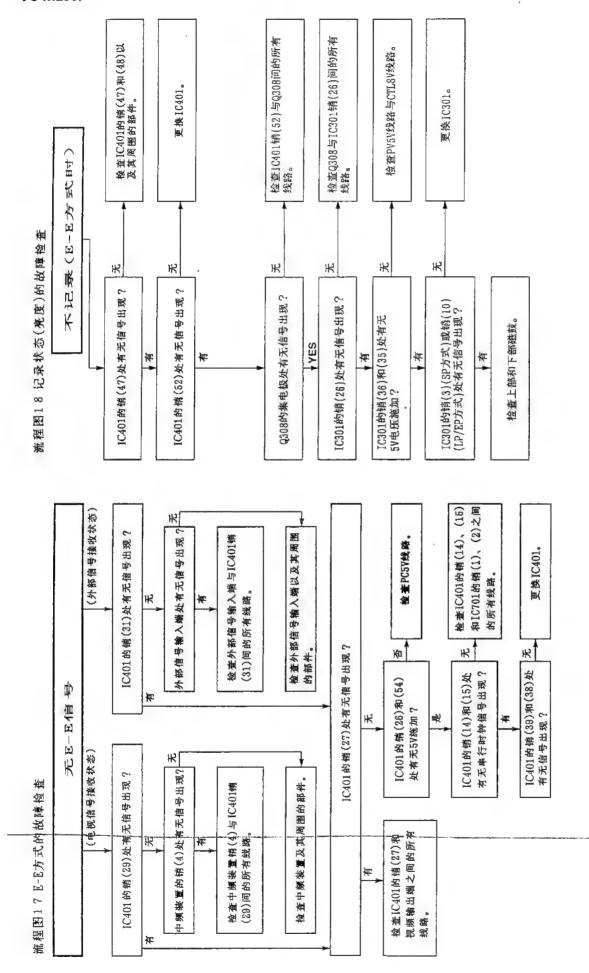



**(** ) ai


(1)

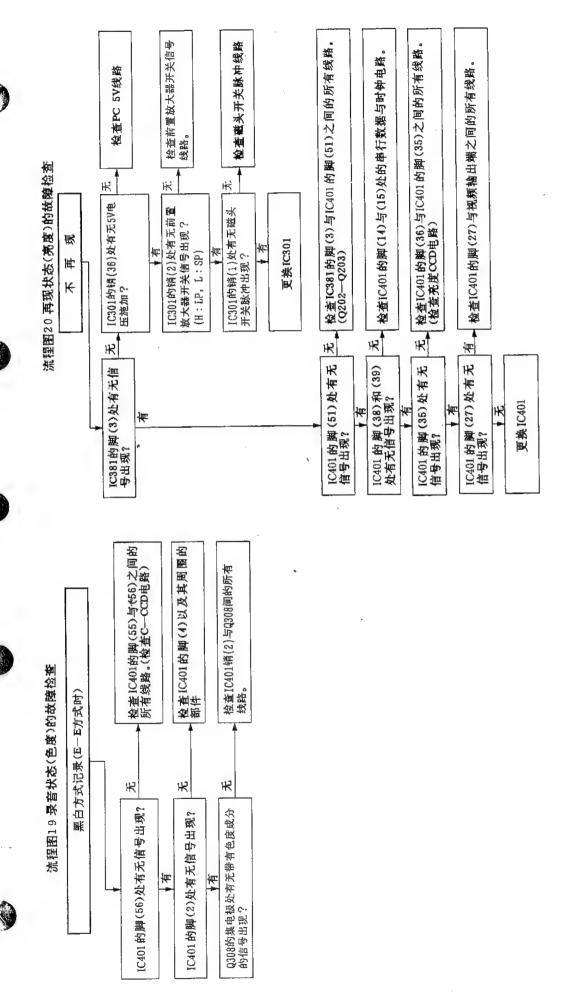


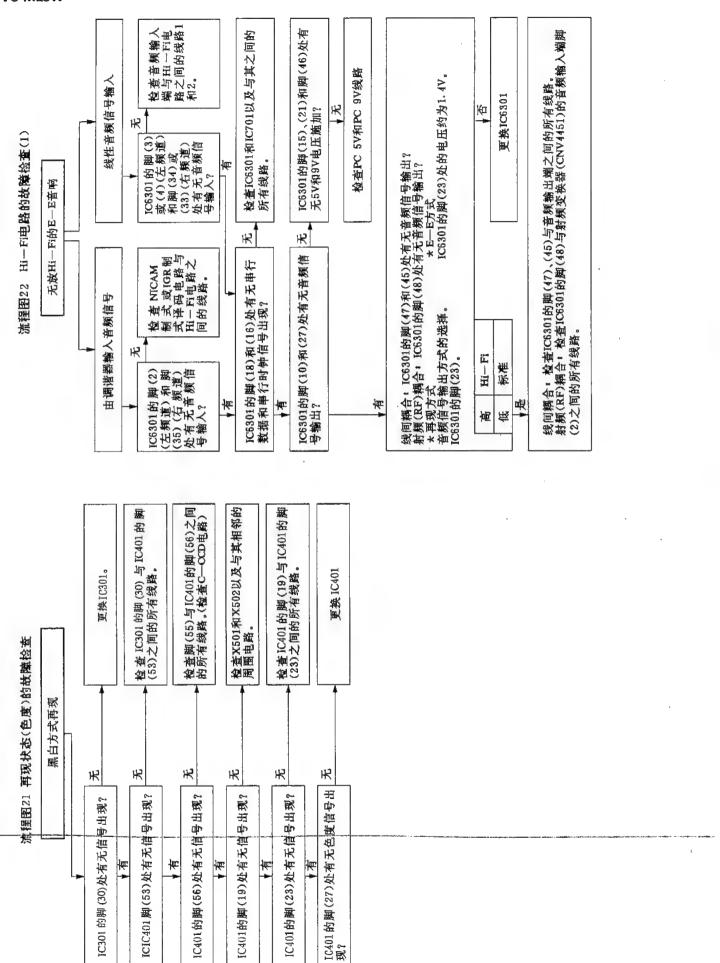


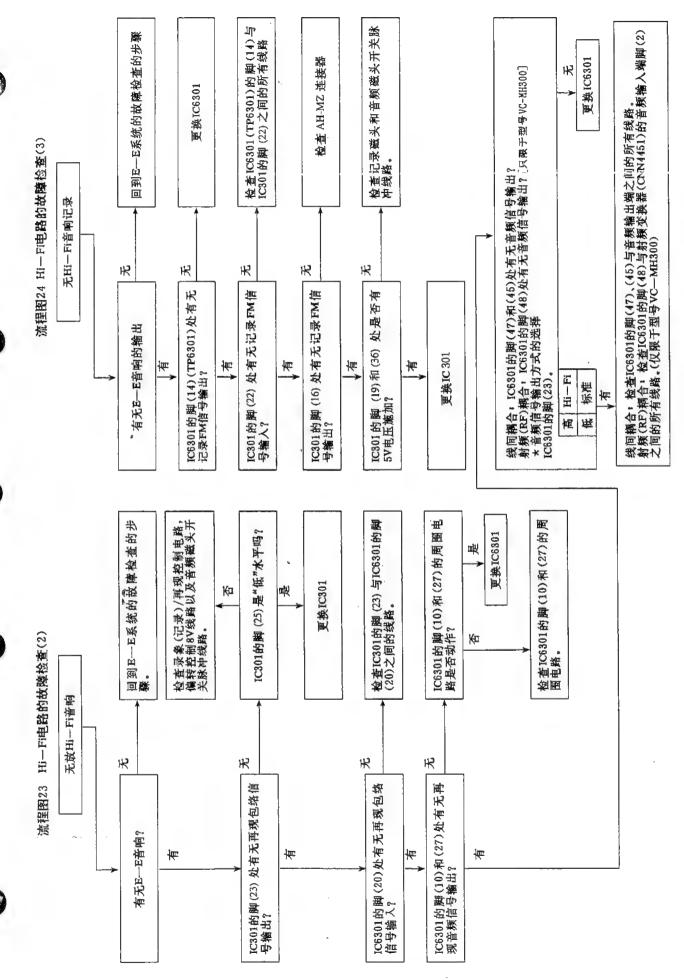

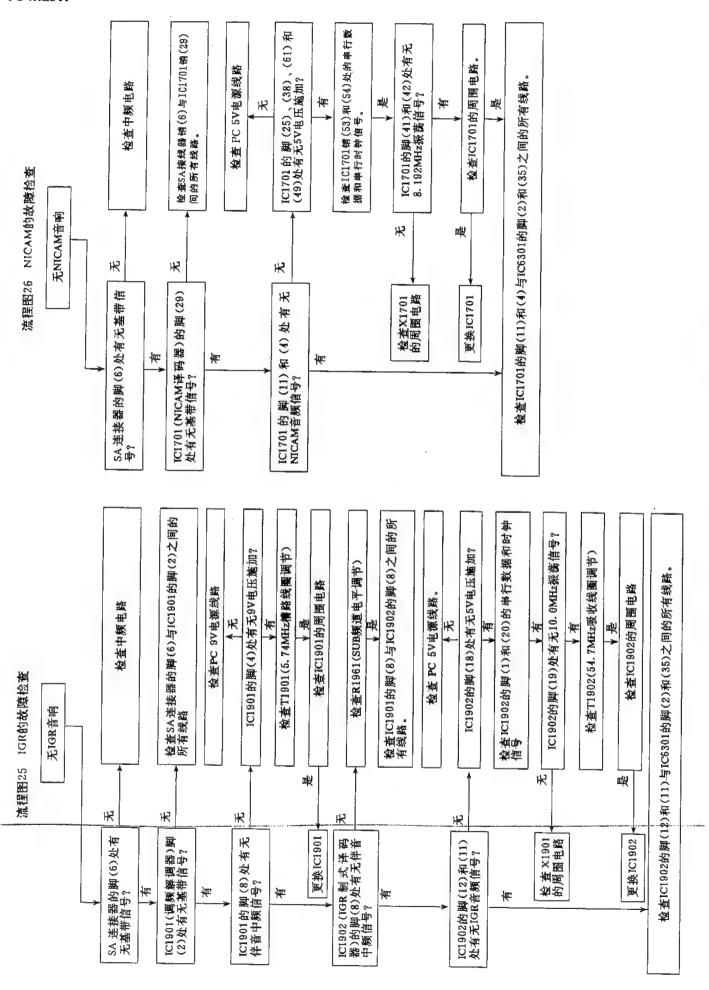


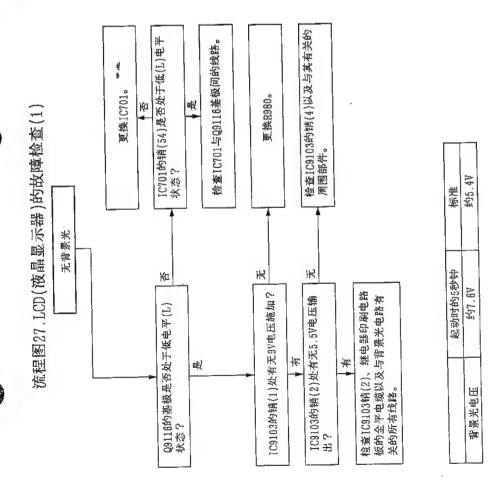

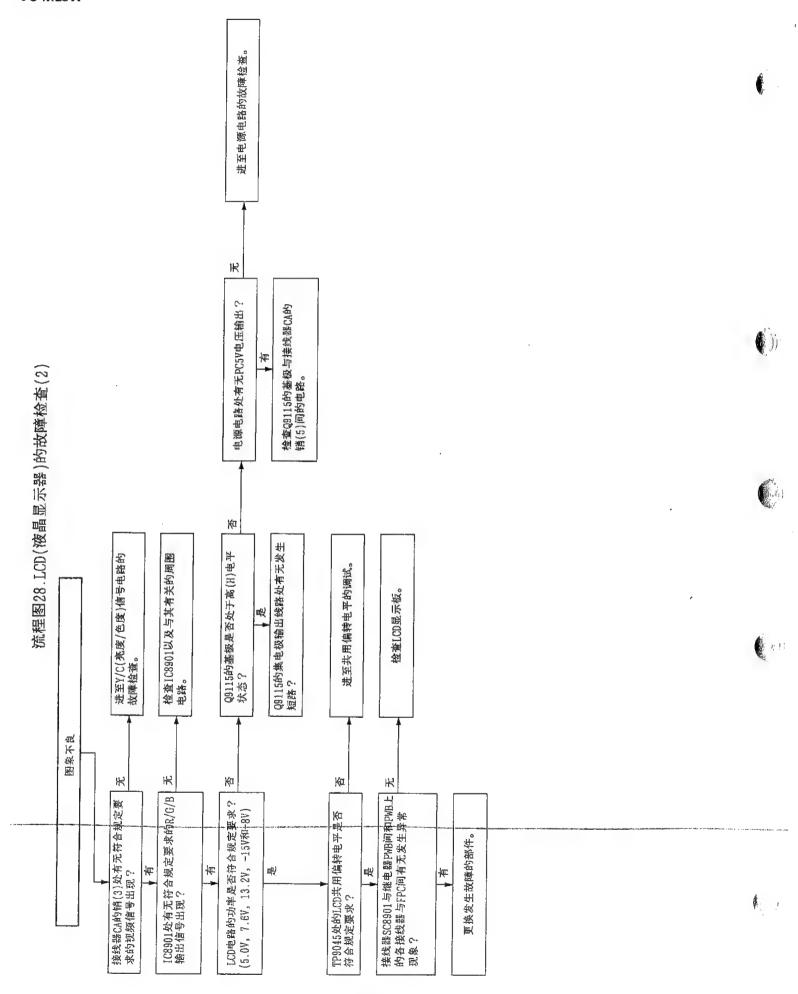

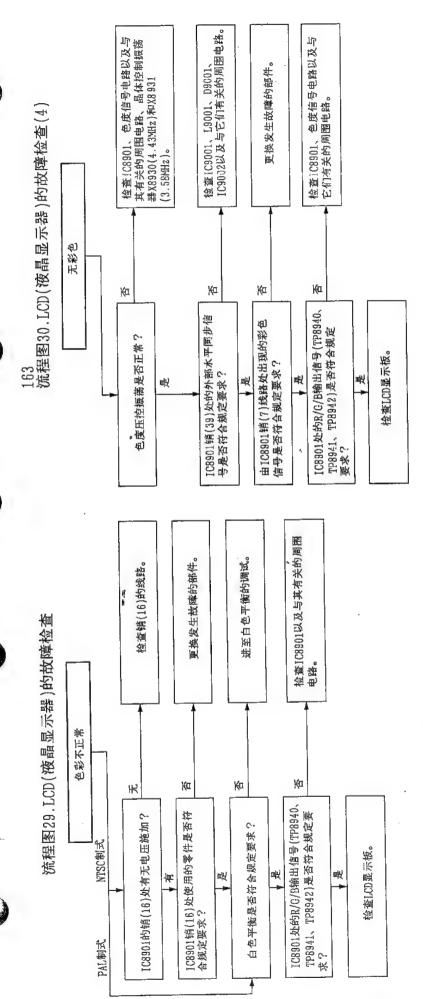

往意:只使用PAL和NTSC3.58制式时,在液晶显示板变屏上会出现色彩。在使用SBCAM制式、NTSC4.43制式及NTSC制式的NT→PAL电视状态下不会出现色彩。

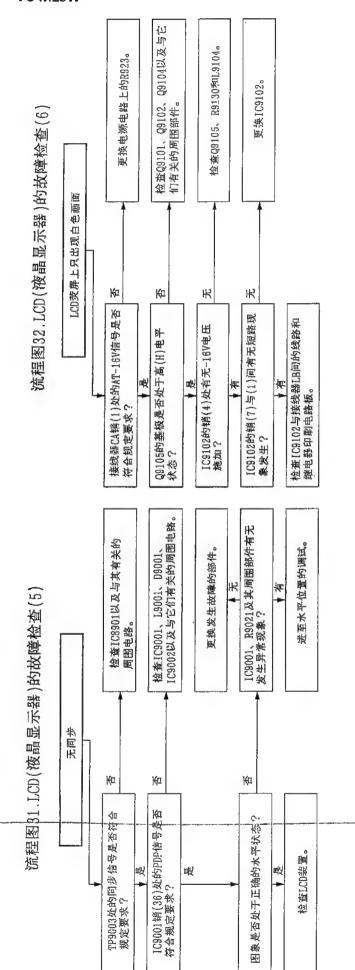

### IC703(EEPROM)的更换

《更换时的注意事项》


IC703(EEPROM)经更换后,必须重新编写设定其记忆数据。

- 1. 设录象机的电源开关于切断状态。(电源开关处于备用状态)
- 2.瞬间短接工作电路印刷电路板上的TP5001与TP5002之间。检查REC LED与定时器LED便点亮,以便进入调试状态,并在液晶显示器荧屏上显示出跨接销的编号(JP-0)。
- 3.触按频道上移(+)或下移(一)键,连续输入EEPROM地址码上的JPO至JP-31的功能编号(显示在液晶显示器荧屏上)。触按DISPLAY(显示)键以启动选定的功能,或者,触按CLEAR(取消)键以取消其功能。
  - \*触按DISPLAY(显示)键,便启记忆功能,REC LED和定时器LED会熄灭。
  - \*触按CLEAR (取消) 键,便停止记忆功能,REC LED和定时器LED会点亮。
- 4.继续输入JP-1至JP-31的功能编号。最后,再次瞬间短接测试点TP5001与TP5002之间,取 消调试状态设定,使录象机返回至标准状态(时钟显示状态)。

	序号	功能	ML3/ML3W/NL3	MH330				
定时器	JP0	COROUR 0	0	0				
	1	COROUR 1	0	0		•••••		
	2	VPS PDC	0	0	,		***************************************	
	3	SPATIALIZER	0	1	***************************************	***************************************		
	4	VCR 0	0	Ũ				
	5	VCR 1	0	0	F # # # # # # # # # # # # # # # # # # #			
	6	SYSTEM 0	1	1				
	7	SYSTEM 1	1	1				# # # # # # # # # # # # # # # # # # #
	8	R/C CODE	0	1				
	9	P-IN-P	0	0				777770000000000000000000000000000000000
	10	LCD	1	0				
	11		0	0				
	12	DUAL SCART	1	1				
	13	FRONT A/V	0	0				
	14	ĹP/EP	1 ,	1				
	15	(0: 00) OEM	1	1				
系统控制器	16	G-CODE0	1	1	**************	******************************		·
	17	G-CODE1	0	0	*************			
	18	NICAM 0	1	1	*****	***********************		
	19	NICAM 1	0	0				
	20	S. PICTURE	0	0	******************************			
	21	DECODER	0	0		******************		
	22	AUTO CLOCK/SORT	0	0			***************************************	
	23	Hi-Fi	1	1	*****		404000000000000000000000000000000000000	
	24	HEAD0	0	1		***************************************		***************************************
	25	HEAD1	1	0				
	26	NTSC SKEW	1	1 `				
	27	INSTANT REPLAY	1	1				******
	28		0	0	************		*************************	
	29		0	0				1001
	30	***************************************	0	0	-4	***************************************		
· 注音 ·	31		0	0				

(注意: "1" 意为;录象用发光二极管(REC LED)和定时器用发光二极管(TIMER LED)熄灭, "0" 意为;录象用发光二极管(REC LED)和定时器用发光二极管(TIMER LED)点亮)


# 8. BLOCK DIAGRAM 方框图 SERVO PROCESS/SYSTEM CONTROL BLOCK DIAGRAM 伺服处理/系统控制电路方框图

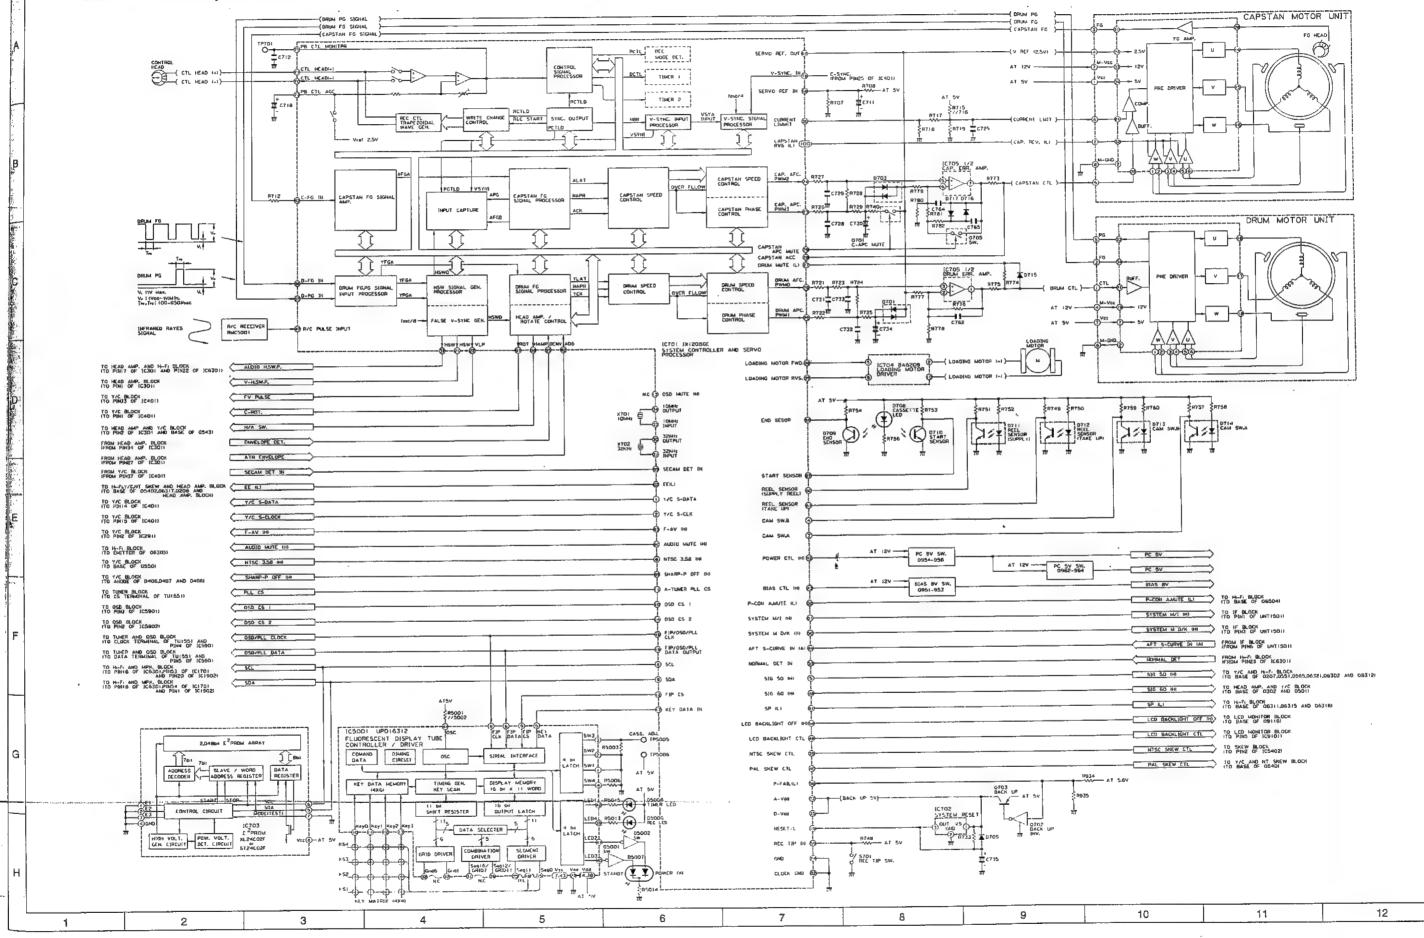


PAL NTGC ADJ PAL STOCK ADJ LL AMBLE MTGC ADJ LL VC-ML3 VC-ML3 VC-ML3W VC-ML3W E-E Signal Recording Chrominance Signal Playback Chrominance Signal E-E信号 记录色度信号 SIGNAL FLOW BLOCK DIAGRAM 信号流程方框图 再现色度信号 **Recording Luminance Signal** Playback Luminance Signal 记录亮度信号 再现亮度信号 EE 8.1
IFROM PIN92
OF 1C701)
SIG 60 Ind
IFROM PIN48
OF 1C7011
777 SW FROM IF PACK ICES I XF CED CLOCK FROM PING OF ICADI R212 C211 L205 LINE-I INTREARD REC ME SHARP-P CTL 0406-411. 0417-418 444. R430 HARD ADJ SUB L.P.F. Y,NR. PICTURE الله الله PB 250mVp-p DO DET. MAIN EMPH. SYNC. SEP. MAIN EMPRICARRIER
OFFSETI
W.C / D.C - C217 | Ia/DEV. 10 / DEV. IC401 HA8201CF YC PROCESSOR YC MIX. FINT OF 1C5402 OSD/PLL CLOCK (FROM PINIS OF 1C701) OSD/PLL DATA (FROM PINIS OF 1C701) REC BOOMVP-P D g.p.F. ACC BUFF. 0308 REC 8,500mVp-p APC B.P.F. HEAD AMP SW FROM PINSS OF ICTO! R301 BTAS SV SFROM SMITTER OF Q9511 COLDUR 1.4V B/W 2.5V PB 8,300 4,43MHz PEC B. 108mVp-p PB B. 113.3mVp-p 627KRz HI-FI PB/REC AMP. PB B, 188.8mVp-p REC B, 180mVp-p 4,43hetz FROM PINS OF ICADI REC 8.180mVp-p PB 8,188,8mVp-p PB 8,377,6mVp-p OR LPF. PB B.377.6mVp-P CNR FB 1 LEVEL DET. KILLER DET, OUT REC AFC PB APC Y/C VIDEO FROM PIN27 OF 16401 2.256Hz L.P.F. Y-Vcc -REC B, 180mVp-P PB B, 188.6mVp-P 73.0V REC B.180mVp-p PB B.186.5mVp-p 627KHs CONVERTOR BAND GAP 21L VCD . NTSC SKEW CONTROL FROM PIN39 OF 10701 S-DET. B/W 2.4V FROM PINES OF 1C701 05402 R510 CCD CTL (TO PIN3 OF 102021 \_ SIG. SO (H) MESECAM DET INI (FROM PINES OF 10701) 11 9 3 136 135


VC-M

VC-ML3

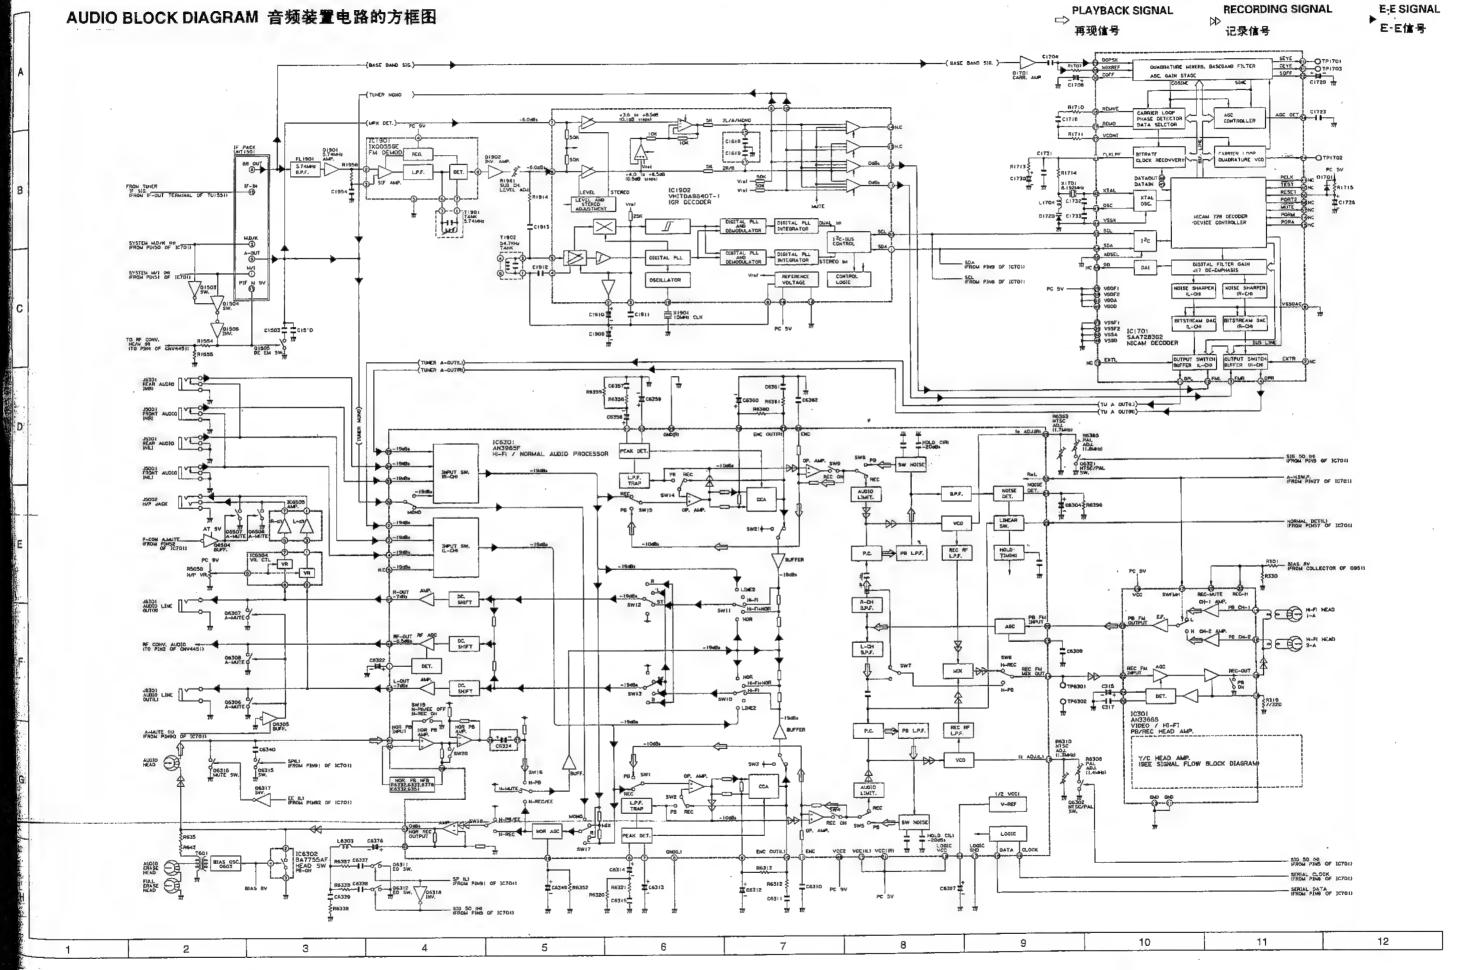

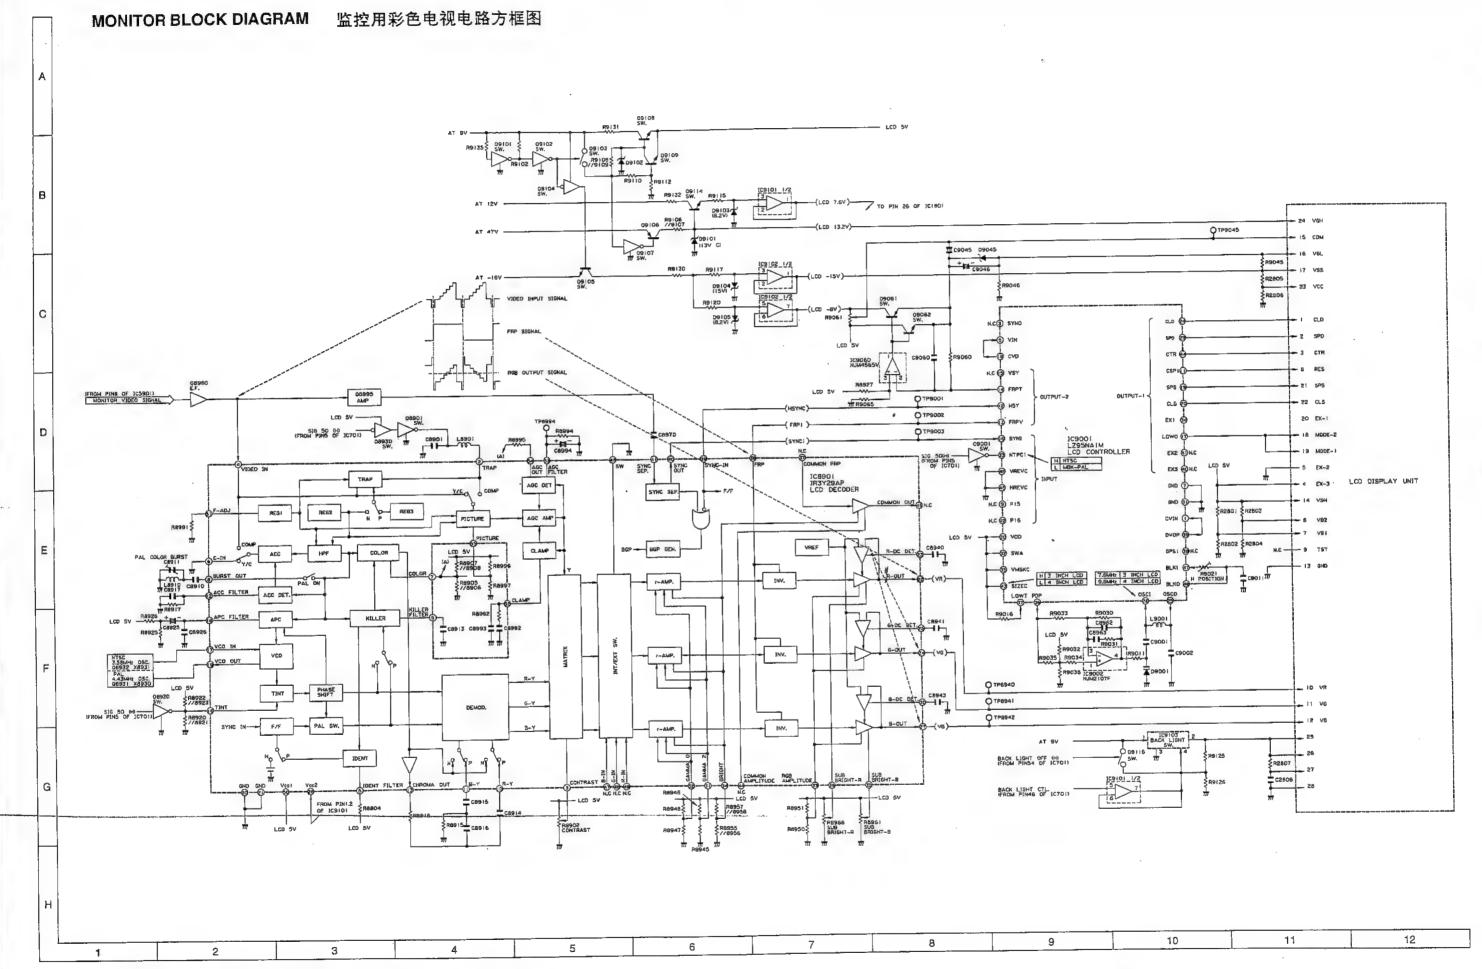

( )

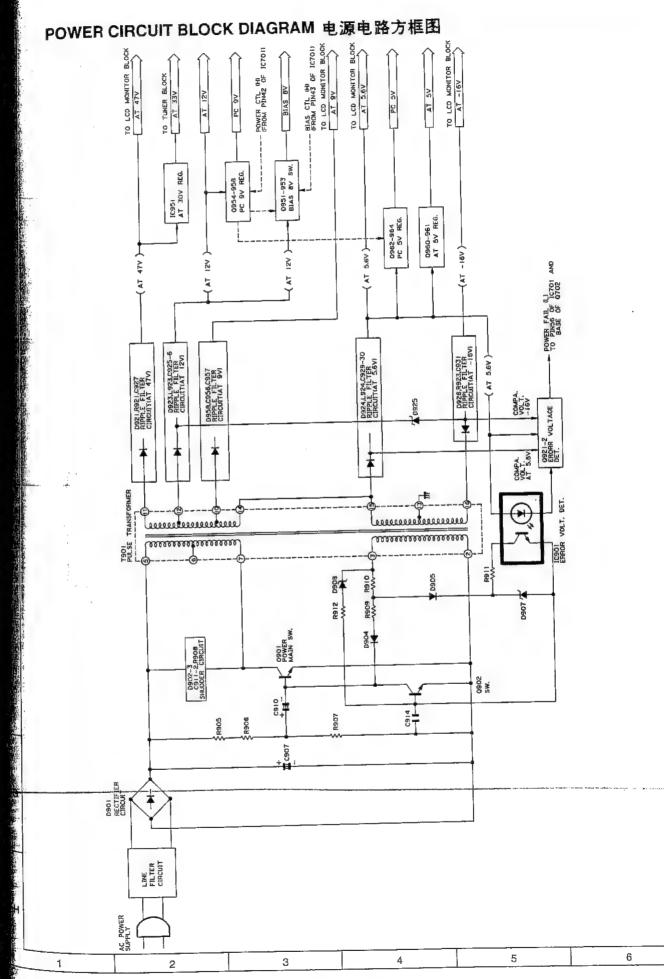

### SCHEMATIC DIAGRAM

### 电路原理图

IMPORTANT SAFETY NOTICE:

BE SURE TO USE GENUINE PARTS FOR SE-CURING THE SAFETY AND RELIABILITY OF THE

PARTS MARKED WITH " A " AND PARTS SHADED (IN BLACK) ARE ESPECIALLY IMPOR-TANT FOR MAINTAINING THE SAFETY AND PROTECTING ABILITY OF THE SET.

BE SURE TO REPLACE THEM WITH PARTS OF SPECIFIED PART NUMBER.

### 安全使用注意要点:

为了保证本装置的安全性及可靠性、务请 使用该型号装置的原配零件。

注有 本标记, 以及打有黑色阴影线的部分, 对于保护本装置的安全、保持其使用性能及使 用寿命极其重要。

更换这些部件时,务请使用规定编号者。

#### SAFETY NOTES:

- 1. DISCONNECT THE AC PLUG FROM THE AC OUTLET BEFORE REPLACING PARTS.
- 2. SEMICONDUCTOR HEAT SINKS SHOULD BE REGARDED AS POTENTIOL SHOCK HAZARDS WHEN THE CHASSIS IS OPERATING.

### 安全使用注意事项:

- 1.在进行部件更换之前, 务请拔出电源插头。
- 2.本装置工作时, 机芯底盘的半导体散热片有 触电之虑、务请注意。

#### NOTES:

- 1. The unit of resistance "ohm" is omitted (k=1000 ohm, M=1 Meg ohm).
- 2. All resistors are 1/8 watt, unless otherwise noted.
- 3. The unit of capacitance "F" is omitted (μ=μF, p=μμF).
- 4. The values in parentheses are the ones in the PB mode; the values without parentheses are the ones in the REC mode.

## VOLTAGE MEASUREMENT CONDITIONS:

- 1. DC voltages are measured between points indicated and chassis ground by VTVM, with AC110~240V, 50/60Hz supplied to unit and all controls are set to normal viewing picture unless otherwise noted.
- 2. Voltages are measured with 10000µV B & W or colour noted.

WAVEFORM MEASUREMENT CONDITIONS: 10000µV 87.5 percent modulated colour bar signal is fed into tuner.

#### 电路单位说明:

- 1. 电阻"欧姆"(Ω)单位予以略记(K=千欧, M= 兆欧姆)。
- 2. 除特别说明者外,图中电阻功率均为1/8瓦
- 3. 电容"法拉"(F)单位予以略记(µ=微法 拉、P=微微法拉)。
- 4。在括弧内的数值为PB状态,无括弧的数值 为REC状态。

#### 电压测定条件

- 1.除特别说明者外, 直流电压是以AC110~ 240V, 50/60Hz交流电源供给本装置时,将 所有控制调节都调至正常状态后, 把VTVM (电子管电压表)连接于测点与底盘接地之间 所得的读数。
- 2. 电压由10000 µ V黑白或彩色信号测定。


#### 波形测定条件:


向调谐器输入10000 u V的87.5%调制色带 信号的状态时进行测量。

#### CAUTION:

This circuit diagram is original one. Therefore there may be a slight difference from yours.

这里的电路原理图均为最初设计原图,与您的机器 的电路原理图可能有不同之处。

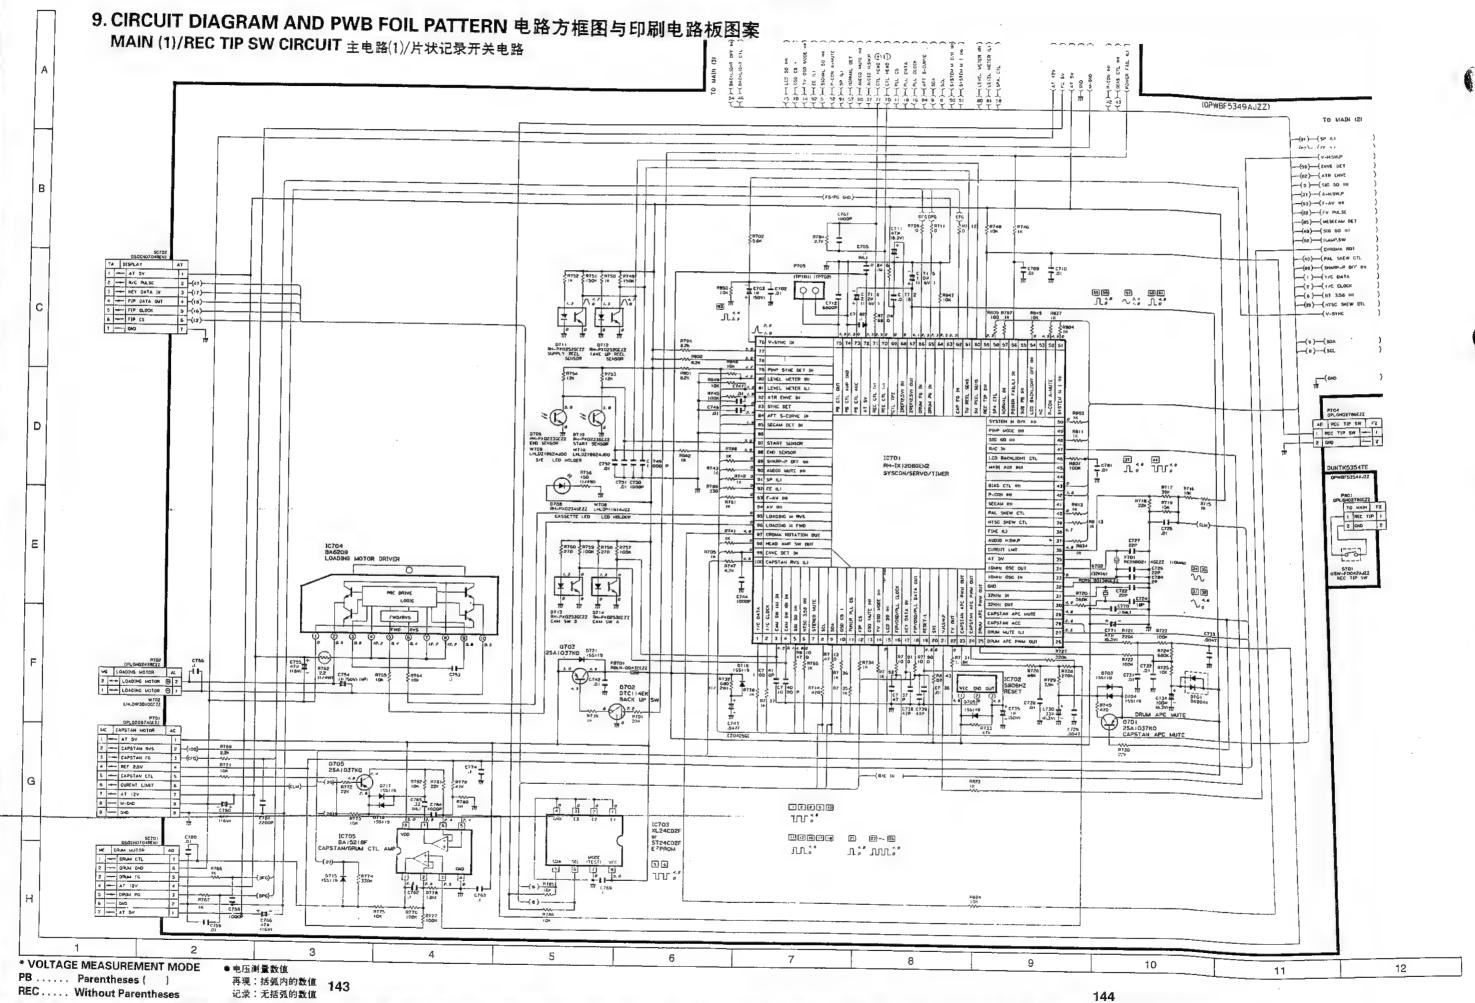

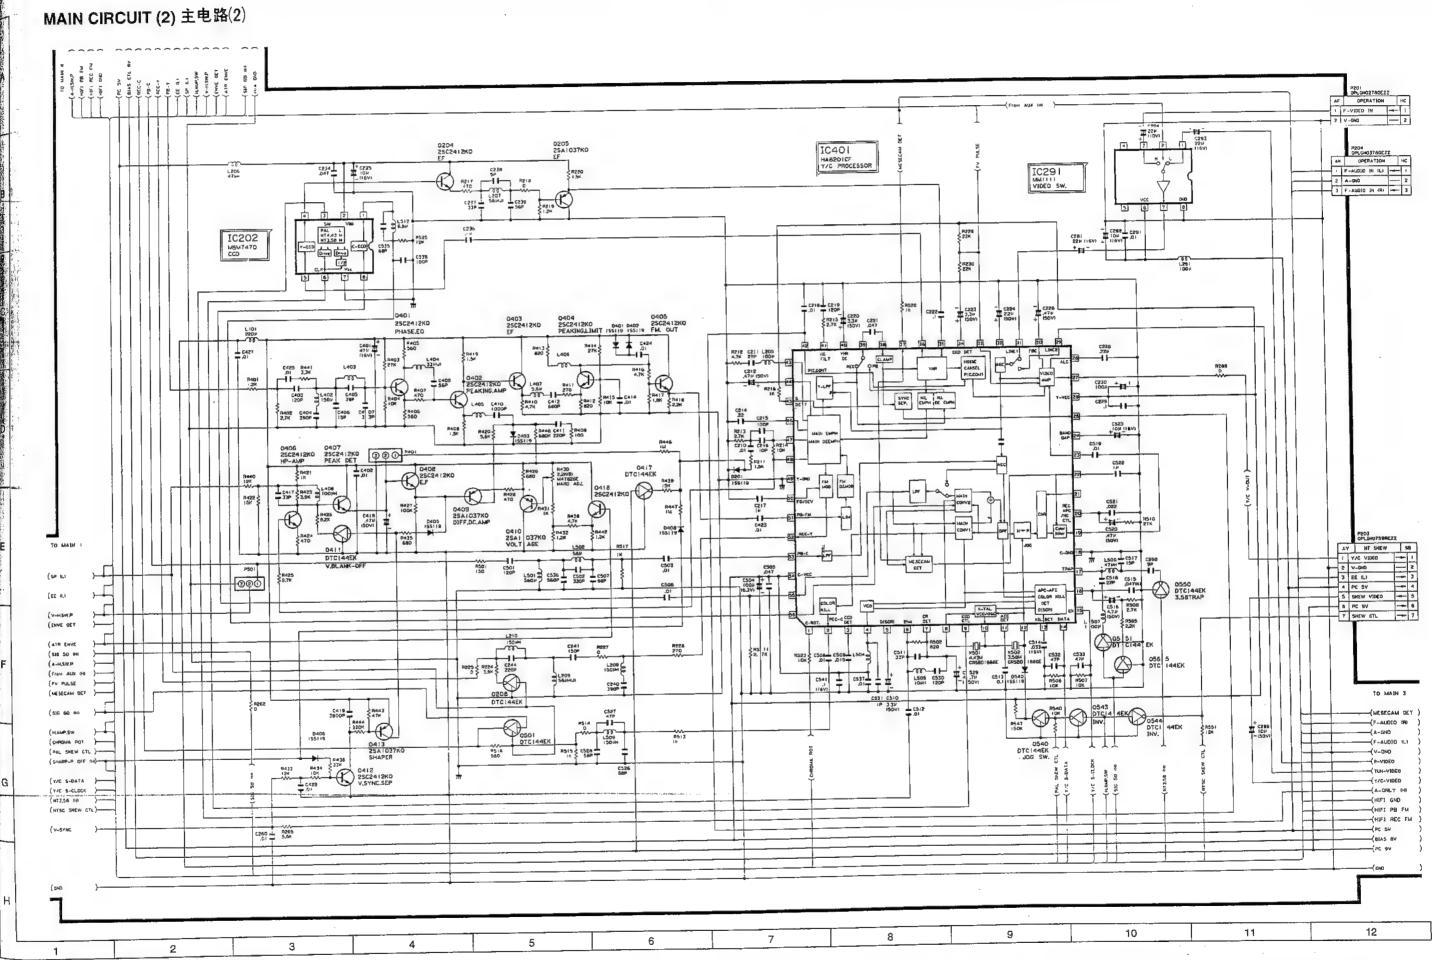


\* VOLTAGE MEASUREMENT MODE
PB . . . . . Parentheses ( )
REC . . . . Without Parentheses

●电压测量数值 再现:括弧内的数值 记录:无括弧的数值

数值 数值 145

REC ..... Without Parentheses

记录:无括弧的数值

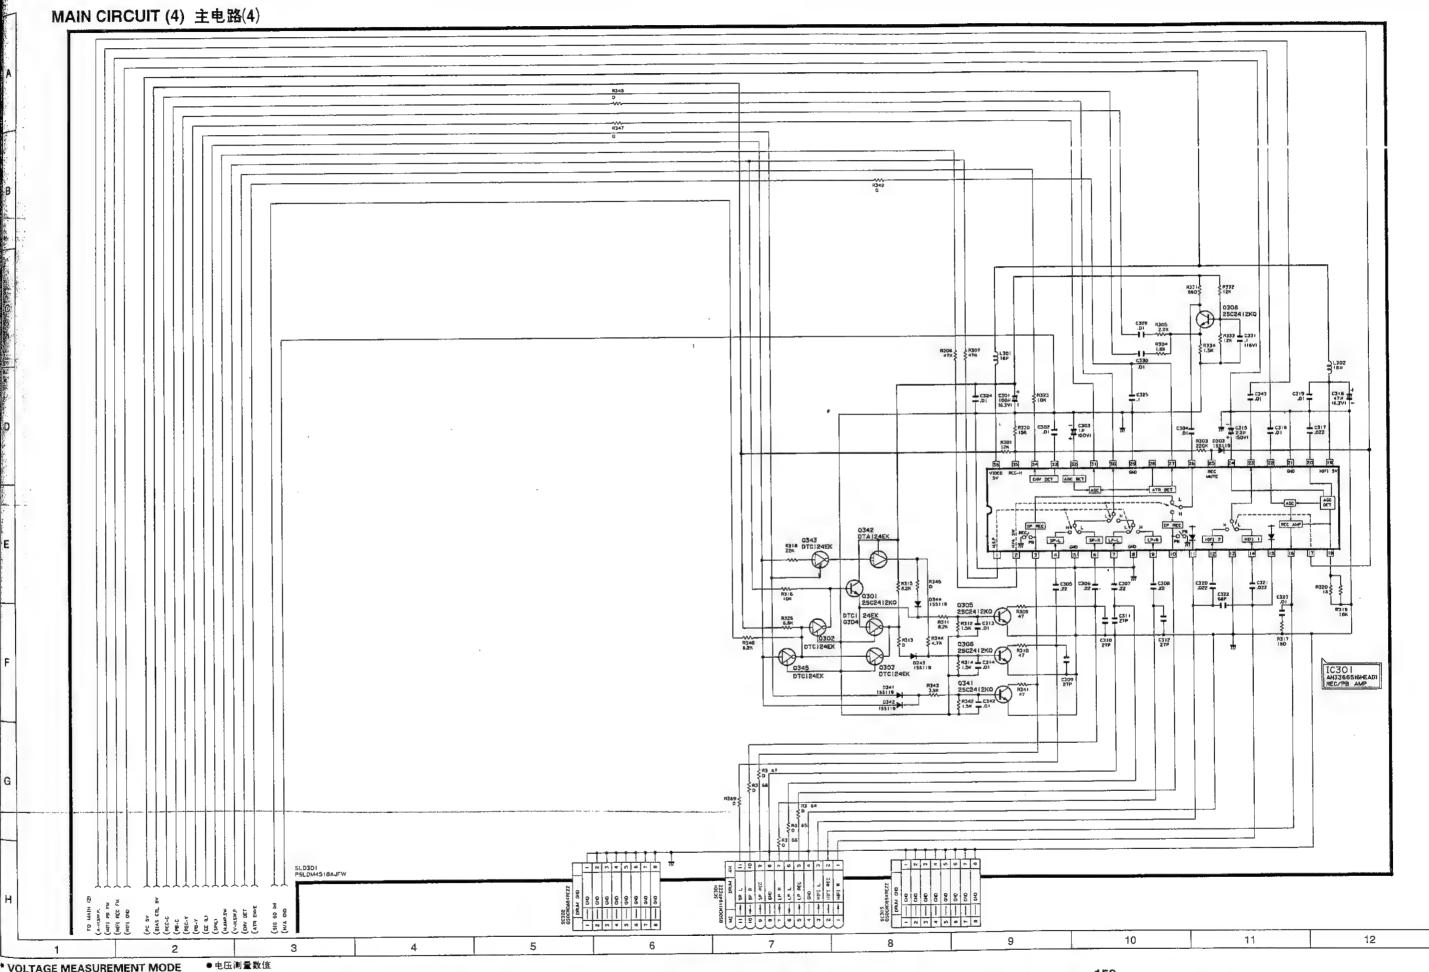


\* VOLTAGE MEASUREMENT MODE


PB ..... Parentheses ( ) REC . . . . Without Parentheses


再观:括弧内的数值 记录:无括弧的数值

149

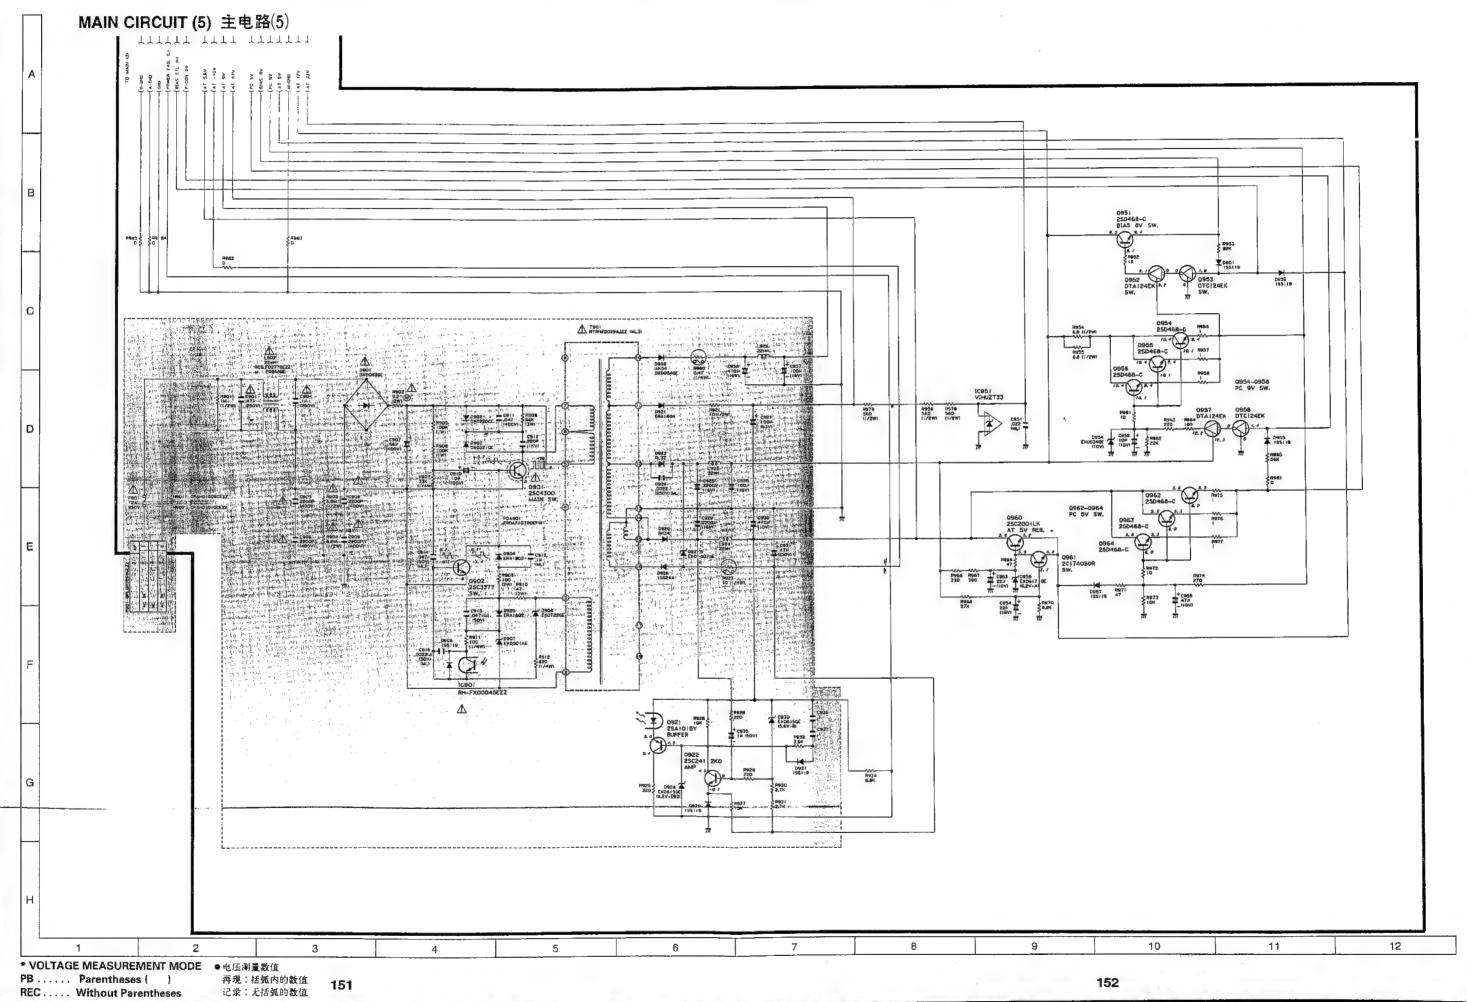

152

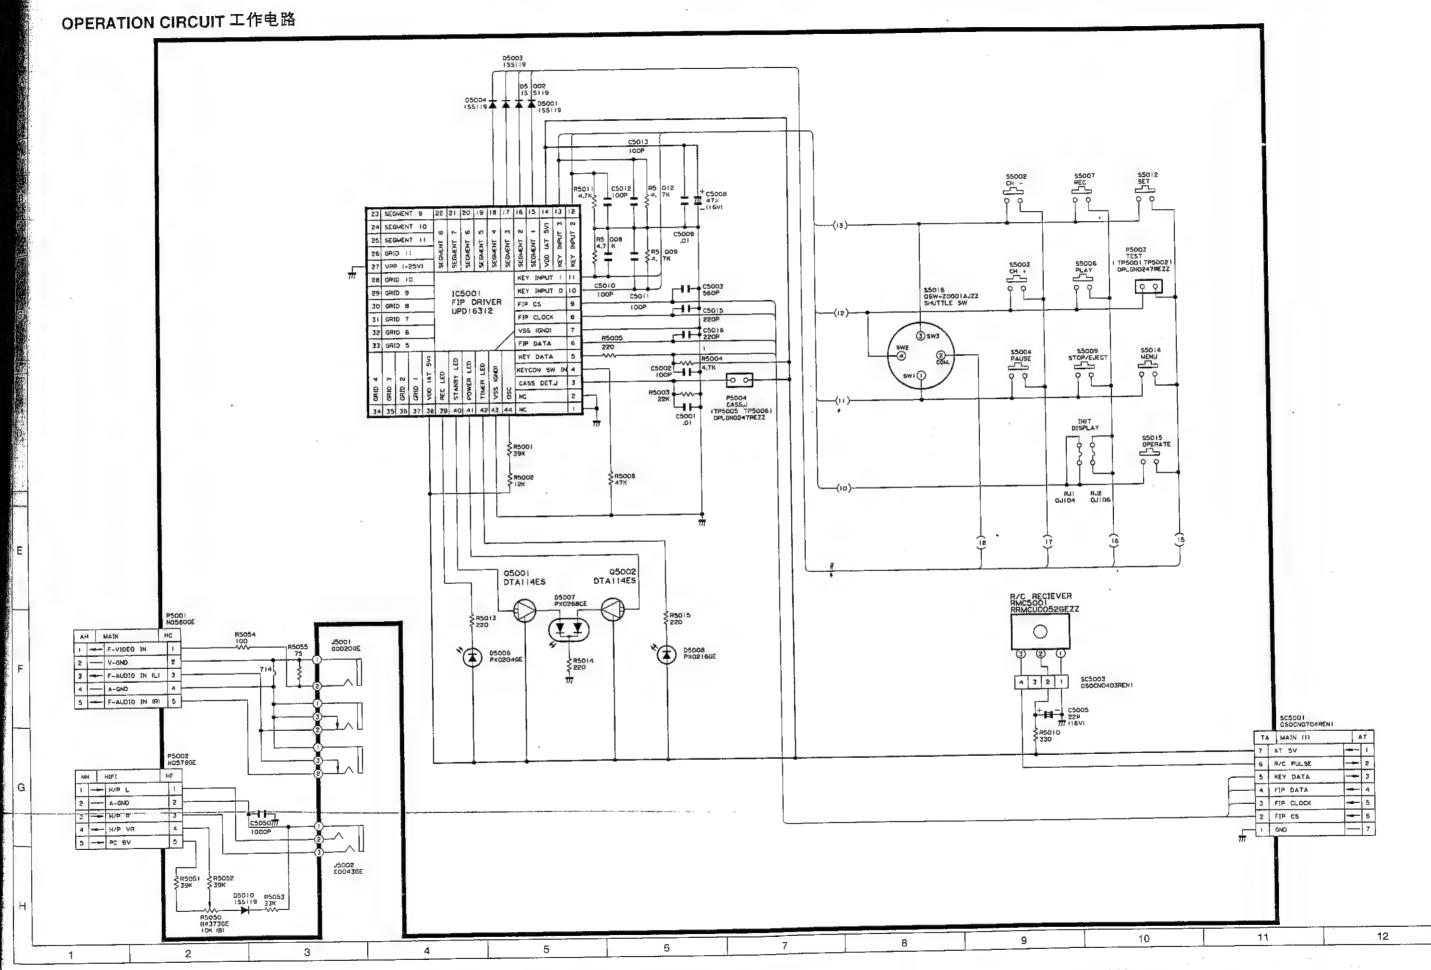


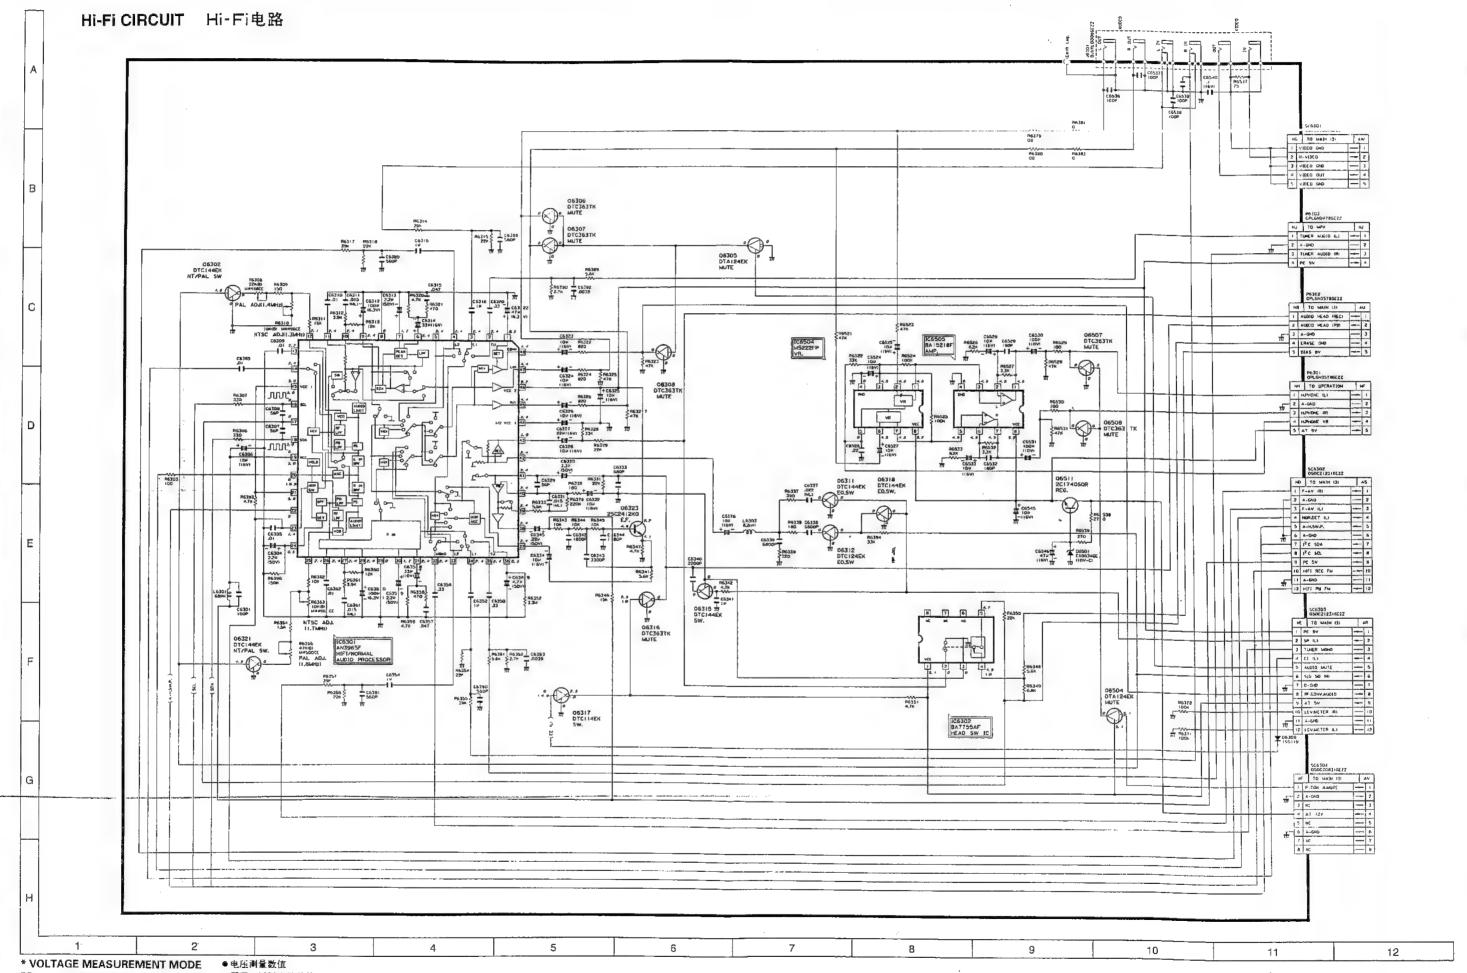

PB . . . . . Parentheses ( )

REC . . . . Without Parentheses

再现:括弧内的数值 记录:无括弧的数值 155

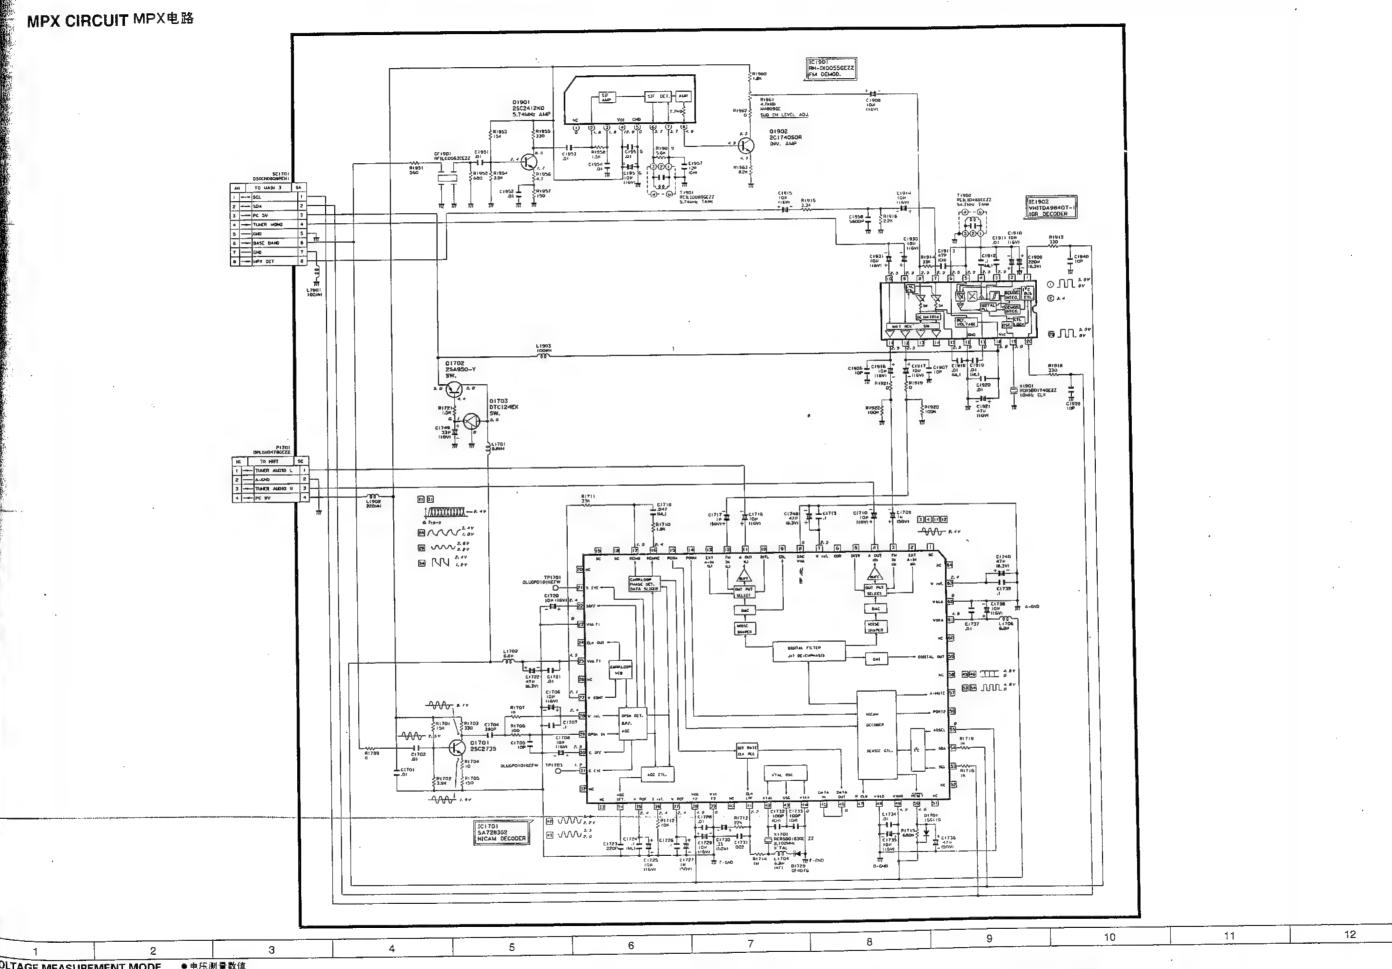



VOLTAGE MEASUREMENT MODE

C..... Without Parentheses

●电压測量数值 再现:括弧内的数值 记录:无括弧的数值

157

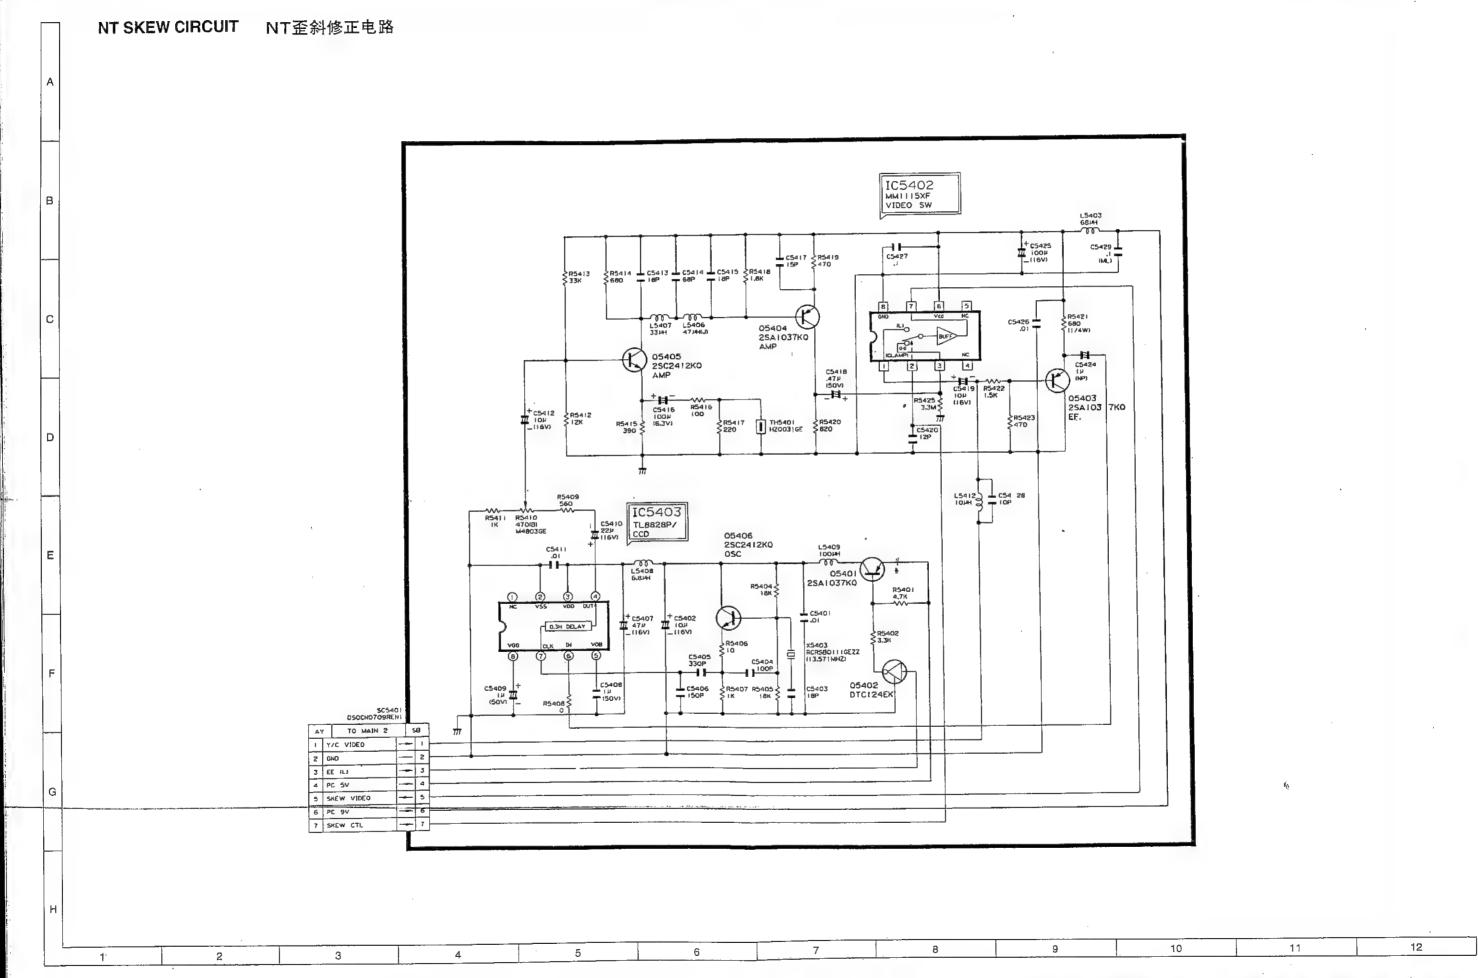

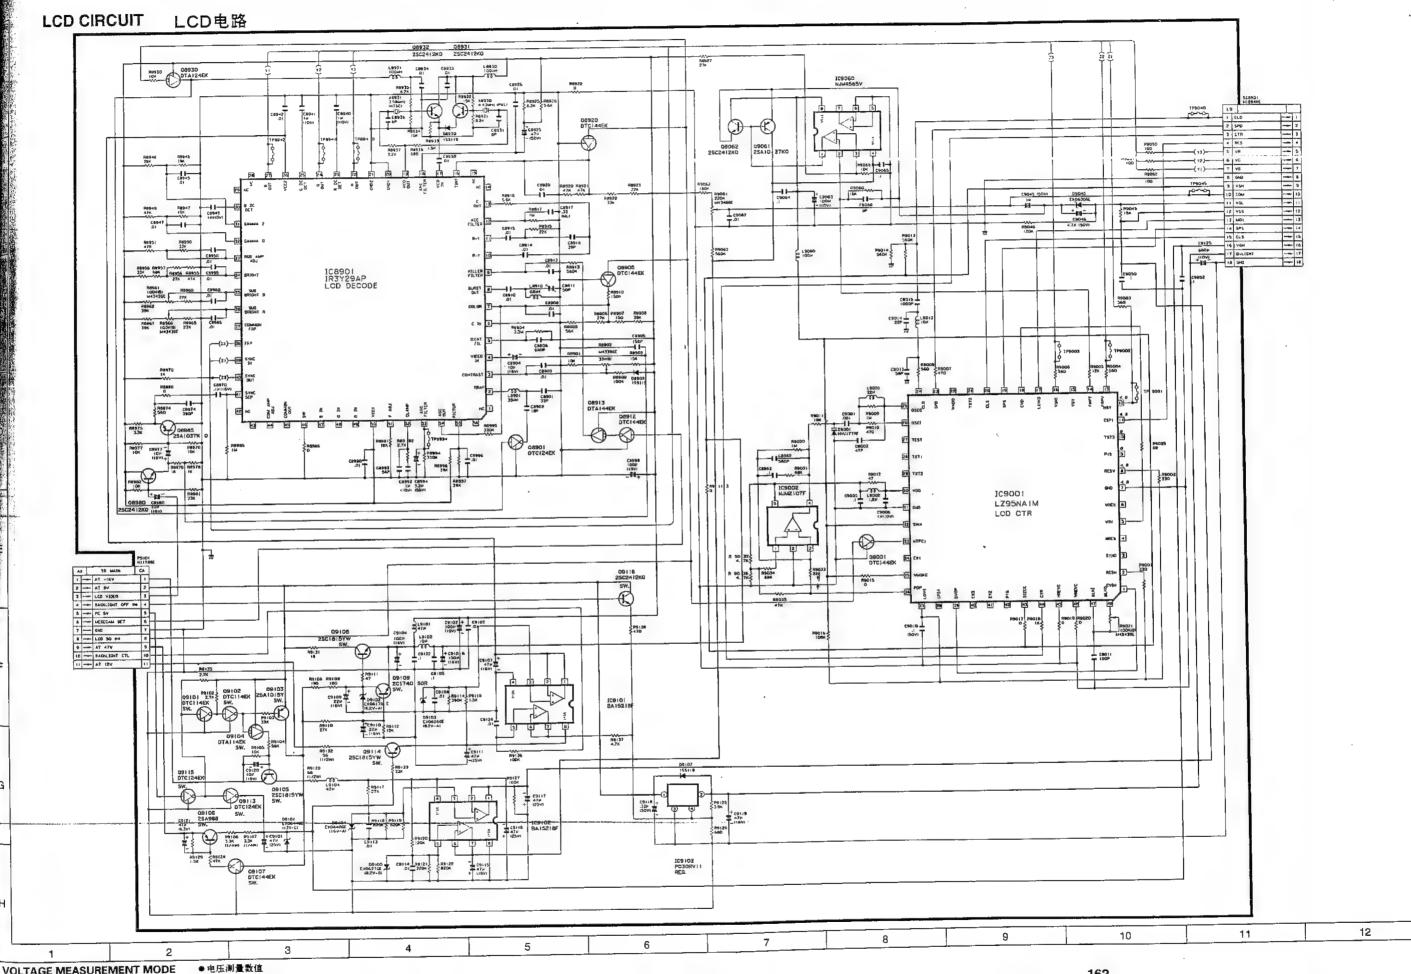


\* VOLTAGE MEASUREMENT MODE PB ..... Parentheses ( )

REC ..... Without Parentheses

再现:括弧内的数值 记录:无括弧的数值

161

VC-ML3 VC-ML3 VC-ML3W

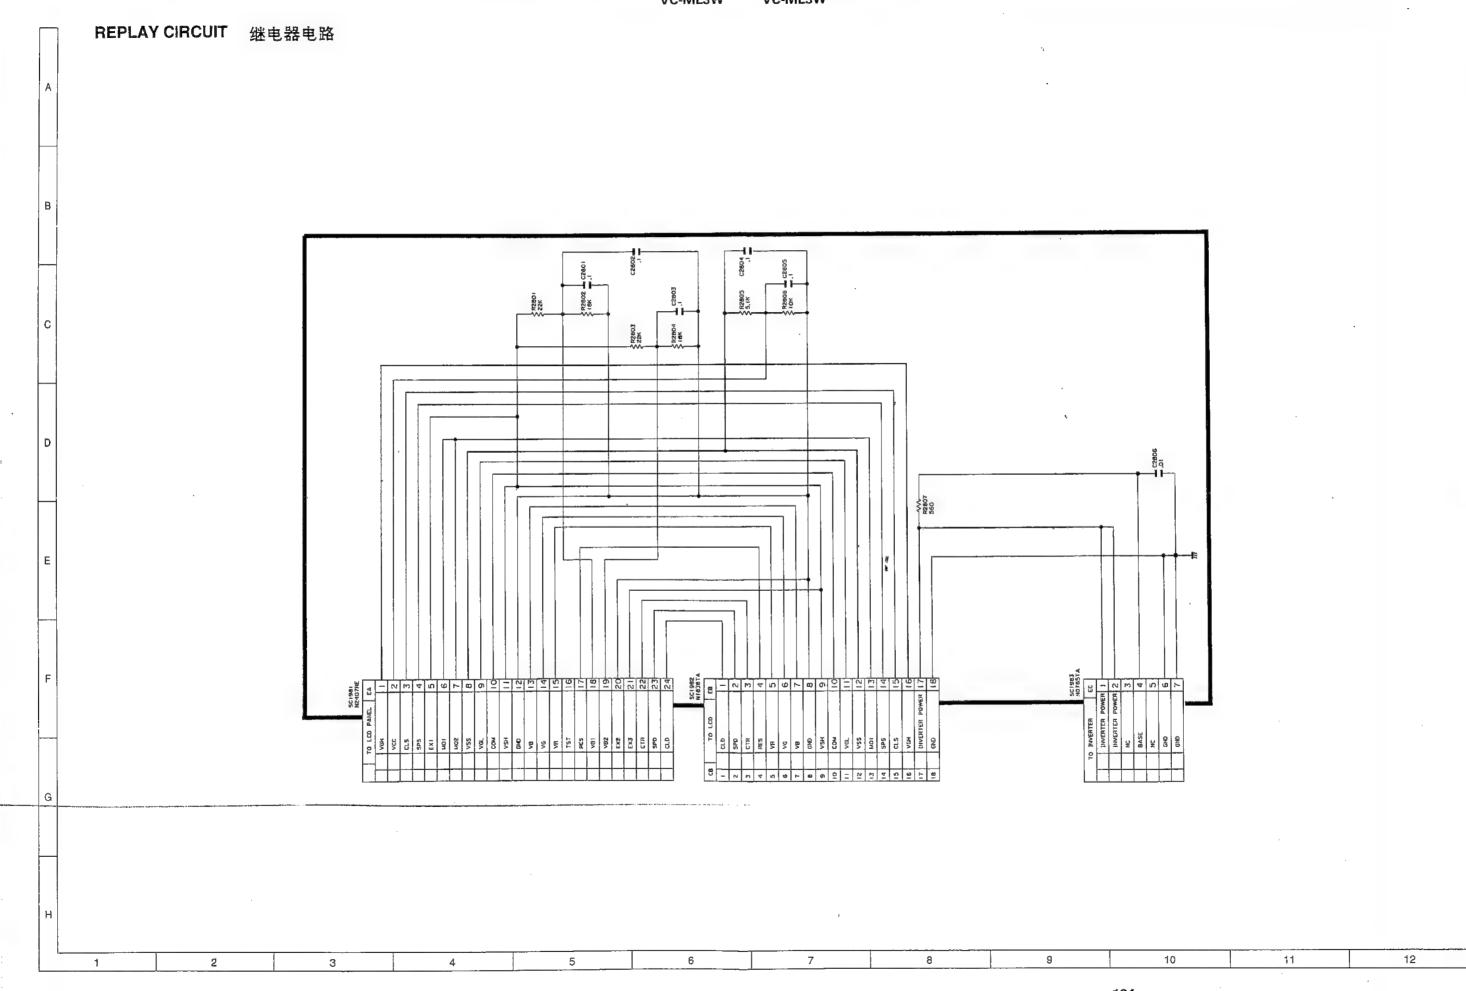

# PWB FOIL PATTERN 印刷电路板图案 12 NA12 12 P44D3 AS TTR1413 000 CIRCUIT 1,002 OWER AGC C906 -- C907+ **REC TIP PWB** 片状记录开关电路印刷电路板 R | 587 0 Ö R811 - R806 - R806 - R807 R813 0 00 00


MAIN PWB

主电路印刷电路图

12

11

3

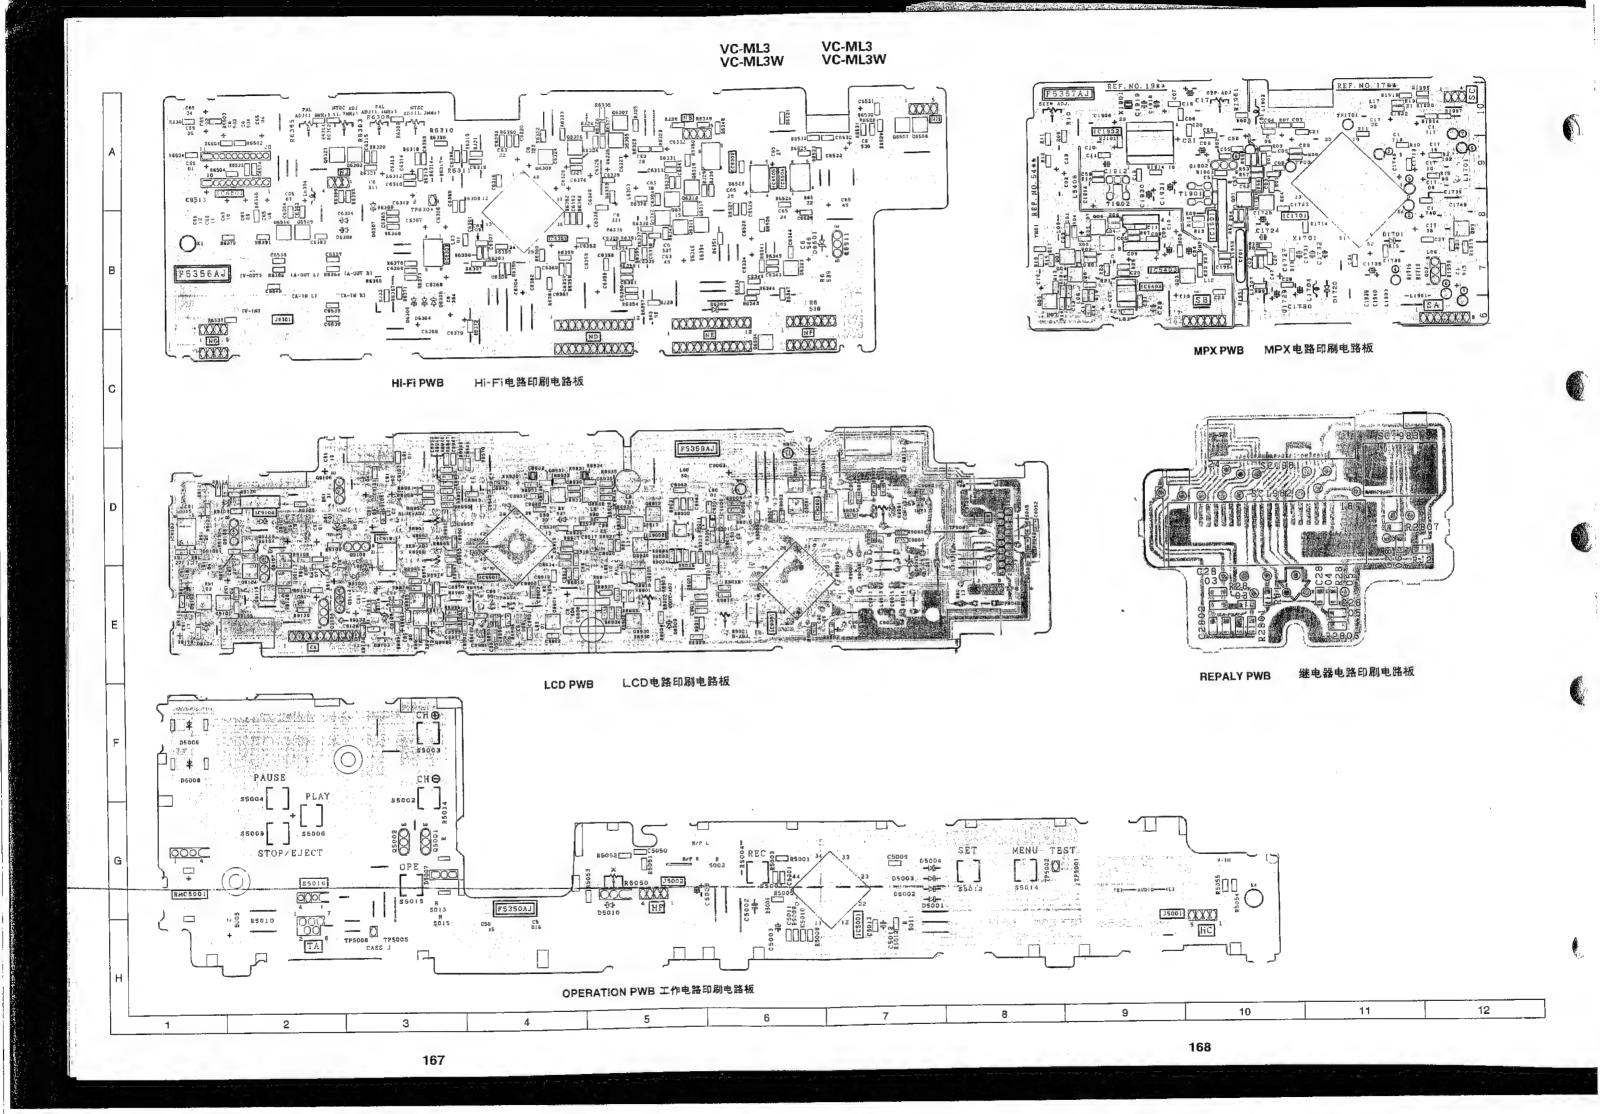

# 10. REPLACEMENT PARTS LIST PARTS REPLACEMENT


Many electrical and mechanical parts in video cassette recorder have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which does not have the same safety characteristics as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

#### "HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

- 1. MODEL NUMBER
- 2. REF. NO.
- 3. PART NO.
- 4. DESCRIPTION
- 5. PRICE CODE

## HOW TO IDENTIFY CHIP TRANSISTORS AND DIODES BY ITS MARKING

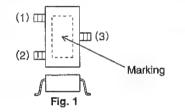

- (1) Base/Input
- (2) Emitter/Ground
- (3) Collector/Output

Package		Marking	Parts No.
Fig. 1	a	15	VSDTA124EK/-1
Fig. 1	ř	25	VSDTC124EK/-1
Fig. 1		24	VSDTC114EK/-1
Fig. 1		26	VSDTC144EK/-1
Fig. 1		16	VSDTA144EK/-1
Fig. 1		BQ	VS2SC2412KQ-1
Fig. 1		FQ	VS2SA1037KQ-1

MARK ★: SPARE PARTS-DELIVERY SECTION.

Ref. No.	Part No.	*	Description	Code

## PRINTED WIRING BOARD ASSEMBLIES

(NOT REPLACEMENT ITEM)

DUNTK5349XM50	-	Main Unit (VC-ML3)	
DUNTK5349XM53	-	Main Unit (VC-ML3W)	
DUNTK5350XM50	-	Operation Unit	_
DUNTK5354XM50	-	Rec Tip Unit	_
DUNTK5356XM50	-	Hi-Fi Unit	_
DUNTK5357XM50	-	MPX Unit	

Ref. No.	Part No.	*	Description	Code
	DUNTK5359XM50	-	LCD Unit	_
	DUNTK5369XJ6B	-	Relay Unit	

### DUNTK5349XM50 (VC-ML3) DUNTK5349XM53 (VC-ML3W) MAIN UNIT

#### TUNER AND ASSEMBLY

CNV4451	RCNVR0146GEN9	J	Converter (VC-ML3)	BB
CNV4451	RCNVR0146GEZZ	J	Converter (VC-ML3W)	ВС
TU1551	VTUVTSR6HZ53/	J	Tuner	BD
UNT1501	RiELL0655GE77	.1	IF-Pack	BH

#### INTEGRATED CIRCUITS

IC202	VHIMSM7470M-1	J	MSM7470	BD
IC291	VHiMM1111XF1E	J	MM1111	ΑE
1C301	VHiAN3366S/-1	J	AN3366S	AP
IC401	VHiHA8201CF-1	J	HA8201CF	AW
IC701	RH-iX1208GEZZ	J	IX1208GE	AZ
IC702	VHIS806HZ//-1	J	S806HZ	AC
IC703	VHIXL24C02F-1	J	XL24C02F	AH
IC704	VHiBA6209//1E	J	BA6209	AG
IC705	VHiBA15218F1E	J	BA15218F	AF
IC951	VHiUZT33///-1	J	UZT33	AC
IC2401	VHiLA7217M/-1	J	LA7217M	AG
IC5901	RH-iX1343GEZZ	J	IX1343GE	AQ
IC5902	VHINJM2533M-1	J	NJM2533M	AF
IC5950	VHiTC4S66F/-1	J	TC4S66F	AD

### **TRANSISTORS**

Q204	VS2SC2412KQ-1	J	2SC2412KQ	AA
Q205	VS2SA1037KQ-1	J	2SA1037KQ	AA
Q208	VSDTC144EK/-1	J	DTC144EK	AB
Q301	VS2SC2412KQ-1	J	2SC2412KQ	AA
Q302	VSDTC124EK/-1	J	DTC124EK	AB
Q303	VSDTC124EK/-1	J	DTC124EK	AB
Q304	VSDTC124EK/-1	J	DTC124EK	AB
Q305	VS2SC2412KQ-1	J	2SC2412KQ	AA
Q306	VS2SC2412KQ-1	J	2SC2412KQ	AA
Q308	VS2SC2412KQ-1	J	2SC2412KQ	AA
Q341	VS2SC2412KQ-1	J	2SC2412KQ	AA
Q342	VSDTA124EK/-1	J	DTA124EK	AB
Q343	VSDTC124EK/-1	J	DTC124EK	AB
Q345	VSDTC124EK/-1	J	DTC124EK	AB
Q401	V\$2SC2412KQ-1	J	2SC2412KQ	AA
Q402	VS2SC2412KQ-1	J	2SC2412KQ	AA
Q403	VS2SC2412KQ-1	J	2SC2412KQ	AA
Q404	VS2SC2412KQ-1	J	2SC2412KQ	AA
Q405	V\$2SC2412KQ-1	J	2SC2412KQ	AA
Q406	VS2SC2412KQ-1	J	2SC2412KQ	AA
Q407	VS2SC2412KQ-1	J	2SC2412KQ	AA
Q408	VS2SC2412KQ-1	J	2SC2412KQ	AA
Q409	VS2SA1037KQ-1	J	2SA1037KQ	AA
Q410	VS2SA1037KQ-1	J	2SA1037KQ	AA
Q411	VSDTC144EK/-1	J	DTC144EK	AB

Ref.	No.	Part No.	*	Description	Code	Ref	No.	Part No.	*		Description	Code
		TRANSISTOF		(Continued)	<u></u>			DIODES	(Cc	'n	tinued)	
	0.440	VS2SC2412KQ-1	J		AA		D344	VHD1SS119//-1	J	1	SS119	AB
		VS2SC2412KQ-1	J	2SA1037KQ	AA		D401	VHD1SS119//-1	J		ISS119	AB
		VSDTC144EK/-1	j	DTC144EK	AB		D402	VHD1SS119//-1	J		ISS119	AB
		VS2SC2412KQ-1	J	2SC2412KQ	AA		D403	VHD1SS119//-1	J		ISS119	AB
		VSDTC144EK/-1	.1	DTC144EK	AB		D405	VHD1SS119//-1	J		ISS119	AB
		VSDTC144EK/-1	.I	DTC144EK	AB		D406	VHD1SS119//-1	J	•	188119	AB
		VSDTC144EK/-1	J	DTC144EK	AB		D408	VHD1\$\$119//-1	J		1\$\$119	AE
		VSDTC144EK/-1	.1	DTC144EK	AB		D540	VHD1SS119//-1	J		155119	AE
	<b>Q</b> 0	VSDTC144EK/-1	J	DTC144EK	AB		D701	VHDDA204K//1E	J		DA204K	AE
		VSDTC144EK/-1	J.	DTC144EK	AB		D703	VHD1SS119//-1	J		185119	ΑE
			ı	DTC144EK	AB		D705	VHD1SS119//-1			188119	AE
	Q551	VSDTC144EK/-1	J		AB		D708	RH-PX0234GEZZ	Ζ .	}	Photo Diode	Αľ
	Q565	VSDTC144EK/-1	J	2SC3939SQR	AC		D709	RH-PX0233GEZZ	Z .	I	Photo Diode	ΑI
	Q603	VS2C3939SQR-1	1	2SA1037KQ	AA		D710	RH-PX0233GEZZ	Ζ.	]	Photo Diode	Αī
	Q701	VS2SA1037KQ-1	ال	DTC114EK	AB		D711	RH-PX0252GEZ	z .	J	Photo Diode	A
	Q702	VSDTC114EK/-1	<u>ل</u> ,		AA		D712	RH-PX0252GEZ	z .	J	Photo Diode	Al
	Q703	VS2SA1037KQ-1	j		AA		D713	RH-PX0253GEZ		j	Photo Diode	Al
	Q705	VS2SA1037KQ-1	J		AM		D714	RH-PX0253GEZ		j	Photo Diode	Α
7	Q901	VS2SC4300//-1	J	2SC4300	AC		D715	VHD1SS119//-1		J	188119	Α
7	Q902	VS2SC3377-Q-1	J	**			D716	VHD1SS119//-1			188119	А
2	Q921	VS2SA1015Y/1E	J	2SA1015Y	AC		D717	VHD1SS119//-1			155119	Α
7	Q922	VS2SC2412KQ-1	J	2SC2412KQ	AA		D718	VHD1SS119//-1		J		А
	Q951	VS2SD468-C/-1	J	2SD468-C	AD		D718	VHD1SS119//-1			155119	A
	Q952	VSDTA124EK/-1	J	DTA124EK	AB			RH-DX0083GEZ		J	Diode Bridge	A
	Q953	VSDTC124EK/-1	J		AB	Δ	D901	_		J	Diode	۵.
	Q954	VS2SD468-C/-1	J	2SD468-C	AD	Δ	D902	RH-DX0220CEZ			Diode	A
	Q955	VS2SD468-C/-1	Ü	2SD468-C	AD	Δ	D903	RH-DX0321CEZ		J	ERA1802	. A
	Q956	VS2SD468-C/-1		2SD468-C	AD	Δ	D904	VHDERA1802/-		J	ERA1802	
	Q957	VSDTA124EK/-1		DTA124EK	AB	$\triangle$	D905	VHDERA1802/-	!	J		, ,
	Q958	VSDTC124EK/-1		DTC124EK	AB	Δ	D906	VHD1SS119//-1	_	J	1SS119	
	Q960	VS2SC2001LK-1		J 2SC2001LK	AA	$\triangle$	D907	RH-EX0001AEZ		J	Zener Diode	P
	Q961	VS2C1740SQR16	Ε.	J 2SC1740SQR	AC	$\triangle$	D908	RH-EX0722GEZ		J		. A
	Q962	VS2SD468-C/-1		J 2SD468-C	AD	$\triangle$	D921	VHDERA1804/-	1		ERA1804	F
	Q963	VS2SD468-C/-1	,	J 2SD468-C	AD	Δ	D923	VHDRL3Z////-1		J	RL3Z	/
	Q964	VS2SD468-C/-1		J 2SD468-C	AD	$\triangle$	D924	VHDRK34////-1		J	RK34	A
	Q1503	VSDTC144EK/-1		J DTC144EK	AB	$\triangle$	D925	RH-EX0807GEZ	ZZ		Zener Diode	A
	Q1504	VSDTC144EK/-1		J DTC144EK	AB	$\triangle$	D926	VHD1SS244//-1		J	1SS244	
		VSDTA144EK/-1		J DTA144EK	AC	Δ	D928	RH-EX0619GE	ZZ	J	Zener Diode	4
	Q1506	VS2SA1037KQ-1		J 2SA1037KQ	AA	$\triangle$	D929	VHD1SS119//-1		J	188119	
	Q2401	VS2SC2412KQ-1		J 2SC2412KQ	AA	Δ	D930	RH-EX0615GE	ZZ	J	Zener Diode	4
	Q2402		,	J DTC144EK	AB	$\overline{\mathbb{A}}$	D931	VHD1SS119//-1		J	188119	
	Q2403	VSDTC144EK/-1		J DTA144EK	AC		D951	VHD1SS119//-1		J	15S119	
	Q2404	VSDTA144EK/-1		J 2SA1037KQ	AA		D952	VHD1SS119//-	1	J	188119	
	Q5901	VS2SA1037KQ-1	•	J 2SC2412KQ	AA		D954	RH-EX0634GE		J	Zener Diode	
	Q5902			J 2SC2412KQ	AA		D955	VHD1SS119//-		J	188119	
	Q5903				AB		D956	RH-EX0617GE			Zener Diode	
	Q5950			J DTC144EK			D957	VHD1SS119//-			155119	
	Q5970			J DTA124EK	AB	Δ		RH-DX0064GE			AK04	
	Q5971	─VSDTA124EK/-1		J- DTA124EK	AB	A					188119	
							D240				I 1SS119	
							D5970				/ 1SS119 / 1SS119	
		[	Olo	DES		,	D597				Photo Coupler	
	D201	VHD1SS119//-1		J 1SS119	AB	Δ	IC901	RH-FX0004GE		٠	1 Filoso Couplet	
	D303	VHD1SS119//-1		J 1SS119	AB							
	D341	VHD1SS119//-1		J 1SS119	AB							
		VHD1SS119//-1		J 188119	AB							
	D342	VHD1SS119//-1		J 15S119	AB							

Ref	. No.	Part No.	*	Description	Code	Ref. No.	Part No.	<u></u>			escri	ption (	Code 
		PACKAGE	D (	CIRCUIT			со	NTF	RC	LS			
	X501	RCRSB0166GEZZ		Crystal, 4.43MHz	AG	R430	RVR-M4782GEZ	ZZ .	J	2.2k (B	), Har	d Adj.	AB
	X502	RCRSB0188GEZZ		Crystal, 3.58MHz	AG								
	X701	RCRSB0214GEZZ		Crystal, 10MHz	AG								
	X702	RCRSB0138GEZZ		Crystal, 32KHz	AD		CAF	PAC	IT	ORS			
	X5901	RCRSB0215GEZZ		Crystal, 17.73MHz	AG	C210	VCKYCY1HF103	3Z .	J	0.01	50V	Ceramic	AA
	X5970	RCRSB0222GEZZ		Crystal, 14.32MHz	AF	C211	VCCCCY1HH27		J	27p	50V	Ceramic	AA
	7,0010	HOHODUZZZGLZZ	Ü	Cityotal, City		C212	VCEAEM1HW47	74M .	J	0.47	50V	Electrolytic	AB
						C214	VCKYCY1CF22			0.22	16V	Ceramic	AA
		COILS AND TE	2 4 1	ISFORMERS		C215	VCCCCY1HH10				50V	Ceramic	AA
					AD	C216	VCCCCY1HH10				50V	Ceramic	AA
	FL2401	RFILA0020CEZZ		Filter	AB	C217	VCKYCY1AF10			1		Ceramic	AC
	L205	VP-XF101K0000		100µН	AB	C218	VCKYCY1HF10				50V	Ceramic	AA
	L206	VP-DF470K0000		47μH	AB	C219	VCCCCY1HH12					Ceramic	AA
	L207	VP-XF560J0000	J	56μH		C210	VCEAEM1HW3			3.3	50V	Electrolytic	
	L208	VP-XF151K0000	j	•	AB	C220	VCKYCY1CB47			0.047		Ceramic	AA
	L209	VP-XF560J0000	J	56μH	AB	C222	VCKYCY1CF10		J	0.047	16V	Ceramic	AA
	L210	VP-XF151K0000		150µH	AB		VCEAEM1HW3			3.3	50V	Electrolytic	
	L291	VP-ZK101K0000	J	100μΗ	AB	C223 C224	VCEAE 1HW2				50V	Electrolytic	
	L301	VP-ZK180K0000	J	•	AB	C224	VCEAEA1HW4			0.47	50V	Electrolytic	
	L302	VP-ZK180K0000	J	18μΗ	AB	C228	VCKYCY1CF22		J		16V	Ceramic	AA
	L401	VP-DF221K0000	ل	220µH	AB	C229	VCKYCY1CF10		J	0.1	16V	Ceramic	AA
	L402	VP-XF151K0000		150µH	AB		VCEAEA0JW10			100	6.3V		
	L403	VP-XF150J0000		15µH	AB	C230	VCKYCY1CB47			0.047		Ceramic	AA
	L404	VP-XF330J0000	J	•	AB	C234							
	L405	VP-XF2R7J0000		2.7μΗ	AC	C235	VCEAEM1CW1			10	16V	Electrolytic	
	L406	VP-XF560J0000		56μΗ	AB	C236	VCKYCY1EF10			0.1	25V	Ceramic	AA AA
	L407	VP-XF5R6K0000		5.6µH	AB	C237	VCCCCY1HH3		J	33p	50V	Ceramic	
	L408	VP-XF101K0000	J	100μΗ	AB	C238	VCCCCY1HH5			5p	50V	Ceramic	AA
	L501	VP-MK561K0000	J	560μ <b>H</b>	AB	C239	VCCCCY1HH5			56p	50V	Ceramic	AA
	L502	VP-XF560K0000		56µH	AB	C240	VCKYCY1HB3		J	390p	50V		AA
	L504	VP-XF150J0000		15μΗ .	AB	C241	VCKYD41HB15		J	150p	50V	Ceramic	AA
	L505	VP-XF100K0000		10μH	AB	C244	VCKYCY1HB2		J	220p	50V	Ceramic	AA
	L506	VP-XF470K0000		47μΗ	AB	C260	VCKYCY1EB1		J	0.01	25V	Ceramic	AA AB
	L507	VP-XF101K0000	J	100μΗ	AB	C281	VCEAEM1CW2			22	16V		
	L509	VP-XF151K0000		150μΗ	AB	C289	VCEAEM1HW			10	50V	Electrolytic	
	L512	VP-XF6R8K0000	J	6.8µH	AB	C291	VCKYCY1HF1			0.01	50V		AA
	L602	VP-2K221K000K	J	220μΗ	AB	C292	VCEAEM1CW			10	16V	-	
$\triangle$	L902	RCILF0277GEZZ	J	Coil	AG	C293	VCEAEM1CW			22	16V	-	
	L923	RCiLP0232CEZZ	J	Coil	AD	C294	VCEAEM1AW2			22		Electrolytic	
	L924	RCiLP0232CEZZ	J	Coil	AD	C301	VCEAEM0JW1			100		/ Electrolytic	
	L926	RCILP0232CEZZ	J	Coil	AD	C302	VCKYCY1HF1		J	0.01		Ceramic	AA
	L1551	VP-XF120K0000	J	12µH	AB	C303	VCEAEM1HW				50V	,	
	L1553	VP-XF120K0000	J	12μΗ	AB	C304	VCKYCY1HF1		J		50V		AA
	L4401	VP-MK221K0000	J	220µH	AB	C305	VCKYCY1CF2		J		16V		AA
	L4402	VP-XF330K0000	J	33μН	AB	C306	VCKYCY1CF2		J		16V		AA
	L4451	VP-DF100K0000	J	10μΗ	AB	C307	VCKYCY1CF2			0.22	16V		AA
	L5901	VP-XF150J0000	J	15μΗ	AB	C308	VCKYCY1CF2		J		16V		AA
	L5902	VP-DF101K0000	J	100µН	AB	C309	VCCCCY1HH2	270J	J		50V	Ceramic	AA
	L5903	VP-DF101K0000		100μΗ	AB	C310	VCCCCY1HH2		J		50V		AA
	L5950	VP-XF120K0000		12μH	AB	C311	VCCCCY1HH			27p	50V	Ceramic	AA
	L5970	VP-XF101K0000		100μH	AB	C312	VCCCCY1HH	270J	J	27p	50V	Ceramic	AA
	L5971	VP-XF101K0000		100µH	AB	C313	VCKYCY1HF1	03Z	J	0.01	50V	Ceramic	AA
	L5971	VP-XF101K0000		100μΗ	AB	C314	VCKYCY1HF1	03Z	J	0.01	50V	Ceramic	AA
	T601	RTRNH0053GEZ			AE	C315	VCEAEM1HW	225N	1 J	2.2	50V	Electrolyti	ic AB
^	T901	RTRNZ0029AJZZ		Transformer	AP	C316	VCKYCY1HF1	03Z	J	0.01	50V	Ceramic	AA
$\triangle$	1901	11111147007011077	,			C317	VCKYCY1HF2	222	. 1	0.025	501/	Ceramic	AB

Ref. No.	Part No.	*	I	Descr	iption	Code	Ref. No.	Part No.	*		Descr	iption (	Code
	CAPACITO	RS (	(Conti	nuec	d)			CAPACITO	ORS (	Conti	nuec	I)	
C318	VCEAEM0JW476		•		Electrolytic	AB	C526	VCCCCY1HH68	OJ J	68p	50V	Ceramic	AA
C319	VCKYCY1HF103		0.01	50V	Ceramic	AA	C527	VCCCCY1HH47	OJ J	47p	50V	Ceramic	AA
C320	VCKYCY1HF223			50V	Ceramic	AB	C528	VCCCCY1HH56	iQJ J	56p	50V	Ceramic	AA
C321	VCKYCY1HF223		0.022	50V	Ceramic	AB	C529	VCEAEM1HW4	75M J	4.7	50V	Electrolytic	ΑE
C322	VCCCCY1HH680			50V	Ceramic	AA	C530	VCCCCY1HH12	1J J	120p	50V	Ceramic	AA
C323	VCKYCY1HF103		0.01	50V	Ceramic	AA	C531	VCCSD41HL01	DM J	1p	50V	Ceramic	AA
C324	VCKYCY1HF103			50V	Ceramic	AA	C532	VCCCCY1HH47	'OJ J	47p	50V	Ceramic	A/
C325	VCKYCY1EF104		0.1	25V	Ceramic	AA	C533	VCCCCY1HH47	'0J J	47p	50V	Ceramic	AA
C329	VCKYCY1HF103		0.01	50V	Ceramic	AA	C535	VCCCCY1HH68	30J J	68p	50V	Ceramic	AA
C330	VCKYCY1HF103			50V	Ceramic	AA	Ç536	VCKYCY1HB68	1K J	680p	50V	Ceramic	AA
C331	VCKYCY1CF104			16V	Ceramic	AA	C537	VCKYCY1HF10	3Z J	0.01	50V	Ceramic	A
	VCKYCY1HF103			50V	Ceramic	AA	C538	VCCCCY1HH10	)1J J	100p	50V	Ceramic	AA
C342	VCKYCY1HF103			50V	Ceramic	AA	C541	VCKYCY1CF10		0.1	16V	Ceramic	AA
C343				16V	Electrolytic		C550	VCCCCY1HH12		12p	50V	Ceramic	AA
C401	VCEAEM1CW47				-	AA	C621	VCEAEA1CW4		47	16V	Electrolytic	AE
C402	VCKYCY1HF103			50V	Ceramic	AA	C622	VCKYCY1EB10		0.01	25V	Ceramic	AA
C403	VCCCCY1HH12		120p	50V	Ceramic		C623	VCKYCY1EB10		0.01	25V	Ceramic	AA
C404	VCKYCY1HB391		•	50V	Ceramic	AA		VCQPYA2AA56			100V		AC
C405	VCCCCY1HH39		39p	50V	Ceramic	AA	C624			220p	50V	Ceramic	A/
C406	VCCCD41HH150		15p	50V	Ceramic	AA	C625	VCCSPA1HL22			50V	Ceramic	A/
C407	VCCCCY1HH33		33p	50V	Ceramic	AA	C626	VCKYCY1HF10		0.01			A/
C408	VCCCCY1HH56	01 1	56p	50V	Ceramic	AA	C702	VCKYCY1HF10			50V	Ceramic	
C410	VCKYCY1HB102	2K J	1000p		Ceramic	AA	C703	VCEAEM1HW1		1	50V	Electrolytic	
C411	VCKYCY1HB22	IK J	220p	50V	Ceramic	AA	C705	VCFYSA1HB10			50V	Mylar	AE
C412	VCKYCY1HB68	iK J	680p	50V	Ceramic	AA	C709	VCKYD41CY10		0.01	16V	Ceramic	A
C414	VCKYCY1HF103	3Z J	0.01	50V	Ceramic	AA	C710	VCKYCY1HF10		0.01	50V	Ceramic	A
C417	VCCCCY1HH33	OJ J	<b>3</b> 3p	50V	Ceramic	AA	C711	VCEAEM0JW4		47	6.3V	Electrolytic	
C418	VCEAEM1HW47	4M J	0.47	50V	Electrolytic	: AB	C712	VCKYD41CX68	2N J	6800		Ceramic <sup>,</sup>	A
C419	VCKYCY1HB392	2K J	3900p	50V	Ceramic	AA	C715	VCEAEM1CW1	06M J	10	16V	Electrolytic	
C422	VCKYCY1EB103	3K J	0.01	25V	Ceramic	AA	C718	VCEAEM1CW2	26M J	22	16V	Electrolytic	AE
C423	VCKYCY1HF103	3Z. J	0.01	50V	Ceramic	AA	C722	VCCCCY1HH1	80J J	18p	50V	Ceramic	A
C424	VCKYCY1HF103	3Z J	0.01	50V	Ceramic	AA	C724	VCCCCY1HH1	80J J	18p	50V	Ceramic	AA
C425	VCKYCY1HF103	3Z J	0.01	50V	Ceramic	AA	C725	VCKYCY1HF10	)3Z J	0.01	50V	Ceramic	A
C427	VCKYCY1HF103	3Z J	0.01	50V	Ceramic	AA	C726	VCCCCY1HH2	20J J	22p	50V	Ceramic	A/
C501	VCKYD41CX332	2N J	3300t	16V	Ceramic	AA	C727	VCCCCY1HH2	20J J	22p	50V	Ceramic	A
C502	VCKYCY1HB27					AA	C728	VCKYCY1HF10		0.01	50V	Ceramic	A/
C503	VCKYCY1HF10			50V		AA	C729	VCKYCY1HB4	72K J	4700	p 50V	Ceramic	A
C504	VCEAEM0JW10				Electrolytic		C730	VCEAEM0JW3	36M J	33	6.3V	Electrolytic	A
C505	VCKYCY1CB47				-	AA	C731	VCKYCY1HF1	)3Z J	0.01	50V	Ceramic	A
C506	VCKYCY1HF10			50V		AA	C732	VCKYCY1HF1	03 <b>Z</b> J	0.01	50V	Ceramic	A
C508	VCKYCY1HF10			50V		AA	C733	VCKYCY1HB4	72K .	4700	p 50V	Ceramic	A
C509	VCKYCY1EB15					AA	C734	VCEAEM0JW1				Electrolytic	A
C510	VCEAEM1HW3			50V			C735	VCEAEM1HW			50V	Electrolytic	A
C511	VCCCCY1HH33			50V		AA	C736	VCKYCY1HF1			50V		A.
	VCKYCY1HF103			50V		AA	C737	VCCCCY1HH4			50V	Ceramic	Α
C512				25V		AA	C738	VCCCCY1HH4			50V		A
C513	VCKYCY1EF10					AA	C738	VCCCCY1HH4				Ceramic	A
C514	VCKYCY1CB33							VGCCCTTTTA					A
C515	-VCKYCY16B47					AA		VCKYCY1HB1					A
C516	VCEAEM1HW4			50V			C741						A
C517	VCCCCY1HH15	50J J		50V		AA	C742	VCKYCY1HF1					
C518	VCCCCY1HH22	20J J	J 22p	50V		AA	C743	RC-EZ0425GE		0.047		Electorolyt	
C519	VCKYCY1HF10			50V		AA	C744	VCKYD41HB1					A.
C520	VCEAEM1HW4			50V			C746	VCKYCY1HF1				Ceramic	A
C521	VCKYCY1HF22	3Z .	0.022	50V	Ceramic	AB	C747	VCKYCY1HF1				Ceramic	A
C522	VCKYCY1AF10	5Z .	1 1	10V	Ceramic	AC	C749	VCKYCY1HB1					A
C523	VCEAEM1CW1	06M .	J 10	16V	Electrolyti	c AB	C750	VCKYCY1HB1	02K 4	J 1000	p 50V	Ceramic	A,

Re	ef. No.	Part No.	*		)escri	otion C	ode	Ref. No.	Part No.	*			escri	ption Co	ode
		CAPACITO	nRS (	 Contir	nued	)			CAPACIT	ORS	((	Conti	nued	)	
	C751	VCKYCY1HF103				Ceramic	AA	C1510	VCQYTA1HM33	33J (	J	0.033	50V	Mylar	AA
	C752	VCKYCY1HF103				- Ceramic	AA	C1511	VCEAEM1CW1	06M .	J	10	16V	Electrolytic	AB
	C753		_			Ceramic	AA	C1515	RC-EZ0459CEZ	ZZ .	J			Electorolytic	ΑE
	C754	VCKYCY1EF104	_			Elect.(N.P.)	AB	C1551	VCKYCY1EF10	4Z .	J	0.1	25V	Ceramic	AA
	C755	VCE9EM1HW10		,		Electrolytic	AB	C1552	VCEAEA1HW1	06M 4	J	10	50V	Electrolytic	AB
	C756	VCEAEM1CW47 VCKYCY1EF104				Ceramic	AA	01553	<b>ACKACATHETO</b>	)3Z	J	0.01	50V	Ceramic	A,A
	C758			1000p		Ceramic	AA	C1554	VCKYCY1HF10	3Z .	J	0.01	50V	Ceramic	AA
	C759	VCKYCY1HB102				Ceramic	AA	C1555	VCEAEM1CW4	76M	J	47	16V	Electrolytic	ΑĐ
	C760	VCKYCY1HF103				Electrolytic	AB	C1556	VCKYPA1HF10	)3Z	J	0.01	50V	Ceramic	ΑA
		VCEAEM1CW47				Ceramic	AA	C1557	VCEAEM1CW1	06M	J	10	16V	Electrolytic	ΑE
	C761	VCKYCY1HB222				Ceramic	AA	C1560	VCCCCY1HH4	70J	J	47p	50V	Ceramic	A
	C762	VCKYCY1EF104				Ceramic	AA	C1561	VCEAEM1CW1	106M	J	10	16V	Electrolytic	ΑE
	C763	VCKYCY1EF104		0.1 1000p		Ceramic	AA	C2202	VCEAEA1HW3			3.3	50V	Electrolytic	ΑE
	C764	VCKYCY1HB102					AB	C2401	VCKYCY1HF1		J	0.01	50V	Ceramic	A
	C765	VCFYSA1HB334				Mylar	AB	C2402	VCEAEM1CW			10	16V	Electrolytic	AE
	C766	VCEAEM1CW47		47		Electrolytic	AA	C2403	VCKYCY1HF1		J	0.01	50V	Ceramic	A
	C767	VCKYCY1HB102				Ceramic	AA	C2404	VCEAEM1HW			1	50V	Electrolytic	Α
	C769	VCKYCY1EF104		0.1		Ceramic	AB	C2405	VCKYCY1HB1		J	1000p		Ceramic	Α
	C770	VCFYSA1HB104		0.1		Mylar	AB	C2406	VCKYCY1HF2		J	0.022		Ceramic	Α
	C771	VCEAEM0JW47				Electrolytic		C2407	VCFYSA1HB5		J			Mylar	Α
	C772	VCKYCY1EB183				Ceramic	AA AA	C2407	VCEAEM1HW		-	1	50V	Electrolytic	Α
	C774	VCKYCY1EF104			25V	Ceramic		C4404	VCEAEM1CW				16V	Electrolytic	A
	C780	VCKY.CY1HF10			50V	Ceramic	AA	C4452	VCKYCY1EF1		J	0.1	25V	Ceramic	,
	C781	VCKYCY1HF10			50V	Ceramic	AA		VCCCCY1HH		J	150p	50V	Ceramic	Α.
	C782	VCKYCY1EF104			25V	Ceramic	AA	C5901				18p	50V	Ceramic	A
Δ	C901	RC-FZ071SGEZ	ZZ J	0.047		· .	AF	C5902	VCCCCY1HH		J	•	50V	Ceramic	A
Δ	C904	RC-FZ063SGEZ		0.1		Mylar	AE	C5903	VCCCCY1HH		J	150p	25V	Ceramic	A
Δ	C905	RC-KZ0310CEZ	Z J			Ceramic	AC	C5905	VCKYCY1EF1		J	0.1			A
Δ	C906	RC-KZ0310CEZ	ZZ J	2200p		Ceramic	AC	C5906	VCEAEM1HW				50V	Electrolytic	A
Δ	C907	RC-EZ0437GEZ	ZZ J	68	400V	Electorolyti		C5908	VCKYCY1EF1		J		25V	Ceramic	F
Δ	C908	RC-KZ0310CEZ	ZZ J	2200p	400V	Ceramic	AC	C5909	VCCCCY1HH			•	50V	Ceramic	
Δ	C909	RC-KZ0310CEZ	ZZ J	2200p	400V	Ceramic	AC	C5910	VCCCCY1HH				50V	Ceramic	- /
Δ	C910	VCĘAGA2AW1	06M J	10	100V	Electrolytic	AC	C5911	VCEAEM1AW				10V	Electrolytic	-
$\overline{\mathbb{A}}$	C911	VCFYZP2GA47	'зк ь	0.047	400V	/ Mylar	ĄC	C5912					50V		- /
$_{\mathbb{A}}$	C912	RC-KZ0037GEZ	ZZ .	1 220p	2kV	Ceramic	AC	C5913							-
$\mathbb{A}$		VCFYSA1HB10	)4J .	0.1	50V	Mylar	AB	C5916						Ceramic	-
$\Delta$		VCFYSA1HB47	73J .	J 0.047	50V	Mylar	AA	C5917					50V		-
Δ		VCFYSA1HB47	73J .	0.047	50V	Mylar	AA	C5918	VCEAEM1CV	/107N	1 J	100	16V		4
$\Delta$		VCQYTA1HM2	22J .	J 2200	p 50V	Mylar	AA	C5921	VCEAEM1CV	/106N	1 J	10	16V	*	4
Δ		RC-QZ0104GE	ZZ ,	J 2200	p 250\	/ Mylar	AC	C5922	VCEAEM1CV	V106N	1 J	10	16V	_	4
Δ		RC-EZ0439GE			•	Electoroly	tic AF	C5923	VCKYCY1HB	221K	J				
△		VCEAGA1CW1			16V	Electrolytic		C5924					50V		
Δ		VCEAGA1JW1		_	63V	Electrolytic	a AC	C5925	VCEAEA1CW	/476N	ا. ا		16V		
		RC-EZ0439GE		J 2200		· ·		C5926	VCCCCY1HF	1101J		•			
		VCEAGA1AW4			10V			C5927	VCCCCY1HF	1101J	J	100p			
Λ	,	VCEAGA1HW4			50V			C5939	VCEAGA0JW	1477M		470	6.3	/ Electrolytic	
Δ	,	VCEAEM1HW1			50V			C5950	VCKYCY1HF	103Z		0.01	50∨	Ceramic	
Δ	,	VCKYCY1EF10		J 0.1	25V		AA	C5951	VCCCCY1HF	1101J		100p	50V	Ceramic	
A		VCKYCY1EF10		J 0.1	25V		AA	C5952	2 VCKYCY1HF	103Z		0.01	50V	Ceramic	
Δ	_	VCFYSA1HB2		J 0.02			AA	C5970	VCKYCY1HF	103Z		J 0.01	50V	Ceramic	
	C951	VCEAEM1CW			16V			C5972	2 VCCCCY1HH	16R0E	) (	Ј 6р	50\	Ceramic	
	C952	VCEAEM1CW2		_	16V				*						
	C953	VCEAEM1CW2			16V										
	C954	VCEAEM1AW4			10V				F	RESI	Sī	TORS			
	C955				16V	-		D011						IMARATE A 11	_
1					16V			R211	VRS-CY1JF1					W Metal Oxide	
	C957	VUENGATOW	107 191	2 (00	100	Liboardiyu	_ ,\_	R212	VRS-CY1JF4	1/27		J 4.7K	1/16	W Metal Oxide	а

ef. No.	Part No.	*		Description	Co	de	Ref. No.	Part No.	*		Description	Co	ode
	RESISTOR	S (C	onti	nued)				RESISTORS	S (C	onti	nued)		
D010	VRS-CY1JF272J			1/16W Metal O	xide	AA	R415	VRS-CY1JF103J	j	10k	1/16W Metal O	xide	AA
R213	VRS-CY1JF103J			1/16W Metal O		AA	R416	VRS-CY1JF472J	J	4.7k	1/16W Metal O	xide	ΑA
R214		J		1/16W Metal O		AA	R417	VRS-CY1JF182J	J	1.8k	1/16W Metal O	xide	AA
R215	VRS-CY1JF272J	J		1/16W Metal O		AA	R418	VRS-CY1JF222J	J	2.2k	1/16W Metal O	xide	AΑ
R216	VRS-CY1JF102J	J.	• • • •	1/16W Metal O		AA	R419	VRS-CY1JF152J	J	1.5k	1/16W Metal C	xide	AA
R217	VRS-CY1JF471J	J	,, ,	1/16W Metal O		AA	R420	VRS-CY1JF562J	J	5.6k	1/16W Metal C	xide	AΑ
R219	VRS-CY1JF122J			1/16W Metal C		AA	R421	VRS-CY1JF102J	J	1k	1/16W Metal C	xide	AA
R220	VRS-CY1JF152J			1/16W Metal C		AA	R422	VRS-CY1JF153J	J	15k	1/16W Metal C	xide	A/
R224	VRS-CY1JF392J	J		1/16W Metal C		AA	R423	VRS-CY1JF392J	J	3.9k	1/16W Metal C	xide	A/
R228	VRS-CY1JF271J	J		1/16W Metal C		AA	R424	VRS-CY1JF471J	J	470	1/16W Metal C	oxide	A
R229	VRS-CY1JF223J	J				AA	R425	VRD-RA2BE272J	J	2.7k	1/8W Carbon	1	A
R230	VRS-CY1JF223J	J		1/16W Metal C		AA	R426	VRS-CY1JF822J	J		1/16W Metal C	Oxide	A
R265	VRS-CY1JF562J	J		1/16W Metal C			R427	VRS-CY1JF104J	J	100k	1/16W Metal C	Oxide	Α
R301	VRS-CY1JF123J	J		1/16W Metal C		AA	R428	VRS-CY1JF471J	J	470	1/16W Metal C		A
R303	VRD-RA2BE224J	J		1/8W Carbon		AA		VRS-CY1JF681J	J	680	1/16W Metal C		A
R304	VRS-CY1JF182J			1/16W Metal C		AA	R429	VRS-CY1JF102J	j	1k	1/16W Metal C		Α
R305	VRS-CY1JF222J	J	2.2k	1/16W Metal C		AA	R431		J	1.2k	1/16W Metal C		A
R307	VRD-RA2BE473J	J	47k	1/8W Carbon		AA	R432	VRS-CY1JF122J	J	1.2k	1/16W Metal C		A
R308	VRS-CY1JF473J	J	47k	1/16W Metal C		AA	R433	VRS-CY1JF123J			1/16W Metal C		A
R309	VRS-CY1JF470J	ل	47	1/16W Metal C		AA	R434	VRS-CY1JF103J	J	10k	1/16W Metal C		A
R310	VRS-CY1JF470J	J	47	1/16W Metal C		AA	R435	VRS-CY1JF681J	Ĵ	680	1/16W Metal (		
R311	VRS-CY1JF822J	J				AA	R436	VRS-CY1JF333J	J				
R312	VRS-CY1JF152J	J		1/16W Metai (		AA	R438	VRS-CY1JF472J	J				
R314	VRS-CY1JF152J	J		1/16W Metal 0		AA	R439	VRS-CY1JF153J	J		1/16W Metal (		
R315	VRS-CY1JF822J	J	8.2k	1/16W Metal (	Oxide	ÀΑ	R440	VRS-CY1JF123J	J		1/16W Metal (		
R316	VRD-RA2BE103J	J	10k	1/8W Carbor	n	AA	R441	VRS-CY1JF332J	J				
R317	VRS-CY1JF181J	J	180	1/16W Metal (	Oxide	AA	R442	VRS-CY1JF122J	J		1/16W Metal (		
R318	VRS-CY1JF223J	J	22k	1/16W Metal (	Oxide	AA	R443	VRS-CY1JF473J	J		1/16W Metal (		
R319	VRS-CY1JF183J	J	18k	1/16W Metal (	Oxide	AA	R444	VRS-CY1JF224J	J	220	( 1/16W Metal (		
R320	VRS-CY1JF180J	J	18	1/16W Metal (	Oxide	AA	R446	VRS-CY1JF105J	J		1/16W Metal		
R323	VRD-RA2BE103J	J	10k	1/8W Carbon	n	AA	R447	VRS-CY1JF105J	J	1M	1/16W Metal (		
R326	VRD-RA2BE682J	J	6.8k	1/8W Carbon	n	AA	R501	VRS-CY1JF151J	j	150	1/16W Metal		
R330	VRS-CY1JF153J	J	15k	1/16W Metal	Oxide	AA	R502	VRS-CY1JF821J	J	820	1/16W Metal		
R331	VRS-CY1JF561J	J	560	1/16W Metal	Oxide	AA	R506	VRS-CY1JF103J	J		1/16W Metal		
R332	VRS-CY1JF123J	J	12k	1/16W Metal	Oxide	AA	R507	VRS-CY1JF103J	J	10k	1/16W Metal	Oxide	-
R333	VRS-CY1JF123J	J	4.04				R508	VRS-CY1JF272J	J	2.7k	1/16W Metal	Oxide	1
R334	VRS-CY1JF152J	J		1/16W Metal	Oxide	AA	R510	VRS-CY1JF273J	J	27k	1/16W Metal	Oxide	1
R341	VRS-CY1JF470J	J		1/16W Metal			R511	VRS-CY1JF272J	J	2.7	1/16W Metal	Oxide	1
R342	VRS-CY1JF152J			1/16W Metal			R513	VRS-CY1JF102J	J	1k	1/16W Metal	Oxide	1
R343	VRS-CY1JF392J			1/16W Metal			R515	VRS-CY1JF102J	J	1k	1/16W Metal	Oxide	1
R344	VRS-CY1JF472J			1/16W Metal			R516	VRS-CY1JF561J		560	1/16W Metal	Oxide	
R346	VRD-RA2BE822J			1/8W Carbo		AA	R517	VRS-CY1JF222J		2.2	1/16W Metal	Oxide	
	VRS-CY1JF122J	, .		1/16W Metal			R520	VRS-CY1JF102J		l 1k	1/16W Metal	Oxide	
R401				1/16W Metal			R523	VRS-CY1JF103J		l 10k	1/16W Metal	Oxide	
R402	VRS-CY1JF272J						R525	VRS-CY1JF123J		J 12k	1/16W Metal	Oxide	
R403	VRS-CY1JF273J						R530	VRD-RA2BE473	١.	J 47k	1/8W Carbo	n	
R404	VRS-CY1JF103J		J 10k				R540	VRS-CY1JF103J		J 10k	1/16W Metal	Oxide	
R405	VRS-CY1JF561J		J 560				R547	VBS-CY1JF154J			k 1/16W Metal	Oxide	2
				1/16W Metal			R551	VRD-RA2BE123		J 12k			
R407	VRS-CY1JF471J		J 470				R565	VRS-CY1JF222J			k 1/16W Metal		
R408	VRS-CY1JF152J			k 1/16W Metal				VRS-CY1JF470J		47	1/16W Metal		
R409	VRS-CY1JF101J		J 100				R631	VRS-CY1JF682J			k 1/16W Metai		
R410	VRS-CY1JF472J	١,		k 1/16W Metal			R632						
R411	VRS-CY1JF271J	۱ ,	J 270				R633	VRG-SC2EB4R7					
R412	VRS-CY1JF821J	}	J 820				R635	VRS-CY1JF333.		J 33k	k 1/16W Metal		
R413	VRS-CY1JF821J	J .	J 820				R643	VRS-CY1JF272					
R414	VRS-CY1JF273J	ı	J 27k	< 1/16W Metal	l Oxide	AA e	R679	VRD-RA2BE820	ا ل	J 82	1/8W Carbo	111	

F	Ref. No.	Part No.	*		Descrip	otion C	ode	Ref.	No.	Part No.	*		Descrip	tion Co	ode
_		RESISTORS	S (C	ontir	nued)					RESISTOR	S (C	Conti	nued)		
	F1701	VRS-CY1JF273J	J		1/16W N	Aetal Oxide	AA	F	R766	VRS-CY1JF102J	J	1k	1/16W N	Metal Oxide	AA
	R702	VRD-RA2BE562J	J		1/8W (	Carbon	AA	F	767	VRS-CY1JF102J	J	1k	1/16W N	Netal Oxide	AA
	R704	VRS-CY1JF681J	J			Metal Oxide	AA	F	R769	VRS-CY1JF222J	J	2.2k	1/16W N	/letal Oxide	AA
	R705	VRD-RA2BE102J	j		1/8W (	Carbon	AA	F	R <b>77</b> 1	VRS-CY1JF103J	J	10 <b>k</b>	1/16W N	Aetal Oxide	AA
	R713		J			vletal Oxide	AA	F	3772	VRD-RA2BE223J	J	22k	1/8W (	Carbon	AA
	R714	VRS-CY1JF471J	J			Metal Oxide		F	7773	VRS-CY1JF103J	J	10k	1/16W i	Vietal Oxide	AA
	R715	VRS-CY1JF471J	J	–		Metal Oxide		F	3774	VRD-RA2BE334J	J	330k	1/8W (	Carbon	AA
	R716	VRS-CY1JF102J	J			Metal Oxide		F	3775	VRS-CY1JF103J	J	10k	1/16W1	Metal Oxide	AA
	R717	VRS-CY1JF183J	J			Metal Oxide		F	3776	VRS-CY1JF104J	J	100k	1/16W I	Metal Oxide	AA
	R718	VRS-CY1JF393J	J			Metal Oxide		F	3777	VRS-CY1JF104J	J	100k	1/16W	Metal Oxide	AA
	R719	VRS-CY1JF223J	J			Metal Oxide		F	3778	VRS-CY1JF185J	J	1.8№	1/16W	Metal Oxide	AA
		VRS-CY1JF153J	-			Metal Oxide		F	3779	VRS-CY1JF473J	J	47k	1/16W	Metal Oxide	AA
	R720	VRS-CY1JF564J	j			Metal Oxide		1	7781	VRD-RA2BE223J	J	22k	1/8W	Carbon	AA
	R721	VRS-CY1JF224J	J			Metal Oxide			7782	VRS-CY1JF103J	J	10k	1/16W	Metal Oxide	AA
	R722	VRS-CY1JF104J	J			Metal Oxide			R784	VRS-CY1JF272J	J	2.7k	1/16W	Metal Oxide	AA
	R723	VRS-CY1JF104J	٦			Metal Oxide			R785	VRS-CY1JF103J	J	10k	1/16W	Metal Oxide	AA
	R724	VRS-CY1JF684J	J			Metal Oxide			R786	VRS-CY1JF103J	J	10k	1/16W	Metal Oxide	AA
	R725	VRS-CY1JF103J	J			Metal Oxide			R788	VRD-RA2BE102J	ı J	1k	1/8W	Carbon	AA
	R726	VRS-CY1JF683J	J			Metal Oxid			R789	VRD-RA2BE331		330	1/8W	Carbon	AA
	R727	VRS-CY1JF224J	J			Metal Oxid			R790	VRS-CY1JF101J				Metal Oxide	AA
	R728	VRS-CY1JF274J	J			Metal Oxid			R791	VRS-CY1JF101J		100	1/16W	Metal Oxide	AA
	R729	VRS-CY1JF392J	J			Metal Oxid			R792	VRS-CY1JF102J			1/16W	Metal Oxide	AA
	R730	VRS-CY1JF223J		22k		Carbon	AA		R794	VRS-CY1JF822J			1/16W	Metal Oxide	AA
	R731	VRD-RA2BE182J	J			Carbon	AA		R797	VRS-CY1JF102J				Metal Oxide	AA
	R732	VRD-RA2HD680J				Metal Oxid			R801	VRS-CY1JF822J				Metal Oxide	
	R733	VRS-CY1JF473J		47k		Metal Oxid			R802	VRS-CY1JF822J				Metal Oxide	
	R734	VRS-CY1JF102J		1k					R803	VRD-RA2BE102		1 1k		Carbon	AA
	P1735	VRS-CY1JF102J		1k		Metal Oxid	AA		R804	VRS-CY1JF102J		J 1k		Metal Oxide	
	R736	VRD-RA2BE102J		1k			AA		R805	VRS-CY1JF101J		J 100		Metal Oxide	
	R737	VRD-RA2BE102J		1k		Carbon			R807	VRD-RA2BE104			** * =	Carbon	AA
	R738	VRD-RA2BE102J		l 1k		Carbon	AA a			VRD-RA2BE471		J 470		Carbon	AA
	R739	VRS-CY1JF102J		1 1k		/ Metal Oxid			R810 R811	VRD-RA2BE102		, 470 J 1k		Carbon	AA
	R740	VRS-CY1JF471J		470		Metal Oxid				VRS-CY1JF102	_	J 1k		Metal Oxide	
	R741	VRD-RA2BE102J		l 1k		Carbon	AA		R812	VRD-RA2BE102		J 1k		Carbon	AA
	P1742	VRD-RA2BE102J		J 1K		Carbon	AA		R813	VRS-CY1JF102		J 1k		/ Metal Oxide	
	R743	VRD-RA2BE102J		1 1k		Carbon	AA		R823	VRS-CY1JF103		J 10k		/ Metal Oxide	
	R745	VRD-RA2BE104J				Carbon	AA		R824			J 1k		/ Metal Oxide	
	R746	VRD-RA2BE102J		J 1k		Carbon	AA		R834	VRS-CY1JF102 VRD-RA2BE102		J 1k		Carbon	AA
	R747	VRD-RA2BE472				Carbon  V Metal Oxid	AA ab		R837	VRD-RA2BE102		J 1k		Carbon	AA
	R748	VRS-CY1JF103J							R842	VRD-RA2BE103		J 10		Carbon	AA
	R749	VRS-CY1JF154J				V Metal Oxid			R845	VRS-CY1JF105		J 1M		V Metal Oxide	
	R750	VRD-RA2BE102		J 1k   4∈0		Carbon	AA		R846	VRS-CY1JF103		J 10		V Metal Oxid	
	R751	VRD-RA2BE154				Carbon	AA		R847	VRS-CY1JF103		J 101		V Metal Oxid	
	R752	VRD-RA2BE102		J 1k		Carbon	AA		R848	VRS-CY1JF103		J 10		V Metal Oxidi	
	R753	VRS-CY1JF123J		J 12k		V Metal Oxi		^	R849	VRD-RA2HD10		J 1M		Carbon	AA
	R754	VRS-CY1JF123J		J 12k		V Metal Oxi		<u> </u>	R901			J 2.2			
	R755	VRD-RA2BE102		J 1k		Carbon	AA	Δ	R902	RR-WZ0002GE				Cement	AD
	R756	VRD-RA2EE151		J 150		Carbon	AA	Δ	R903	VRC-UA2HG68			M 1/2W		AA
	R757	VRD-RA2BE104				Carbon	AA	$\triangle$	R904	VRC-UA2HG68			M 1/2W		AA
	R758	VRD-RA2BE271		J 270		Carbon	AA	A	R905	VRS-VV3AB104			Dk 1W	Metal Oxid	
	R759	VRD-RA2BE104				Carbon	AA	A	R906	VRS-VV3AB104			0k 1W	Metal Oxid	
	R760	VRD-RA2BE271		J 270		Carbon	AA	A	R907	VRD-RA2EE33			k 1/4W		AA
	R761	VRD-RA2BE102		J 1k		Carbon	AA	A	R908	RR-SZ0006GE		J 68		Acid metal	
	R762	VRG-SC2EB2R2		J 2.2		Fuse Res		Δ	R909	RR-SZ0004GE		J 10		Acid metal	
	R764	VRS-CY1JF103L		J 10ł		W Metal Ox		Δ	R910	RR-SZ0005GE	ZZ	J 47	3W	Acid metal	
	R765	VRS-CY1JF103.	j	J 10	< 1/16\	W Metal Ox	ide AA	Λ	R911	VRD-RA2EE10	1J	J 10	0 1/4W	Carbon	AA

Re	ef. No.	Part No.	*		Descri	iption C	ode	Re	. No.	Part No.	*	Description C	ode
_		RESISTOR	S (0	Conti	inued)	·				RESISTOR	S (	Continued)	
Δ	R912	VRD-RA2EE821J	J	820	1/4W	Carbon	AA		R2409	VRD-RA2BE224J	J	220k 1/8W Carbon	A
Δ	R921	VRD-RA2HD100J	J	10	1/2W	Carbon	AA		R2410	VRD-RA2BE684J	J	680k 1/8W Carbon	A
7	R923	VRG-SC2EB100J	J	10	1/4W	Fuse Resiste	orAB		R2411	VRD-RA2BE154J	J		A
7	R925	VRD-RA2BE221J	J	220	1/8W	Carbon	AA		R4401	VRD-RA2BE151J	J	150 1/8W Carbon	A
7	R926	VRS-CY1JF103J	J	10 <b>k</b>	1/16W	Metal Oxide	AA		R5904	VRD-RA2BE391J	J	390 1/8W Carbon	Α
7	R927	VRS-CY1JF153J	J	15k	1/16W	Metal Oxide	AA		R5905	VRD-RA2BE153J	J	15k 1/8W Carbon	Α
7	R928	VRD-RA2BE221J	j	220	1/8W	Carbon	AA		R5906	VRD-RA2BE103J	J	10k 1/8W Carbon	Α
7	R929	VRS-CY1JF221J	J	220	1/16W	Metal Oxide	AA		R5908	VRD-RA2EE181J	J	180 1/4W Carbon	Α
7	R930	VRD-RA2BE272J	J	2.7k	1/8W	Carbon	AA		R5909	VRS-CY1JF332J	J	3.3k 1/16W Metal Oxide	Α
7	R931	VRD-RA2BE272J	J			Carbon	AA		R5910	VRD-RA2EE151J	J	150 1/4W Carbon	Α
7	R932	VRS-CY1JF392J	J			Metal Oxide	AA		R5924	VRS-CY1JF122J	J	1.2k 1/16W Metal Oxide	Α
7	R934	VRS-CY1JF682J	J			Metal Oxide			R5925	VRS-CY1JF332J	J	3.3k 1/16W Metal Oxide	Α
	R952	VRS-CY1JF180J	J	18	1/16W	Metal Oxide	AA		R5950	VRS-CY1JF104J	J	100k 1/16W Metal Oxide	Α
	R953	VRS-CY1JF823J	J		1/16W	Metal Oxide	AA		R5963	VRS-CY1JF101J	J	100 1/16W Metal Oxide	Α
	R954	VRD-RA2HD6R8J	J			Carbon	AA		R5970	VRD-RA2BE272J	J	2.7k 1/8W Carbon	Α
	R955	VRD-RA2HD6R8J	J			Carbon	AA					•	
	R956	VRD-RA2BE1R0J	J			Carbon	AA						
	R957	VRD-RA2BE1R0J	J	1		Carbon	AA			MISCELLA	VE(	OUS PARTS	
	R958	VRD-RA2BE1R0J	J			Carbon	AA	^		QACCV2005AJZZ		AC Cord (VC-ML3)	Α
		VRD-RA2HD561J	J			Carbon	AA	Δ					A
	R959		J	10		Metal Oxide		$\triangle$	E004	QACCB5010GEZ			
	R961	VRS-CY1JF100J				Metal Oxide		$\triangle$	F901	QFS-C2023CEZZ	J	·	A
	R962	VRS-CY1JF223J	J		**	Carbon	AA		FB701	RBLN-0043CEZZ	J		A
	R963	VRD-RA2BE221J	J						FB1501	RBLN-0043CEZZ	J		A
	R964	VRS-CY1JF181J	J			Metal Oxide		Δ	FH901	QFSHD1010CEZZ			A
	R965	VRS-CY1JF563J	,			Metal Oxide		$\triangle$	FH902	QFSHD1009CEZZ			A
	R966	VRS-CY1JF331J	J			Metal Oxide			P201	QPLGN0278GEZ			A
	R967	VRS-CY1JF391J	J			Metal Oxide			P203	QPLGN0759REZZ		0. 1	F
	R968	VRS-CY1JF273J	J	27k		Metal Oxide			P204	QPLGN0378GEZ		0,	F
	R969	VRS-CY1JF470J	J			Metal Oxide			P401	QPLGN0347REZZ		0. 1	F
	R970	VRS-CY1JF822J	J			Metal Oxide			P501	QPLGN0347REZZ	Z J	0, 1	F
	R971	VRS-CY1JF470J	J			Metal Oxide			P601	QPLGN0247REZ	Z		F
	R972	VRS-CY1JF100J	J			Metal Oxide			P603	QPLGN0578GEZ	Z J	W. 1	F
	R973	VRS-CY1JF103J	J	10k		Metal Oxide			P701	QPLGZ0974GEZZ	Z .	J Plug, 9pin	F
	R974	VRD-RA2BE271J	Ą	270	1/8W	Carbon	AA		P702	QPLGN0247REZ	Z.	J Plug, 2pin	F
	R975	VRD-RA2BE1R0J	J	1		Carbon	AA		P704	QPLGN0278GEZ	Ζ.	J. 1	F
	R976	VRD-RA2BE1R0J	J	1	1/8W	Carbon	AA	$\triangle$	P901	QPLGN0269GEZ	Z .	J Plug, 2pin	1
	R977	VRD-RA2BE1R0J	J	1	1/8W	Carbon	AA		P4401	QPLGN0859REZ	Z .	J Plug, 8pin	P
	R978	VRD-RA2HD561J	J	560	1/2W	Carbon	AA		P4402	QPLGZ0531GEZ	Z.	J. Plug, <b>5pi</b> n	F
	R979	VRD-RA2HD561J	_	560		Carbon	AA		P4403	QPLGZ1231GEZ	Z.	J Plug, 12pin	-
Δ	R980	VRG-SC2EBR47J	J	0.47	1/4W	Fuse Resis	torAB		P4404	QPLGZ1231GEZ	Z .	J Plug, 12pin	1
	R1501	VRS-CY1JF822J	J	8.2k	1/16W	/ Metal Oxide	AA s		P4405	QPLGZ0831GEZ	z.	J Plug, 8pin	A
	R1502	VRD-RA2BE392J				Carbon	AA		P5901	QPLGN1178GEZ	z.	J Plug, 11pin	-
	R1510	VRD-RA2BE182J	J	1.8k	1/8W	Carbon	AA		SC301	QSOCN1194REZ	Z.	J Socket, 11pin	-
	R1551	VRS-CY1JF472J	J	4.7k	1/16W	/ Metal Oxide	AA e		SC302	QSOCN0884REZ	z .	J Socket, 8pin	1
	R1552	VRS-CY1JF474J	J	4701	k 1/16W	/ Metal Oxide	AA s		SC303	QSOCN0884REZ	z .	J Socket, 8pin	1
	_R1553_	VRS-CY1JF101J	J	100	1/16V	/ Metal Oxide	AA_			-QSOGN0604REN	H	J-Socket-6pin	/
	R1554	VRS-CY1JF472J	J	4.7k	1/16\	/ Metal Oxide	AA e		SC701	QSOCN0704REN			1
	R2401	VRD-RA2BE392J	ل	3.9k	1/8W	Carbon	AA		SC702	QSOCN0704REN		J Socket, 7pin	-
	R2402	VRD-RA2BE681J		680	1/8W	Carbon	AA		TP601	QPLGZ0252GEZ		J Pług, 2pin	
	R2403	VRD-RA2BE154J		150	k 1/8W	Carbon	AA		TP701	QPLGN0247REZ			
	R2404	VRD-RA2BE273J		27k		Carbon	AA			QPLGN0447REZ		~	-
	R2405	VRD-RA2BE273J		27k		Carbon	AA		,, 1001	and the second second second		- · · · · · · · · · · · · · · · · · · ·	•
	R2406	VRD-RA2BE272J				Carbon	AA						
	R2407	VRS-CY1JF102J		1k		V Metal Oxid						End of Main	_
						Carbon						— Eliu oi maili	

	Part No.	* 	D	escri	ption Co	de	Ref. No.	Part No		<u>*</u>		Description	n C	ode
	DUNTK5	35	0XN	150		-		RESIS	STORS	(C	Conti	nued)		
	OPERAT	101	NU N	IJΤ			R5054	VRS-CY1JF	101J	J	100	1/16W Meta	al Oxide	A
	OFERE						R5055	VRS-CY1JF	750J	J	75	1/16W Meta	al Oxide	A/
	INTEGRATE	D C	CIRCU	JITS										
IC5001			UPD16			AQ		MISCE	LLAN	EO	us !	PARTS		
							J5001	QJAKG002	0GEZZ	J	Jack			Αl
			one				J5002	QJAKE004	3GEZZ	J	Jack			Al
	TRANS						P5001	QPLGN058	0GEZZ	J	Plug,	5pin		A
Q5001	VSDTA114ES/-1		DTA11			AB	P5002	QPLGN057	8GEZZ	J	Piug,	5pin		A
Q5002	VSDTA114ES/-1	J	DTA114	4ES		AB	RMC5001	RRMCU008	52GEZZ	J	R/C	Receiver		A
							S5002	QSW-K009	4GEZZ	J	Switc	h		A
			_				\$5003	QSW-K009	4GEZZ	J	Swite	ch		Α
	DIO	DE:	S				\$5004	QSW-K009	5GEZZ	J	Switc			A
D5001	VHD1SS119//-1	J	188119	9		AB	S5006	QSW-K009		J	Swite			A
D5002	VHD1SS119//-1	J	188119	9		AB	S5007	QSW-K009		J				A
D5003	VHD1SS119//-1	J	188119	9		AB	\$5009	QSW-K009		J				A
D5004	VHD1SS119//-1	J	18811	9		AB	S5012	QSW-K009		J				Α
D5006	RH-PX0204GEZZ	J	Photo [	Diode	<b>;</b>	AB	\$5014	QSW-K009		J				Α
D5007	RH-PX0268CEZZ	J	Photo I	Diode	ł	AC	\$5015	QSW-K009		J	Swite			A
D5008	RH-PX0216GEZZ	J	Photo I	Diode	)	AB	S5016	QSW-Z000		V				A
D5010	VHD1SS119//-1	J	18811	9		AB		QSOCN07				tet, 7pin		A
					-			QSOCN04				et, 4pin		A
								QPLGN024			-	, 2pin		A
	CONT	rRC	LS				TP5005	QPLGN024	17REZZ	J	Plug	, 2pin		Α
R5050	RVR-B4373GEZZ	1												
113030		J				AD								
113030		J				AD								
113030	CAPA		ORS		4 ·	AD								
C5003	CAPA(	CIT		50V	Ceramic	AD AA								
		CIT	560p	50V 16V										
C5003	VCKYD41HB561K	CIT(	560p 22		Ceramic	AA								
C5003 C5005	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z	CIT(	560p 22 47 0.01	16V 16V 50V	Ceramic Electrolytic Electrolytic Ceramic	AA AB								
C5003 C5005 C5008	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K	CIT	560p 22 47 0.01 220p	16V 16V 50V 50V	Ceramic Electrolytic Electrolytic Ceramic Ceramic	AA AB AB AA				En	d of	Operatio	a Unit	
C5003 C5005 C5008 C5009	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z	CIT	560p 22 47 0.01 220p	16V 16V 50V 50V	Ceramic Electrolytic Electrolytic Ceramic Ceramic	AA AB AB AA				En	d of	Operatio	n Unit	
C5003 C5005 C5008 C5009 C5015	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K	CIT	560p 22 47 0.01 220p	16V 16V 50V 50V	Ceramic Electrolytic Electrolytic Ceramic Ceramic	AA AB AB AA				_			n Unit	
C5003 C5005 C5008 C5009 C5015	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K	CITO	560p 22 47 0.01 220p 220p	16V 16V 50V 50V	Ceramic Electrolytic Electrolytic Ceramic Ceramic	AA AB AB AA		DUI		53	54)	(M50	n Unit	
C5003 C5005 C5008 C5009 C5015	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K	CITC	560p 22 47 0.01 220p 220p DRS 39k 1	16V 16V 50V 50V 50V	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic	AA AB AA AA AA		DUI	NTK!	53 FIF	54) O UN	(M50 IIT	n Unit	
C5003 C5005 C5008 C5009 C5015 C5016	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K VCKYD41HB221K RESIS	CITC	560p 22 47 0.01 220p 220p DRS 39k 1	16V 16V 50V 50V 50V	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic	AA AB AA AA AA		DUI	NTK!	53 FIF	54) O UN	(M50	n Unit	
C5003 C5005 C5008 C5009 C5015 C5016	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K RESIS	STO	560p 22 47 0.01 220p 220p DRS 39k 1 12k 1 22k 1	16V 50V 50V 50V 1/16W 1/16W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic V Metal Oxide Carbon V Metal Oxide	AA AB AA AA AA	P801	DUI I MISC	NTK! REC T	53 FIF	54) OUS	(M50 IIT		
C5003 C5005 C5008 C5009 C5015 C5016 R5001 R5002 R5003 R5004	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K VCKYD41HB221K VRS-CY1JF393J VRD-RA2BE123J VRD-RA2BE472J	STO	560p 22 47 0.01 220p 220p <b>DRS</b> 39k 1 12k 1 22k 1 4.7k 1	16V 50V 50V 50V 1/16W 1/16W 1/8W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic V Metal Oxide Carbon V Metal Oxide Carbon	AA AB AA AA AA AA	P801 \$701	DUI MISC QPLGN02	NTK: REC 1 ELLA! 78GEZZ	53 FIF	54) UN OUS	(M50 IT PARTS		
C5003 C5005 C5008 C5009 C5015 C5016 R5001 R5002 R5003 R5004 R5005	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K VCKYD41HB221K  RESIS VRS-CY1JF393J VRD-RA2BE123J VRS-CY1JF223J VRS-CY1JF223J VRS-CY1JF221J	STO	560p 22 47 0.01 220p 220p DRS 39k 1 12k 1 22k 1 4.7k 1	16V 50V 50V 50V 1/16W 1/8W 1/16W 1/16W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic V Metal Oxide Carbon V Metal Oxide Carbon V Metal Oxide	AA AB AA AA AA AA AA		DUI MISC QPLGN02	NTK: REC 1 ELLA! 78GEZZ	53 FIF	54) UN OUS	(M50 IT PARTS		
C5003 C5005 C5008 C5009 C5015 C5016 R5001 R5002 R5003 R5004 R5005 R5006	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K VCKYD41HB221K  RESIS VRS-CY1JF393J VRD-RA2BE123J VRS-CY1JF223J VRD-RA2BE472J VRS-CY1JF221J VRD-RA2BE473J	STO	560p 22 47 0.01 220p 220p DRS 39k 1 12k 1 22k 1 4.7k 1 220 1	16V 50V 50V 50V 1/16W 1/8W 1/16W 1/16W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic V Metal Oxide Carbon V Metal Oxide Carbon V Metal Oxide Carbon V Metal Oxide Carbon	AA AB AA AA AA AA AA AA		DUI MISC QPLGN02	NTK: REC 1 ELLA! 78GEZZ	53 FIF	54) UN OUS	(M50 IT PARTS		
C5003 C5005 C5008 C5009 C5015 C5016 R5001 R5002 R5003 R5004 R5005 R5006 R5008	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K  RESIS VRS-CY1JF393J VRD-RA2BE123J VRS-CY1JF223J VRD-RA2BE472J VRS-CY1JF221J VRD-RA2BE473J VRD-RA2BE473J VRS-CY1JF472J	CIT <sup>(</sup>	560p 222 47 0.01 220p 220p 28 1 12k 1 22k 1 4.7k 1 4.7k 1 4.7k 1	16V 50V 50V 50V 1/16W 1/16W 1/16W 1/16W 1/16W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic V Metal Oxide Carbon V Metal Oxide	AA AB AA AA AA AA AA AA AA		DUI MISC QPLGN02	NTK: REC 1 ELLA! 78GEZZ	53 FIF	54) UN OUS	(M50 IT PARTS		
C5003 C5005 C5008 C5009 C5015 C5016 R5001 R5002 R5003 R5004 R5005 R5006 R5008 R5009	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K VCKYD41HB221K  RESIS VRS-CY1JF393J VRD-RA2BE123J VRD-RA2BE472J VRS-CY1JF221J VRD-RA2BE473J VRS-CY1JF472J VRS-CY1JF472J VRS-CY1JF472J	STO	560p 222 47 0.01 220p 220p 20p 20p 20p 20p 20p 20p 20p 2	16V 50V 50V 50V 50V 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic V Metal Oxide Carbon V Metal Oxide V Metal Oxide V Metal Oxide	AA AB AA AA AA AA AA AA AA AA		DUI MISC QPLGN02	NTK: REC 1 ELLA! 78GEZZ	53 FIF	54) UN OUS	(M50 IT PARTS		
C5003 C5005 C5008 C5009 C5015 C5016 R5002 R5003 R5004 R5005 R5006 R5008 R5009 R5010	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K VCKYD41HB221K VRS-CY1JF393J VRD-RA2BE123J VRD-RA2BE472J VRS-CY1JF221J VRD-RA2BE473J VRS-CY1JF472J VRS-CY1JF472J VRS-CY1JF472J VRS-CY1JF472J VRD-RA2BE331J	CITC J J J J J J J J J J J J J J J J J J J	560p 222 47 0.01 220p 220p DRS 39k 1 12k 1 22k 1 4.7k 1 4.7k 1 4.7k 1 330 1	16V 16V 50V 50V 50V 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic V Metal Oxide Carbon	AA AB AA AA AA AA AA AA AA AA AA		DUI MISC QPLGN02	NTK: REC 1 ELLA! 78GEZZ	53 FIF	54) UN OUS	(M50 IT PARTS		
C5003 C5005 C5008 C5009 C5015 C5016 R5001 R5002 R5003 R5004 R5005 R5006 R5008 R5009 R5010 R5011	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K VCKYD41HB221K VRS-CY1JF393J VRD-RA2BE123J VRD-RA2BE472J VRS-CY1JF223J VRD-RA2BE472J VRS-CY1JF472J VRS-CY1JF472J VRS-CY1JF472J VRD-RA2BE331J VRD-RA2BE473J	CITC UUUUUUUUUUUUUUUUUUUUUUUUUUUUUUUUUUU	560p - 22 47 0.01 220p 220p    DRS 39k 1 12k 1 22k 1 4.7k 1 4.7k 1 4.7k 1 4.7k 1 4.7k 1 4.7k 1 1 4.	16V 50V 50V 50V 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic V Metal Oxide Carbon Carbon Carbon	AA AB AA AA AA AA AA AA AA AA AA		DUI MISC QPLGN02	NTK: REC 1 ELLA! 78GEZZ	53 FIF	54) UN OUS	(M50 IT PARTS		
C5003 C5005 C5008 C5009 C5015 C5016 R5001 R5002 R5003 R5004 R5005 R5006 R5008 R5009 R5010 R5011	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K VCKYD41HB221K  RESIS VRS-CY1JF393J VRD-RA2BE123J VRS-CY1JF223J VRS-CY1JF221J VRD-RA2BE472J VRS-CY1JF472J VRS-CY1JF472J VRS-CY1JF472J VRD-RA2BE331J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRS-CY1JF472J	STO	560p 222 47 0.01 220p 220p DRS 12k 1 4.7k 1 4.7k 1 4.7k 1 4.7k 1 4.7k 1	16V 50V 50V 50V 50V 1/16W 1/16W 1/16V 1/16V 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic V Metal Oxide Carbon V Metal Oxide V Metal Oxide Carbon Carbon V Metal Oxide	AA AB AA		DUI MISC QPLGN02	NTK: REC 1 ELLA! 78GEZZ	53 FIF	54) UN OUS	(M50 IT PARTS		
C5003 C5005 C5008 C5009 C5015 C5016 R5001 R5002 R5003 R5004 R5005 R5006 R5008 R5009 R5010 R5011 R5011 R5012	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K VCKYD41HB221K  RESIS VRS-CY1JF393J VRD-RA2BE123J VRD-RA2BE472J VRS-CY1JF221J VRD-RA2BE473J VRS-CY1JF472J VRS-CY1JF472J VRD-RA2BE472J	STO	560p 222 47 0.01 220p 220p 27 12k 1 22k 1 4.7k 1 4.7k 1 330 1 4.7k 1 4.7k 1 220 1	16V 50V 50V 50V 50V 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic Ceramic V Metal Oxide Carbon Carbon V Metal Oxide Carbon V Metal Oxide Carbon Carbon V Metal Oxide Carbon	AA AB AA		DUI MISC QPLGN02	NTK: REC 1 ELLA! 78GEZZ	53 FIF	54) UN OUS	(M50 IT PARTS		
C5003 C5005 C5008 C5009 C5015 C5016 R5001 R5002 R5003 R5004 R5005 R5006 R5008 R5009 R5010 R5011 R5012 R5013 R5014	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K VCKYD41HB221K  RESIS VRS-CY1JF393J VRD-RA2BE123J VRD-RA2BE472J VRD-RA2BE472J VRS-CY1JF221J VRD-RA2BE473J VRS-CY1JF472J VRD-RA2BE331J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE221J VRD-RA2BE221J	STO	560p 222 47 0.01 220p 220p 27 12k 1 22k 1 4.7k 1 4.7k 1 330 1 4.7k 1 4.7k 1 220 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 1 1	16V 50V 50V 50V 50V 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic Ceramic V Metal Oxide Carbon Carbon V Metal Oxide Carbon Carbon Carbon Carbon	AA AB AA A		DUI MISC QPLGN02	NTK: REC 1 ELLA! 78GEZZ	53 FIF	54) UN OUS	(M50 IT PARTS		
C5003 C5005 C5008 C5009 C5015 C5016 R5001 R5002 R5003 R5004 R5005 R5006 R5008 R5009 R5010 R5011 R5012 R5013 R5014 R5015	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K VCKYD41HB221K  RESIS VRS-CY1JF393J VRD-RA2BE123J VRD-RA2BE472J VRD-RA2BE472J VRS-CY1JF221J VRD-RA2BE472J VRS-CY1JF472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE21J VRD-RA2BE221J VRD-RA2BE221J	STO	560p 222 47 0.01 220p 220p    DRS 39k 1 12k 1 22k 1 4.7k 1 4.7k 1 4.7k 1 4.7k 1 220 1 220 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 220 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 20 1 2 2	16V 50V 50V 50V 50V 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/18W 1/18W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic V Metal Oxide Carbon Carbon Carbon Carbon Carbon Carbon Carbon Carbon	AA AB AA A		DUI MISC QPLGN02	NTK: REC 1 ELLA! 78GEZZ	53 FIF	54) UN OUS	(M50 IT PARTS		
C5003 C5005 C5008 C5009 C5015 C5016 R5001 R5002 R5003 R5004 R5005 R5006 R5008 R5009 R5010 R5011 R5012 R5013 R5014	VCKYD41HB561K VCEAEA1CW226M VGEAEA1CW476M VCKYCY1HF103Z VCKYD41HB221K VCKYD41HB221K VCKYD41HB221K  RESIS VRS-CY1JF393J VRD-RA2BE123J VRD-RA2BE472J VRD-RA2BE472J VRS-CY1JF221J VRD-RA2BE473J VRS-CY1JF472J VRD-RA2BE331J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE472J VRD-RA2BE221J VRD-RA2BE221J	STO	560p 222 47 0.01 220p 220p 20p 20p 20p 20p 20p 20p 20p 2	16V 50V 50V 50V 50V 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/16W 1/18W 1/16W 1/18W 1/16W	Ceramic Electrolytic Electrolytic Ceramic Ceramic Ceramic Ceramic V Metal Oxide Carbon Carbon V Metal Oxide Carbon Carbon Carbon Carbon	AA AB AA A		DUI MISC QPLGN02	NTK: REC 1 ELLA! 78GEZZ	53 FIF	54) UN OUS	(M50 IT PARTS		<i>p</i>

Ref. No.	Part No.	*	Description	Code	Ref. No.	Part No.	*	Description	Code
			56XM50			CAPACITOR	S (Con	tinued)	_
					C6309	VCKYCY1EB103K	J 0.01	25V Ceram	ic AA
	H	li-Fi U	NII		C6310	VCKYCY1EB103K	J 0.01	25V Ceram	ic AA
						VCFYSA1HB153J	J 0.01	5 50V Mylar	AA
	INTEGE	RATED	CIRCUITS		C6312	VCEAEM0JW107M	J 100	6.3V Electro	lytic AB
100004			AN3965F	AV	C6313	VCEAEM1HW225N	1 J 2.2	50V Electro	lytic AB
IC6301				AE	C6314	VCEAEM1CW336N		16V Electro	•
IC6302 IC6504				AG	C6315	VCKYCY1CB473K	J 0.04	7 16V Ceram	
IC6504			BA15218F	AF	C6316	VCKYCY1AF105Z	J 1	10V Ceram	
100000	VHIBATSETO	12 0			C6318	VCKYCY1AF105Z	J 1	10V Ceram	
					C6320	VCKYCY1CF334Z	J 0.33		
	TR	ANSIS	TORS		C6322	VCEAEA0JW476M		6.3V Electro	-
			DTC144EK	АВ	C6323	VCEAEA1CW106N		16V Electr	•
Q6302	VSDTC144EK		DTA124EK	AB	C6324	VCEAEM1CW106	<b>vi</b> J 10	16V Electr	•
Q6305	VSDTA124EK		DTC363TK	AB	C6325	VCEAEM1CW106		16V Electr	-
Q6306	VSDTC363TK		DTC363TK	AB	C6326	VCEAEM1CW106		16V Electr	•
Q6307	VSDTC363TK		DTC363TK	AB	C6327	VCEAEM1CW226		16V Electr	-
Q6308	VSDTC363TK		DTC144EK	AB	C6328	VCEAEA1CW106		16V Electr	•
Q6311	VSDTC144EH VSDTC124EH		DTC124EK	AB	C6329	VCCCCY1HH560.			
Q6312			DTC144EK	AB	C6330	VCEAEA1HW335		50V Electr	•
Q6315				AB	C6331	VCFYSA1HB153J		15 50V Mylar	
Q6316				AB	C6332	VCEAEM1CW106		16V Electi	-
Q6317				AB	C6333	VCKYCY1HB681H		•	
Q6318	_			АВ	C6334	VCEAEM1CW106			rolytic AB
Q6321				AA	C6337	VCFYSA1HB223J		22 50V Mylai	
Q6323		-		AB	C6338	VCKYCY1HB682I		00p 50V Cera	
Q6504 Q6507				AB	C6339	VCKYCY1HB682		00p 50V Cera	
Q6508				AB	C6340	VCKYCY1HB222		00p 50V Cera 10V Cera	
Q6511				AC	C6341	VCKYCY1AF105			
QUST	V02017100				C6342	VCKYCY1HB182			
					C6343	VCKYCY1HB332		00p 50V Cera 0p 50V Cera	
		DIOD	ES		C6344				trolytic AB
D0000	9 VHD1SS119	// <sub>-</sub> 1 .	J 188119	AB	C6345				trolytic AB
D6309		,	J Zener Diode	AA	C6349				
D6501	I HU-EXVOS+	• ساسان ا	201101 21010		C6350			10V Cera	
					C6352			10V Cera	
	COILS A	ND TR	ANSFORMERS		C6354				
			J 68µH	AB	C6356			047 16V Cera	•
L6301			Ј 8200μН	AC	C6357 C6358				
L6300	3 47-1702230	0000	0 0200µ		C6359				trolytic AB
					C6360			00 6.3V Elec	trolytic AB
		CONT	ROLS		C6361			.015 50V Myla	ar AA
				AD	C6362				amic AA
R630			J 22k (B), PAL Adj. J 10k (B), NTSC Ad		C6376				trolytic AB
R631					C6385				amic AA
R636			J 47k (B), PAL Adj.		C6388				amic AA
R636	65 RVR-M4500	JCEZZ	3 4/K (D), FAL AU.	, · · ·	C638				
					C639				
		CVBVC	CITORS		C639				
				min ÅA	C639			900p 50V Cer	
C630					C639			900p 50V Cer	amic AA
C630			•		C652				ctrolytic AB
C630					C652			0 16V Ele	ctrolytic AB
C630					C652			).22 16V Ce	ramic AA
C636					C652		06M J 1	0 16V Ele	ctrolytic AB
C63	08 VCCCCY1	HH560J	n pob pon cels				-		

	Ref. No.	Part No.	*		Descri	ption	Ċod	ie .	Ref. No.	Part No.	*		Descriptio	n Co	de
_		CAPACITOR	SI	Conti	nued	I)				RESISTOR	S (C	on	tinued)		
	C6528				16V	Electrolytic	o A	AΒ	R6354	VRS-CY1JF223J	J	22k	1/16W Meta	al Oxide	AA
	C6529	VCEAEM1CW106M			-	Ceramic		λA	R6355	VRD-RA2BE393J	J	39k	1/8W Carl	oon	AA
	C6530	VCCCCY1HH181J				Electrolytic	c A	λB	R6356	VRS-CY1JF223J	J	22k	1/16W Met	al Oxide	AA
	C6531	VCEAGA1AW107M		100		Electrolytic		AB	R6357	VRD-RA2BE393J	J	39k	1/8W Carl	bon	AA
	C6532	VCEAEA1AW107M	_			Ceramic		A.A	R6358	VRS-CY1JF471J	J	470	1/16W Met	al Oxide	AA
		VCCCCY1HH181J		10		Electrolytic	c A	AΒ	R6359	VRS-CY1JF472J	J	4.7	k 1/16W Met	al Oxide	AA
	C6533	VCEAEM1CW106N		100p	50V	Ceramic		AΑ	R6360	VRS-CY1JF123J	J	12k	: 1/16W Met	al Oxide	AA
	C6536	VCCCCY1HH101J		100p	50V	Ceramic	,	٩A	R6361	VRS-CY1JF392J	J	3.9	k 1/16W Met	al Oxide	AA
	C6537	VCCCCY1HH101J			50V	Ceramic		AΑ	R6362	VRS-CY1JF103J	J	10	1/16W Met	al Oxide	AA
	C6538	VCCCCY1HH101J			50V	Ceramic		AA	R6364	VRS-CY1JF152J	J	1.5	k 1/16W Met	al Oxide	AA
	C6539	VCCCCY1HH101J		100p	16V	Ceramic		AA	R6371	VRS-CY1JF104J	J	100	0k 1/16W Met	tal Oxide	AA
	C6540	VCKYCY1CF104Z		0.1	16V	Electrolyti		AB	R6372	VRS-CY1JF104J	J	100	ok 1/16W Met	tal Oxide	AA
	C6545	VCEAEA1CW106M		10	16V	Electrolyti		AB	R6378	VRS-CY1JF224J	J	22	ok 1/16W Me	tal Oxide	AA
	C6546	VCEAEA1CW476N	1 J	47	100	Liecaorya			R6389	VRS-CY1JF562J	J	5.6	k 1/16W Me	tal Oxide	AA
									R6390	VRS-CY1JF272J	J	2.7	k 1/16W Me	tal Oxide	AA
		550	CT/	ADC.					R6391	VRS-CY1JF562J	J	5.6	k 1/16W Me	tal Oxide	AA
		RESI	510						R6392	VRS-CY1JF272J	J	2.7	rk 1/16W Me	tal Oxide	AA
	R6303	VRS-CY1JF101J	J			/ Metal Oxi			R6393	VRS-CY1JF472J	J	4.7	k 1/16W Me	tal Oxide	AA
	R6306	VRS-CY1JF331J	j			/ Metal Oxi			R6394	VRD-RA2BE333	J	33	k 1/8W Ca	rbon	AA
	R6307	VRS-CY1JF331J	J	- '		Metal Ox		AA	R6396	VRS-CY1JF154J			Ok 1/16W Me		AA
	R6309	VRS-CY1JF151J	J	150		V Metal Ox	ide	AA	R6521	VRS-CY1JF473J			k 1/16W Me	tal Oxide	AA
	R6311	VRD-RA2BE153J	J	15k		Carbon		AA	R6522	VRD-RA2BE333		33			AA
	R6312	VRS-CY1JF392J	J	3,9k		V Metal Ox		AA	R6523	VRS-CY1JF473J		47			AA
	R6313	VRS-CY1JF123J	J	12k		V Metal Ox	ide	AA		VRS-CY1JF104J			Ok 1/16W Me		
	R6314	VRD-RA2BE393J	ل	39k	1/8W	Carbon		AA	R6524	VRS-CY1JF104J			Ok 1/16W Me		
	R6315	VRS-CY1JF223J	J	22k	1/160	V Metal Ox	ide	AA	R6525	VRS-CY1JF822J			2k 1/16W Me		
	R6317	VRD-RA2BE393J	J	39k	1/8W	Carbon		AA	R6526	VRS-CY1JF332			3k 1/16W Me		
	R6318	VRS-CY1JF223J	J	22k	1/16V	W Metal Ox	dde	AA	R6527				7k 1/16W Me		
	R6320	VRS-CY1JF472J	J	4.7k	1/16\	W Metal Ox	cide	AA	R6528	VRS-CY1JF473				etal Oxide	
	R6321	VRS-CY1JF471J	J	470	1/16\	W Metal Ox	kide	AA	R6529	VRS-CY1JF101				etal Oxide	
	R6322	VRS-CY1JF821J	j	820	1/16\	W Metal Ox	xide	AA	R6530	VRS-CY1JF101			7k 1/16W M		
	R6323	VRS-CY1JF473J	J	47k	1/16\	W Metal Ox	xide	AA	R6531	VRS-CY1JF473		-	3k 1/16W M		
	R6324	VRS-CY1JF821J	J	820	1/16\	W Metal O	xide	AA	R6532	VRS-CY1JF332		_	.2k 1/16W M		
	R6325	VRS-CY1JF473J	J	47k	1/16\	W Metal O	xide	ΑĄ	R6533	VRS-CY1JF822				etal Oxide	
	R6326		J	820	1/16	W Metal O:	xide	AA	R6537	VRS-CY1JF750		J 7			AA
	R6327		J	47k	1/16	W Metal O	xide	AA	R6538	VRD-RA2BE271		J 2	70 1/8W C		AA
	R6328		J	33k	1/16	W Metal O	xide	AA	R6539	VRD-RA2BE271	J	JZ	70 1/8W C	arbon	
	R6329		J	22k	1/16	W Metal O	xide	AA							
	R6331			J 22k	1/16	W Metal O	xide	AA		MISCELL	A BIT	: OU	STONE S		
	R6332			180	1/16	W Metal O	xide	AA							
	R6333			5.6	< 1/16	W Metai O	xide	AA	J6301	QJAKL0008GE			ack		AC
	R6337			J 390	1/16	W Metal O	xide	AA	P6301	QPLGN0578GE					AE
	R6338			J 220	1/8V	V Carbon		AA	P6302						AE
	R6339			J 180	1/16	W Metal C	xide	AA	P6303						AE
	R6341			J 5.6I	k 1/16	W Metal C	xide	AA		1 QSOCZ0531GE					AD
	R6342					W Metal C				2 QSOCZ1231GE					AC
	R6343			J 10k		W Metal C				3 QSOCZ1231GE					AC
	R634			J 10k		SW Metal C			SC630	)4 QSOCZ0831GI	-7.Z	J S	Socket, 8pin		AE
	R634					W Metal C									
	R634					N Carbon		AA							
						6W Metal C		AA e							
	R634					SW Metal C									
	R634					SW Metal C									
	R634					6W Metal C									
	R635 R635					6W Metal C					_		End of Hi	i-Fi Unit	t —
		1 VIDO VI JUEY/A		→ T+1											

\* Description Code Ref. No. Part No. Code Description Ref. No. Part No.  $\star$ CONTROLS **DUNTK5357XM50** R1961 RVR-M4809GEZZ J 4.7k (B), Sub CH Level Adj.AC MPX UNIT RVR-M4803GEZZ J 470k (B) AC R5410 INTEGRATED CIRCUITS CAPACITORS **BM** J SA7283G2 VHiSA7283G2-1 101701 IX0055GE AG VCKYCY1HF103Z Л J 0.01 50V Ceramic AA IC1901 RH-iX0055GEZZ C1701 AS IC1902 VHITDA9840T-1 Ъ TDA9840T C1702 VCKYCY1HF103Z J 0.01 50V Ceramic AA AH MM1115XF 390p 50V Ceramic AΑ VHIMM1115XF1E J. VCCCCY1HH391J J IC5402 C1704 AL TL8828P IC5403 VHiTL8828P/-1 C1705 VCCCCY1HH100D J 10p 50V Ceramic AA VCEAEA1CW106M J 10 16V Electrolytic AB C1706 0.1 25V Ceramic AA VCKYCY1EF104Z C1707 VCEAEM1CW106M J Electrolytic AB **TRANSISTORS** C1708 16V VCEAEA1HW105M J 4 50V Electrolytic AB C1709 J 2SC2735 AC VS2SC2735//1E Q1701 C1710 VCEAEA1CW106M J 10 16V Electrolytic AB AD 2SA950-Y VS2SA950-Y/1E Ĭ. O1702 25V Ceramic AΑ C1713 VCKYCY1EF104Z AR DTC124EK Q1703 VSDTC124EK/-1 .1 Electrolytic AB VCEAEA1CW106M J 16V C1716 VS2SC2412KQ-1 2SC2412KQ AA O1901 VCEAEA1HW105M J 50V Electrolytic AB C1717 2SC1740SQR AC VS2C1740SQR1E J Q1902 0.047 50V AA C1718 VCFYSA1HB473J Mylar AA Q5401 VS2SA1037KQ-1 J 2SA1037KQ AB VCEAEA1CW106M J 10 16V Electrolytic C1720 AΒ VSDTC124EK/-1 J DTC124EK O5402 C1721 VCKYCY1HF103Z J 0.01 50V Ceramic AA AA J 2SA1037KQ Q5403 VS2SA1037KQ-1 VCEAEM0JW476M 47 6.3V Electrolytic AB C1722 AA VS2SA1037KQ-1 J 2SA1037KQ Q5404 J 220p Ceramic AA VCCCCY1HH221J 50V C1723 AA .1 2SC2412KQ VS2SC2412KQ-1 O5405 AB VCFYSA1HB104J J 0.1 50V Mylar C1724 AA JL 2SC2412KG Q5406 VS2SC2412KQ-1 VCEAEA1CW106M J 16V Electrolytic AB C1725 VCKYCY1EF104Z J 0.1 25V Ceramic AA C1726 VCEAEA1HW105M J 50V Electrolytic AB C1727 DIODES C1728 VCKYCY1HF103Z J 0.01 50V Ceramic AA AB VHD1SS119//-1 J 1SS119 D1701 16V AB C1729 VCEAEA1CW106M J 10 Electrolytic AC J OF4076 D1720 VHDOF4076//-1 C1730 VCEAEA1HW334M J 0.33 50V Electrolytic AB AB Thermistor TH5401 RH-HZ0031GEZZ J VCFYSA1HB223J J 0.022 50V Mylar AA C1731 100p 50V Ceramic AA VCCCPA1HH101J J C1732 VCCCPA1HH101J J 100p 50V Ceramic AA C1733 PACKAGED CIRCUIT VCKYCY1HF103Z J 0.01 50\/ Ceramic AA C1734 RCRSB0183GEZZ J Crystal, 8.192MHz AM X1701 16V Electrolytic AB C1735 VCEAEA1CW106M .1 10 RCRSB0174GEZZ J Crystal, 10MHz AF X1901 Electrolytic C1736 J 0.47 50V AB VCEAEA1HW474M AG RCRSB0111GEZZ J Crystal, 13.571MHz X5403 AA C1737 VCKYCY1HF103Z .1 0.01 50V Ceramic VCEAEA1CW106M J 10 16V Electrolytic AB C1738 VCKYCY1EF104Z J 0.1 25V Ceramic AA C1739 **COILS AND TRANSFORMERS** Electrolytic AB VCEAEA0JW476M J 47 6.3V C1740 CF1901 RFILC0063CEZZ J Filter AG C1748 VCEAEMOJW476M J 47 6.3V Electrolytic AB AB VCEAEM1AW336M J 33 10V Electrolytic AB 6.8µH C1749 L1701 VP-2K6R8K000K J AB VCCCCY1HH100D 50V Ceramic AA 6.8µH C1906 J 100 L1702 VP-2K6R8K000K J VCCCCY1HH100D 50V Ceramic AA L1704 VP-XF6R8K0000 6.8µH AB C1907 J 10p AB C1908 VCEAEA1CW106M J 10 16V Electrolytic AB L1706 VP-2K6R8K000K 6.8µH 220 Electrolytic AB 100µH AB C1909 VCEAEM0JW227M J 6.3V L1901 VP-DF101K0000 AB VCEAEM1CW106M J Electrolytic ΑB J 220µH C1910 16V VP-DF221K0000 L1902 AB VCKYCY1EB103K -0:01 25∀ Ceramic ΑA C1911 VP-XF-101K-0000-J--100µH L1903 AB 68µH AB C1912 VCFYSA1HB104J J 0.1 50V Mylar L5403 VP-DF680K0000 VCCCCY1HH470J 47p 50V Ceramic AA AB C1913 J L5406 47µH VP-XF470J0000 J AB AB C1914 VCEAEM1CW106M J 10 16V Electrolytic L5407 VP-XF330K0000 J 33µH ΑB L5408 VP-DF6R8K0000 6.8µH AB C1915 VCEAEA1CW106M J 10 16V Electrolytic J 100µH AB C1916 VCEAEA1CW106M J 16V Electrolytic AB VP-DF101K0000 L5409 AB VCEAEA1CW106M J 10 16V Electrolytic ΑB L5412 VP-ZK100K0000 10µH C1917 AD VCQYTA1HM103J J 0.01 50V Mylar AA T1901 RCiLi0089GEZZ Coil C1918 AE RCiLi0489CEZZ J Coil C1919 VCQYTA1HM103J J 0.01 50V Mylar AA T1902

ef. No.	Part No.	*		Descri	ption (	Code	Ref. No.	Part No.	*		Desc	ription C	ode
	CAPACITO		Conti	inuec	  )			RESISTOR	S (0	Conti	nued	)	
0400-					Ceramic	AA	R1716	VRD-RA2BE102J	J	1k	1/8W	Carbon	ДΑ
C1920	VCKYCY1HF103				Electrolytic	AB	R1719	VRD-RA2BE102J	J	1k	1/8W	Carbon	AA
C1921	VCEAEA1AW47		47		Electrolytic		R1721	VRS-CY1JF152J	J	1.5k	1/16V	Metal Oxide	AA
C1930	VCEAEA1CW10		10		Electrolytic		R1909	VRS-CY1JF562J	J	5.6k	1/16V	V Metal Oxide	AA
C1931	VCEAEA1CW10		10			AA	R1913	VRS-CY1JF331J	J	330	1/16V	V Metal Oxide	A/
C1939	VCCSD41HL100	)J J	10p	-	Ceramic		R1914	VRS-CY1JF333J	J			V Metal Oxide	
C1940	VCCSD41HL100	)J J		50V	Ceramic	AA		VRS-CY1JF332J	J			V Metal Oxide	
C1951	VCKYCY1HF103	3Z J		50V	Ceramic	AA	R1915	VRS-CY1JF222J	J			V Metal Oxide	
C1952	VCKYCY1HF103	3Z J	0.01	50V	Ceramic	AA	R1916					V Metal Oxide	
C1953	VCKYCY1HF10	3Z J	0.01	50V	Ceramic	AA	R1918	VRS-CY1JF331J	J				
C1954	VCKYCY1EB103	зк Ј	0.01	25V	Ceramic	. AA	R1920	VRS-CY1JF104J	J			V Metal Oxide	
C1955	VCKYCY1HF10	3Z J	0.01	50V	Ceramic	AA	R1922	VRS-CY1JF104J	J			V Metal Oxide	
C1956	VCEAEA1CW10	6M J	10	16V	Electrolytic	: AB	R1951	VRS-CY1JF561J	J			W Metal Oxide	
C1957	VCCCCY1HH12			50V	Ceramic	AA	R1952	VRS-CY1JF681J	J	680		V Metal Oxide	
C1958	VCKYCY1HB56			p 50V	Ceramic	AA	R1953	VRS-CY1JF153J	J	15k	1/16\	W Metal Oxide	
C5401	VCKYCY1HF10			50V	Ceramic	AA	R1954	VRS-CY1JF392J	J	3.9k	1/16\	W Metal Oxide	A
C5402	VCEAEM1CW1			16V	Electrolytic	: AB	R1955	VRS-CY1JF331J	J	330	1/16	W Metal Oxide	e A
C5402	VCCCCY1HH18			50V	Ceramic	AA	R1956	VRS-CY1JF4R7J	J	4.7	1/16	W Metal Oxide	) A
					Ceramic	AA	R1957	VRS-CY1JF151J	j	150	1/16	W Metal Oxide	, A
C5404	VCCCCY1HH10				Ceramic	AA	R1958	VRS-CY1JF152J	J	1.5	1/16	W Metal Oxide	, A
C5405	VCCCCY1HH33				Ceramic	AA	R1960	VRS-CY1JF182J	J	1.8	1/16	W Metal Oxide	3 A
C5406	VCCCCY1HH1		•				R1963	VRS-CY1JF822J	J		1/16	W Metal Oxide	e A
C5407	VCEAEM1CW4			16V	Electrolytic		R5401	VRS-CY1JF472J	J	4.7	1/16	W Metal Oxide	a /
C5408	VCEAEA1HW1			50V	Electrolyti			VRS-CY1JF332J				W Metal Oxide	
C5409	VCEÁEM1HW1			50V	Electrolyti		R5402	VRS-CY1JF183J				W Metal Oxide	
C5410	VCEAEM1CW2	26M -	22	16V	Electrolyti		R5404					W Metal Oxide	
C5411	VCKYCY1HF10	)3Z .	0.01	50V	Ceramic	AA	R5405	VRS-CY1JF183J		J 18k			
C5412	VCEAEM1CW1	06M .	1 10	16V	Electrolyti		R5406	VRS-CY1JF100J		J 10		W Metal Oxide	
C5413	VCCCCY1HH1	80J .	J 18p	50V	Ceramic	AA	R5407	VRS-CY1JF102J		J 1k		W Metal Oxide	
C5414	VCCCCY1HH6	80J ,	J 68p	50V	Ceramic	AA	R5409	VRS-CY1JF561J		J 560		W Metal Oxide	
C5415	VCCCCY1HH1	80J .	J 18p	50V	Ceramic	AA	R5411	VRS-CY1JF102J	١ ،	J 1k		W Metal Oxide	
C5416	VCEAEM0JW1	07M «	J 100	6.3\	/ Electrolyti	ic AB	R5412	VRS-CY1JF123J		J 12		W Metal Oxide	
C5417			J 15p	50V	Ceramic	AA	R5413			J 331	1/16	W Metal Oxide	
C5418		74M	J 0.47	50V	Electrolyt	ic AB	R5414			J 680		W Metal Oxide	
C5419				16V	Electrolyt	ic AB	R5415	VRS-CY1JF391	,	J 396		SW Metal Oxid	
C5420				50V	Ceramic	AA	R5416	VRS-CY1JF101		J 10		W Metal Oxid	
C5424					Elect.(N.I		R5417	VRS-CY1JF221				SW Metal Oxid	
C5425					Electrolyt		R5418	VRS-CY1JF182	J	J 1.8	k 1/16	SW Metal Oxid	e .
- '					Ceramic	AA	R5419	VRS-CY1JF471	J	J 47	0 1/16	SW Metal Oxid	e .
C5426				25\		AA	R5420		J	J 82	0. 1/16	SW Metal Oxid	е
C5427						AA	R5421		J	J 68	0 1/41	N Carbon	
C5428						AB	R5422			J 1.5	k 1/16	SW Metal Oxid	е
C5429	VCFYSA1HB1	043	J U.1	501	/ Mylar	AD	R5423			J 47	0 1/10	6W Metal Oxid	e
	В	ECIC	TORS	•			R5425			J 3.3	3M 1/1	6W Metal Oxid	le
					W Metal Ox	ido AA				•			
R170			J 15k		W Metal Ox								
R170					W Metal Ox			MISCELL	ANE	EOUS	S PAF	RTS	
R1703	3 VRS-CY1JF33	31J	J 330		W Metal Ox		P1701	QPLGN0478GE	77	J Ph	Ja. 4pii	n	
R170	4 VRS-CY1JF10	)OJ	J 10					01 QSOCN0809RE			cket, 8		
R170			J 150		:W Metal Ox :W Metal Ox	ride AA		B1 QSOCN2407RE			cket, 2		
R170			J 100		W Metal Ox			82 QSOCN1838TA			cket, 1	•	
R170			J 1k					83 QSOCN0786TA					
R171					W Metal Ox	dde AA					cket, 7		
R171	1 VRS-CY1JF33		J 33k		W Metal Ox			01 QSOCN0709RE			cket, 7		
R171	2 VRS-CY1JF10		J 10k		W Metal Ox			01 QLUGP0101GE			st Poir		
B171	3 VRS-CY1JF22		J 22k		W Metal Ox		- IP170	03 QLUGP0101GE	:FW	J Te	st Poir	nt	
R171	4 VRS-CY1JF10		J 1M		iW Metal Ox						_		_
	5 VRS-CY1JF68	R4.1	J 680	)k 1/18	SW Metal Ox	kide AA			~	— 1	≣nd c	of MPX Unit	ŧ -

ITK5359XM50 PACKAGED CIRCUIT  LCD UNIT X8930 RCRSB0168GEZZ J Crystal, 4.43	
LCD LIMIT X8930 RCRSR0168GF77 J Crystal 4.41	
LCD CIVIT	3MHz A
X8931 RCRSB0216GEZZ J Crystal, 3.50	BMHz A
GRATED CIRCUITS	
AP-1 J IR3Y29AP AU -ma-1 l l zosna1m ap <b>COILS AND TRANSFORME</b>	:De
THE TO EZSCIVE IN	
7F-1 J NJM2107F AE L8901 VP-XF390K0000 J 39μH	Δ
5V-1 J NJM4565 AF L8910 VP-XF680K0000 J 68μH	Δ
8F1E J BA15218F AF L8930 VP-2K101K000K J 100μH	Д
8F1E J BA15218F AF L8931 VP-2K101K000K J 100μH	A
/11-1 J PQ30RV11 AF L9001 VP-ZK220K0000 J 22μH	Д
L9002 VP-ZK1R2K0000 J 1.2µH	A
L9013 VP-XF100K0000 J 10μH	A
<b>RANSISTORS</b> L9060 VP-2K101K000K J 100μH	A
EK/-1 J DTC124EK AB L9101 VP-2K470K000K J 47μH	A
EK/-1 J DTC144EK AB L9102 VP-2K100K000K J 10μH	A
EK/-1 J DTC144EK AB L9104 VP-2K470K000K J 47μH	А
EK/-1 J DTA144EK AC	
EK/-1 J DTC144EK AB	
EK/-1 J DTA124EK AB CONTROLS	
2KQ-1 J 2SC2412KQ AA R8902 RVR-M4339GEZZ J 33k (B)	A
2KQ-1 J 2SC2412KQ AA R8961 RVR-M4343GEZZ J 100k (B)	A
2KQ-1 J 2SC2412KQ AA R8966 RVR-M4343GEZZ J 100k (B)	A
'KQ-1 J 2SA1037KQ AA R9021 RVR-M4343GEZZ J 100k (B)	A
EK/-1 J DTC144EK AB R9061 RVR-M4346GEZZ J 220k	A
/KQ-1 J 2SA1037KQ AA	•
2KQ-1 J 2SC2412KQ AA	
EK/-1 J DTC114EK AB CAPACITORS	•
TV/4 L DTO+44EV AD	
Casol VCCCT innasus 3 asp auv	Ceramic A
COSUZ VCCCCTINNIOU J 10p SUV	Ceramic A
COULD VORTO 1 TRANSPORTO AC	Ceramic A
MAE 1 TRANSISTOR AR	Electrolytic A
Coada VCCCCTIANTSID D 150p 50V	Ceramic A
C8900 VCKTCTTHB081K J B8UP 5UV	
CODIE I TRANSISTOR AC	Ceramic A
EK/1   DTC194EK AR	Ceramic A
DOME L TRANSPOTOR	Trimmer A
COSTS VORTOTITIOSZ J U.UI SUV	Ceramic A
C6914 VCKTCTINF103Z 3 0.01 50V	Ceramic A
KQ-1 J 2SC2412KQ AA C8915 VCKYCY1HF103Z J 0.01 50V	Ceramic A
C8916 VCCCCY1HH390J J 39p 50V	Ceramic A
C8917 VCFYSA1HB334J J 0.33 50V	Mylar A
DIODES C8920 VCKYCY1HF103Z J 0.01 50V	Ceramic A
9//-1 J 1SS119 AB C8925 VCEAEA1HW474M J 0.47 50V	Electrolytic A
3//-1 J 1SS119 AB C8926 VCKYCY1HF103Z J 0.01 50V	Ceramic A
TRF-1 J HVU17TRF AE C8930 VCKYCY1HF103Z J 0.01 50V	Ceramic A
GEZZ J Zener Diode AA C8931 VCCCCY1HH8R0D J 8p 50V	Ceramic A
0.000	Ceramic A
	Ceramic A
GEZZ J Zener Diode AA C8936 VCCCCY1HH6R0D J 6p 50V	Ceramic A
0.555	Ceramic A
	Ceramic A
2014	Ceramic A
	Ceramic A
LONG VENTETIAL HOLD III	
9//-1 J 1SS119 AB C8942 VCKYCY1HF103Z J 0.01	50V

Ref. No.	Part No.	*		Descri	ption (	Code	Ref. No.	Part No.	*		Descrip	tion C	ode
	CAPASITO	RS	Cont	inued	)			CAPACITOR	RS (	Cont	inued)		
C8947	VCKYCY1HF103		0.01		Ceramic	AA	C9122	VCKYCY1EF104Z	J	0.1	25V C		AΑ
C8950	VCKYCY1HF103		0.01	50V	Ceramic	AA	C9125	RC-EZ0458GEZZ	J	680		ectorolytic	ΑC
C8955	VCKYCY1HF103		0.01	50V	Ceramic	AA	C9126	VCKYCY1EB103K	J	0.01	25V C	eramic	AA
C8960	VCKYCY1HF103		0.01	50V	Ceramic	AA							
C8962	VCKYCY1HB561		560p	50V	Ceramic	AA							
C8963	VCKYCY1EF104		0.1	25V	Ceramic	AA		RES	ST	ORS			
C8965	VCKYCY1HF103		0.01	50V	Ceramic	AA	R8901	VRS-CY1JF103J	J	10k	1/16W M	etal Oxide	A
C8970	VCKYCY1CF104		0.1	16V	Ceramic	AA	R8903	VRS-CY1JF153J	J	15k	1/16W M	etal Oxide	A
C8974	VCKYCY1HB391			50V	Ceramic	AA	R8904	VRS-CY1JF335J	J		1/16W M	etal Oxide	Α
C8977	VCEAEA1CW10		10	16V	Electrolytic	AB	R8905	VRS-CY1JF563J	J	56k	1/16W M	etal Oxide	Α
C8980	VCEAEA1CW10			16V	Electrolytic	AB	R8906	VRS-CY1JF273J	J		1/16W M	etal Oxide	Α
C8990	VCKYD41CY103			16V	Ceramic	AA	R8907	VRS-CY1JF151J	J		1/16W M	letal Oxide	Α
C8992	VCKYCY1AF105			10V	Ceramic	AC	R8908	VRS-CY1JF393J	J	39k	1/16W N	letal Oxide	Α
C8993	VCCCCY1HH56	_		50V	Ceramic	AA	R8909	VRS-CY1JF104J	J			letal Oxide	
C8994	VCEAEA1HW33			50V	Electrolytic	: AB	R8910	VRS-CY1JF154J	J			letal Oxide	
C8996	VCKYCY1HF103			50V	Ceramic	AA	R8913	VRD-RA2BE564J	J		1/8W C		A
C8998	VCEAEA1AW10			10V	Electrolytic	: AB	R8915	VRS-CY1JF223J	ں ل			letal Oxide	
C9001	VCKYCY1HB10			p 50V	Ceramic	AA	R8917	VRS-CY1JF105J				fetal Oxide	
C9001				50V	Ceramic	AA		VRS-CY1JF562J	J			fetal Oxide	
C9002	VCCCCY1HH47 VCKYCY1EF104		•	25V	Ceramic	AA	R8918		ل ا	-			
				10V	Ceramic	AC	R8920	VRS-CY1JF473J	J			Metal Oxide	
C9006	VCKYCY1AF105			50V	Electrolytic		R8921	VRS-CY1JF473J	J			Netal Oxide	
C9010	VCEAEA1HW10				Ceramic	AA	R8922	VRS-CY1JF333J	J			/letal Oxide	
C9011	VCCCCY1HH10		•			AA	R8923	VRS-CY1JF223J	J			Aetal Oxide	
C9013	VCCSD41HL560		56p	50V	Ceramic	AA	R8925	VRS-CY1JF822J	J			Aetal Oxide	
C9014	VCCSD41HL220		J 22p	50V	Ceramic		R8926	VRS-CY1JF562J	J			Aetal Oxide	
C9015	VCKYD41HB102			0p 50V	Ceramic	AA	R8927	VRS-CY1JF273J				Metal Oxide	
C9045	VCE9EA1HW10			50V	Elect.(N.P	•	R8930	VRD-RA2BE103J					
C9046	VCEAEA1HW47			50V	Electrolytic		R8931	VRS-CY1JF822J	Ų			Metal Oxide	
C9050	VCKYCY1EF10		J 0.1	25V	Ceramic	AA	R8932	VRS-CY1JF153J		15k	** *	vietal Oxide	
C9052	VCKYCY1EF10		J 0.1	25V	Ceramic	AA	R8933	VRS-CY1JF152J				Metal Oxide	
C9060	VCCCCY1HH8F			50V	Ceramic	AA	R8934	VRS-CY1JF153J				Metal Oxide	
C9062	VCKYCY1HF10				Ceramic	AA	R8935	VRS-CY1JF822J				Metal Oxide	
C9063	VCEAEM1AW1			10V	Electrolyti		R8936	VRS-CY1JF681J	4	J 680		Metal Oxide	
C9064	VCKYCY1EF10		J 0.1	25V	Ceramic	AA	R8937	VRD-RA2BE222	J,	J 2.2k	c 1/8W (	Carbon	
C9065	VCKYCY1EF10		J 0.1	25V	Ceramic	AA	R8945	VRS-CY1JF393J		J 39k	1/16W	Metal Oxide	е
C9101	VCEAEA1EW47	76M	J 47	25V	Electrolyti		R8946	VRS-CY1JF393J		J 39k	1/16W	Metal Oxide	е
C9102	VCEAEA1AW10	7M	J 100	10V	Electrolyti		R8947	VRS-CY1JF153J		J 15k	1/16W	Metal Oxide	e
C9103	VCKYCY1HF10	3Z	J 0.01	50V	Ceramic	AA	R8948	VRS-CY1JF473J	١,	j 47k	1/16W	Metal Oxide	е
C9104	VCEAEA1CW1	07M	J 100	16V	Electrolyt		R8950	VRS-CY1JF333J	١,	J 33k	1/16W	Metal Oxide	е
C9105	VCKYCY1EF10	4Z	J 0.1	25V	Ceramic	AA	R8951	VRS-CY1JF473J	١,	J 47k	1/16W	Metal Oxide	е
C9106	VCEAEA1CW1	07M	J 100	16V	Electrolyt	ic AC	R8955	VRS-CY1JF473J	١ ,	J 47k	1/16W	Metal Oxide	е
C9107	VCEAEA1CW4	76M	J 47	16V	Electrolyt	ic AB	R8956	VRS-CY1JF273J	، ا	J 27k		Metal Oxide	
C9108	VCKYCY1HF10	3Z	J 0.0	50V	Ceramic	AA	R8957	VRS-CY1JF683J	Ι,	J 68k	1/16W	Metal Oxide	е
C9109	VCEAEA1CW2	26M	J 22	16V	Electrolyt	ic AB	R8958	VRS-CY1JF333J	١,	J 33k	1/16W	Metal Oxid	е
C9110	VCEAEA1CW2	26M	J 22	16V	Electrolyt	ic AB	R8960	VRS-CY1JF273J	1	J 27k	1/16W	Metal Oxid	е
Ç9111	VCEAEA1EW4	76M	J 47	25V	Electrolyt	ic AC	R8962	VRS-CY1JF393J	J.	J 39k	1/16W	Metal Oxide	e
C9113	VCKYCY1HF10	3Z	J 0.0	1 50V	Ceramic	AA	R8965	VRS-CY1JF273J	J	J 27k	1/16W	Metal Oxide	e
C9114	VCKYCY1HF10		J 0.0	1 5 <b>0</b> V	Ceramic	AA	R8967	VRS-CY1JF393J	J .	J 39k	1/16W	Metal Oxid	ę
C9115	VCEAEA1CW4		J 47	16V	Electrolyt	ic AB	R8970	VRS-CY1JF102	!	J 1k	1/16W	Metal Oxide	е
C9116	VCEAEA1EW4			25V	Electrolyt	ic AC	R8974	VRS-CY1JF561	} ·	J 560	1/16W	Metal Oxid	
C9117	VCEAEA1EW4			25V	Electrolyt	ic AC	R8975					Metal Oxid	
C9118	VCEAEA1HW3			3 50V	Electrolyt	ic AB	R8976			J 10k		Metal Oxid	
C9119	VCEAEA1CW4			16V	Electrolyt	ic AB	R8977			J 10k		Metal Oxid	
22110	VCEAEA1CW1			16V	Electrolyt	ic AB	R8978			J 1k		Metal Oxid	
C9120	ACTVEVIOUS	COIN											

Ref. No.	Part No.	*	Description	Co	de	Ref. No.	Part No.	*		Descriptio	n Co	de ——
	RESISTOR	S (C	Continued)				RESISTORS	(C	ontir	nued)		
				Ovide	AA	R9118	VRS-CY1JF824J	J	B20k 1	1/16W Meta	al Oxide	٩A
R8981	VRS-CY1JF333J	_			AA		VRS-CY1JF824J	J	820k '	1/16W Meta	al Oxide	AA
R8982	VRS-CY1JF103J	_			AA	R9120	VRD-RA2BE124J			1/8W Carb		AA
R8985	VRS-CY1JF105J	_			AA	R9121	VRS-CY1JF224J	J :	220k	1/16W Meta	al Oxide	AA
R8991	VRS-CY1JF183J	J			AA		VRS-CY1JF824J	J	820k	1/16W Meta	al Oxide .	AA
R8992	VRS-CY1JF272J	J			AA		VRS-CY1JF392J	J	3.9k	1/16W Met	al Oxide	AA
R8994	VRS-CY1JF334J	J			AA		VRS-CY1JF681J	J	680	1/16W Met	al Oxide	AA
R8995	VRD-RA2BE334J	J			AA		VRS-CY1JF104J	J	100k	1/16W Met	al Oxide	AA
R8996	VRS-CY1JF393J	J			AA	R9128	VRS-CY1JF473J	J	47k	1/16W Met	al Oxide	AA
R8997	VRS-CY1JF393J	J			AA	R9129	VRS-CY1JF152J	J	1.5k	1/16W Met	al Oxide	AA
R9001	VRS-CY1JF331J	J			AA	R9130	VRD-RA2HD680J	J	68	1/2W Car	bon	AA
R9002	VRS-CY1JF331J	J			AA	R9131	VRD-RA2BE180J	J	18	1/8W Car	bon	AA
R9003	VRS-CY1JF561J	J			AA	R9132	VRD-RA2HD560J	J	56	1/2W Car	bon	AA
R9004	VRS-CY1JF561J	J			AA	R9133	VRS-CY1JF333J	J	33k	1/16W Met	al Oxide	AA
R9005	VRS-CY1JF123J	J			AA	R9135	VRS-CY1JF272J	J	2.7k	1/16W Met	tal Oxide	AA
R9006	VRS-CY1JF561J		560 1/16W Meta		AA	R9136	VRS-CY1JF104J	J	100k	1/16W Me	tal Oxide	AA
R9007	VRD-RA2BE471J		470 1/8W Cart			R9137	VRD-RA2BE472J	J	4.7k	1/8W Car	rbon	AA
R9008	VRD-RA2BE561J		560 1/8W Cark		AA AA	R9138	VRS-CY1JF471J	J		1/16W Me		AA
R9009	VRS-CY1JF105J		1M 1/16W Meta			110100	7,15 0 1 10 11 11					
R9010	VRS-CY1JF471J	_	470 1/16W Meta		AA							
R9011	VRS-CY1JF103J	J	10k 1/16W Meta		AA		MISCELLA	NEC	ous I	PARTS		
R9012	VRS-CY1JF470J	J			AA					, 11pin		AC
R9013	VRD-RA2BE564	J	560k 1/8W Carl		AA	P9101	QPLGN1178GEZZ		_	et, 18pin		AD
R9014	VRD-RA2BE564	) .	560k 1/8W Carl		AA		QSOCN1894REZ					AA
R9016	VRS-CY1JF104J		J 100k 1/16W Met			TP8940	QPLGN0447REZZ	z J	riug	, 4pin		700
R9018	VRS-CY1JF102J		J 1k 1/16W Met									
F19030	VRS-CY1JF105J		J 1M 1/16W Met									
R9031	VRS-CY1JF683J		J 68k 1/16W Met									
R9032	VRS-CY1JF472J	١	J 4.7k 1/16W Met									
R9033	VRS-CY1JF223J	) ,	J 22k 1/16W Met						_ F	nd of LC	D Unit	
R9034	VRS-CY1JF683.	J ,	J 68k 1/16W Met						-			
R9035	VRS-CY1JF473.	,	J 47k 1/16W Me							/ ICD		
R9036	VRS-CY1JF472	) .	J 4.7k 1/16W Me				DUNTK					
R9045	VRS-CY1JF153	j .	J 15k 1/16W Me				REL	ΑY	UN	ΙT		
R9046	VRS-CY1JF124		J 120k 1/16W Me		AA e							_
R9050	VRD-RA2BE101	J	J 100 1/8W Ca		AA		CAP	AC	ITOR	S		
R905		J	J 100 1/8W Ca	rbon	AA	C2801	VCKYCY1EF104	z.	J 0.1	25V C	eramic	AA
R905		IJ	J 100 1/8W Ca		AA	C2802		Z .	J 0.1	25V C	eramic	AA
R906		J	J 15k 1/16W Me			C2803		Z .	J 0.1	25V C	eramic	AA
R906		J	J 180k 1/16W Me	tal Oxid	e AA	C2804			J 0.1	25V C	eramic	AA
R906			J 560k 1/16W Me	tal Oxid	e AA	C2805			J 0.1	25V C	eramic	AA
R906		J	J 10k 1/16W Me	etal Oxid	e AA	C2806			J 0.0	1 25V C	Ceramic	AA
R910			J 2.7k 1/16W Me	etal Oxid	ie AA	0200						
R910			J 33k 1/8W Ca	urbon	AA							
R910			J 56k 1/16W Me	etal Oxid	le AA		RE	SIS	TOR	S		
A910			J 10k 1/16W Me	etal Oxid	le AA				J 22		Metal Oxid	A A A
			J 3.3k 1/4W Ca	arbon	AA	R280				k1/16W1		
R910			J 3.3k 1/4W Ca		AA	R280					vietal Oxid	
A910			J 180 1/16W M		de AA	R280			J 22		vietal Oxid Metal Oxid	
			J 180 1/16W M			R280			J 18	k 1/16W1		
R910			J 27k 1/16W M			R280					vietal Oxid Metal Oxid	
R911			J 47 1/8W C		AA	R280			J 10			
R91			J 12k 1/16W M			R280	7 VRS-CY1JF561	J	J 56	U 1/16W	Metal Oxid	¢ AA
R91			J 390k 1/16W M									
R91			J 1.5k 1/16W M						F	nd of Re	lay Unit	
R91			J 27k 1/16WM						_		,	
R91	7 VRS-CY1JF27	<u>ص</u>	O SIK HIGHN									


Ref. No.	Part No.	*	Description	Code	Ref. No.	Part No.	*	Description Co	de
			ACCIC DADT	S	47	NPLYV0155GEZZ	J	Motor Pulley	AR
ME	CHANISM	CH	ASSIS PART	0	48	NPLYV0156GEZZ	J	Limitter Pulley Ass'y	AU
					49	NROLP0110GEZZ	J	Guide Roller	ΑH
1	LBNDK1009GEZ	z J	Tension Band Ass'y	AT	50	NSFTP0034GEZZ	J	Tension Pole Adjust Cam	AA
2	LBOSZ1001GEZ		Tension Arm Boss	AC	51	PGUMM0043GEZZ	ا .	Damper Rubber	ΑB
3	LBOSZ1007GEZ		Slow Brake Boss	AR	52	PREFL1007GEZZ	J		AR
4	LBOSZ1003GEZ		Cassette Stay L	AR	53	QCNW-7860GEZZ	J	FFC For Drum Motor	ΑE
5	LCHSM0158GEZ		and the America	AY	54	QCNW-7501GEZZ		Lead Wire For Loading	AD
6	LHLDZ1958GEZ		Loading Motor Block	AR	54	40.00.00.00	_	Motor	
7	LPOLM0056GEZ		- I Dale Boso Asi	s'y AM	55	QCNW-7769GEZZ	J		AF
8	LPOLM0057GEZ		- A LI- Dala Acciv	AM	30	201111 77000-22		Head	
9			Landing Arm	n AS	50	QPWBF5243GEZZ	7 .1	Audio/Control Head PWE	3 AE
9	MLEVF0459GEZ		Ass'y		56			"Socket, 6 pin"	AB
		Z J	a I Landing Arm	AS	57	QSOCN0685REZZ		Fuil Erase Head	AH
10	MLEVF0461GEZ	<u>.</u> Z J	Ass'y		58	RHEDT0031GEZZ		Audio/Control Head Ass'y	
			Lavar An	s'v AS	59	RHEDU0085GEZZ			AP
11	MLEVF0463GEZ		ar i mallas Lavor A		60	RMOTM1062GEZ			BF
12	MLEVF0464GEZ		- A A A	AS	61	RMOTN2053GEZ		•	
15	MLEVF0467GEZ				62	RMOTP1129GEZ		*	BF
16	MLEVF0468GEF			AS AS	63	DDRMW0016HE	17 J		BV
17	MLEVP0271GE				'			Ass'y	
18	MLEVP0272GE	ZZ J		7.0	64	MSPRC0194GEF			
			Lever	4.7	65	QBRSK0034GEZ	Z J		ΑD
19	MLEVP0273GE	ZZ u	J Reverse Guide Leve	er AT	66	XBPSD26P05J00			AΑ
			Ass'y					Mounting Screw	
20	MLEVP0275GE	ZZ .	J Reverse Drive Lever					(SW2.6P+5S)	
21	MLEVP0276GE	ZZ .	J Slow Brake	AS	67	PGIDC0055GEFV	Ν.	J Drum Base	AL
22	MLEVP0277GE	ZZ .	J Open Lever	AS	_				
23	MLEVP0278GE	ZZ .	J Clutch Lever	AS					
24	MLEVP0279GE		J Supply Main Brake.						
25	MLEVP0280GE	ZZ ·	J Take-up Main Brake	Ass'y AS					
26	CLEVP0287GE	ZZ	J Auto Head Cleaner	Ass¹y⊹ AF				•	
27	MSLIP0008GEZ	ZZ.	J Sifter	AS					
28	MSPRC0205GI		J Audio/Control Head	AR					
20	h		Spring						
20	MSPRD0165G	EFJ	J Reverse Guide Spr	ing AR					
29			J Loading Double Ac						
30	WOI THOTOLOG		Spring						
04	MSPRT0403G	EE.I	J Pinch Double Actio	n AR					
31	MOLHIOAOGG	L1 0	Spring						
	MSPRT0405G	EE I	J Tension Spring	AR					
33			J Drive Belt	AE					
34	NBLTK0066AJ			AS					
35	NDAIV1070GE								
36	NGERH1267G			AS				•	
37	NGERH1268G								
38	NGERH1269G		Gear	.,					
39	NGERH12700	EZZ	J Take-Up Loading	J. 0					
40	NGERH12710			ear AS AS					
41	NGERH12720		.i Pinch Drive Cam						
42	NGERH12750		<ul> <li>L Supply Reel Relay</li> </ul>	Gear AS					
43	NGERH12760		J Take-Up Reel Rei	ay Gear AS					
44	NGERW1062	GEZZ	J Worm Gear	AS					
	NGERW1063	GEZZ	J Worm Wheel Gea J Idler Wheel Ass'y						
45									


VC-ML3 VC-ML3W Code Description Part No. Ref. No. Code Description Part No. Ref. No. SCREWS, NUTS AND WASHERS CASSETTE HOUSING CONTROL PARTS


300	CHLDX3074GE02	J	Cassette Housing Control Ass'y	ΑŻ
004	LANGF9592GEFW	J	Upper Plate	ΑТ
301 302	LHLDX1028GE00	J	Frame (L)	AS
	LHLDX1029GE00	J	Frame (R)	AS
303 304	LHLDX1030GEZZ	J	Holder (L)	AR
304	LHLDX1031GEZZ	J	Holder (R)	AR
306	MLEVF0469GEFW	J	Proof Lever (R)	AS
307	MLEVP0281GE00	J	Door Open Lever	AS
308	MSLiF0073GEFW	J	Slider	ΑT
309	MSPRD0151GEFJ	J	Proof Lever (R) Spring	AB
310	MSPRD0166GEFJ	J	Drive Gear (R) Spring	AR
311	MSPRP0159GEFJ	J	Cassette Spring	AD
312	MSPRT0381GEFJ	J	Double Action Spring	ΑB
313	NGERH1278GEZZ	J	Drive Gear (L)	AS
314	NGERH1279GEZZ	J	Drive Gear (R)	AS
315	NGERR1008GE00	J	Double Action Rack Gear	r AS
316	NGERR3005GEFW	J	Drive Angle Gear	AS
317	NSFTD0041GEFD	J	Main Shaft	AF
•				

200	LX-XZ3030GEFD	-	061 001011	AC
201	LX-BZ3176GEZZ	J	The Adjusting Colors	AD
202	LX-HZ3082GEZZ	J	Audio/Control Head Screw	
203	XHPSD26P06000	J	Q01011, OE101 144 (141	AA
			Capstan Motor)	
204	XBPSD30P05J00	J	Screw, SW2.6P+5S (For	AA
			Loading Motor)	
205	XHPSD26P06WS0	J	Screw, C2.6P+6S (For	AA
			Loading Motor Block)	
206	XHPSD26P08WS0	J	Screw, C2.6P+8S	AA
			(For F/E Head)	
207	XHPSD30P08WS0	J	Screw, C3.0P+8S	AA
			(For Drum Base)	
208	XRESJ40-06000	J	E-Ring, E-4	AA
209	XWHJZ52-05095	J	Washer, W5.2-9.5-0.5	AD
			(Reel Hight Adj.)	
210	XWHJZ52-03095	J	Washer, W5.2-9.5-0.3	AD
			(Reel Hight Adj.)	
211	XWHJZ52-04095	J		AD
			(Reel Hight Adj.)	
212	XWHJZ52-06095	J	Washer, W5.2-9.5-0.6	AD
			(Reel Hight Adj.)	
213	XWHJZ52-07095	J	Washer, W5.2-9.5-0.7	AD
			(Reel Hight Adj.)	
214	PSPAP0009GEZZ	J	Reverse Guide Adjusting	AA
			Nut	
215	LX-WZ1003GE00			AA
216	LX-WZ1041GE00		J Cut Washer	AA
217	LX-WZ1073GE00		J Cut Washer	AB
218	XBPSD30P08J00	1	J Drum Base Mounting	AA
			Screw (SW3P+8S)	

Ref. No.	Part No. ★	Description (	Code	Ref. No.	Part No.	*	Description	Code
	MECHANICA	L PARTS		518 519	JKNBK1097GE		Dial Volume Knob	AE AD
600	GCABA3109GESF J	Top Cabinet	AU					
601	GBDYU3099GEZZ J	Bottom Plate	AK					
	GCABB1175GEZZ J	Main Frame	AT					
602		Antenna Terminal Cove	r AD					
603	GCOVA2019GEZZ J		AC					
606	LANGK0165GEFW J	(D)	AE				4 <b></b>	
607	LANGK0171GEFW J	EWR Holder	ΑE			End o	of Front Panel Pa	rts —
609			AG					
610			AA		LODI	INHT	DADTS	
611	EX-120047 GE: 1	muin Helder	AG		LCD (	וואוט	PARTS	
612	LHLDZ1990GEZZ J	- O-Linet Concer	AD				<del></del>	
616	PSPAZ0535GEZZ J	APPECIED Hold	er AA	520	CCOVA1997G	E01 -	J LCD Cover Ass'y	AM
618	LHLDP1089GE00 J	_	AA	520-2	QEARP0422G		J LCD Earth	AB
623	LX-HZ3040GEFF J		AA	521	CHLDZ1982G		J PWB Holder Ass'y	AE
624	XEBSD30P12000 J	_	AA	521-1	LHLDZ1982G		J PWB Holder	AF
625	XHPSD30P06WS0 J		AA	521-2	QEARP04230		J Inv. Earth	AA
626	XHPSD30P08WS0 J		AA		GCOVA19960		J LCD Case	AD
627	VEDODADI (FOR	Screw	AA	522	LHLDZ1981G		J LCD Holder	AK
628	XEOO! 00! 12000	J Screw	AD	523	CLMPV00197		J Lamp Unit	BA
629	CITEDI 100E GI	J PWB Holder	AF	525	PMIR-0018TA		J Mirror	ΑI
630	PSLDM4525GEFW .		AC	526	PGIDM0023T		J Light Guide	Ak
631	QCNW-7857GEZZ	J Earth Cord	AC	527			J Sheet	Al
		·		528	PSHEP00257			B
	E. d	of Mechanical Part	le	530	RLCDV00020		J Display J SCREW	A.
	Ena	Of Mechanical Far		531	XEBSD30P1		J SCREW	A
				532	XEPSD20P0		J SCREW	A/
	FRONT DAN	IEL DADTS		533	XEPSF30P0		J SCREW	A.
	FRONT PAN	VEL PARTS		534	XEPSF30P1		J LCD Unit Angle	Α,
				536	CANGF9605			A
500	CPNLC2192GE01	J Front Panel Ass'y	AZ	538	QCNW-7848	IGEZZ	J FFC Cable	• • •
501	CBTN-2765GE01	J Power Button Ass'y	AG					
501-2		J Power LED Cover	AD					
502	CDORF2243GE01	J Door Ass'y	AV		-	—— E	end of LCD Unit I	Parts —
502-1	- ACTION OF THE	J Door Cover	AM				_	
502-3			AH					
502-4		J Magnet Angle	AC		CHIDDI II	en Δ	CCESSORIE	S
502-		J Spacer	AA		SOFT LIE		.002000	-
502-6		J Screw	AA					
502-	GCOVA1993GEZZ	J Timer/Rec Decoration	on AE			ACCE	SORIES	
503	GCOVA1994GEZZ		AE		OCNW-270	2GEZZ	J 75ohm Coaxial (	Cable /
	HDECQ1576GESA		AH		QCNW-758			A
505 506	HDECQ1507GESA		AD		RRMCG01			Control A
506	HDECQ1508GESA		AD	1	, ,, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		Unit	
507	JBTN-2766GESA	J CH Button	AE		93GHR194	72001	J Battery Cover, It	nfrared
509	JBTN-2767GESE	J Rec Button	AE		35GI JI CIOT		Remote Control	
510	LHLDZ3041GEZZ	J Magnet	AD	)				
511	MSPRD0103GEFJ	•	AE					
512	MSPRP0179GEFV		AF		CCESODIES	(NO3	REPLACEMENT	ITEM)
513		J Play Botton Ass'y	AH					
514		J Stop/Pause Button	_		TiNS-3040	GEZZ	<ul> <li>Operation Manu</li> </ul>	ıaı
514		·	AE		•			
514	. MOTOCOAGEEN		Al					
515	VED CD20D14000		A/		-	ا ما د	Supplied Acces	eoriae -
	YERSD30214000	O OCIEW	r.v		F	na of	Supplied Acces	3UIIES -
516 517	WEBSESSESSES		A	Δ .			o approximately and a second	

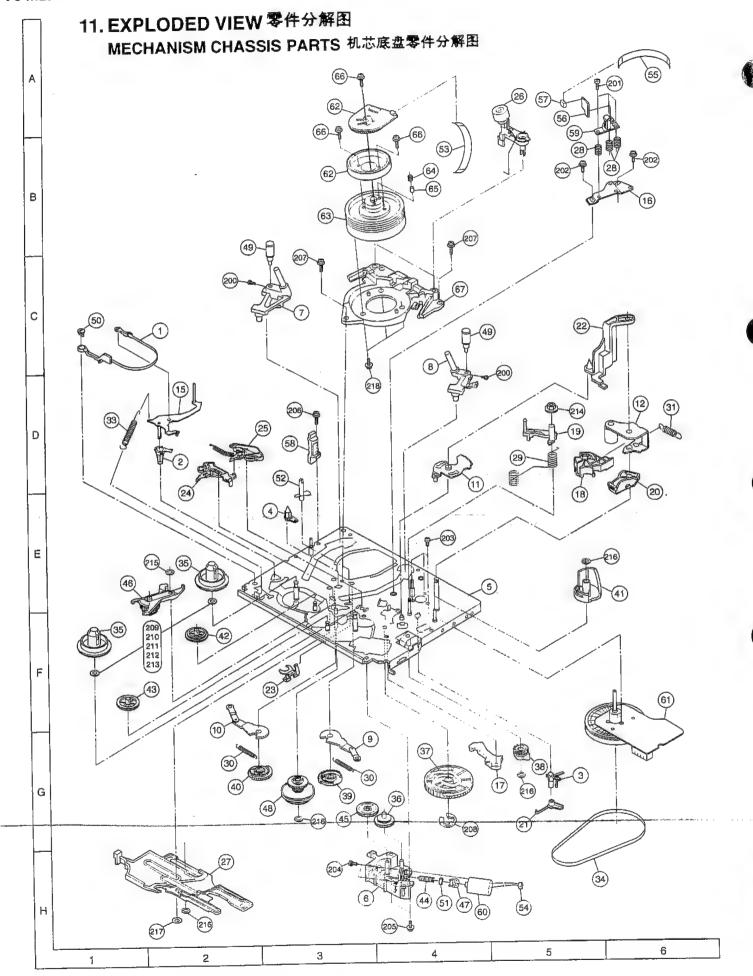

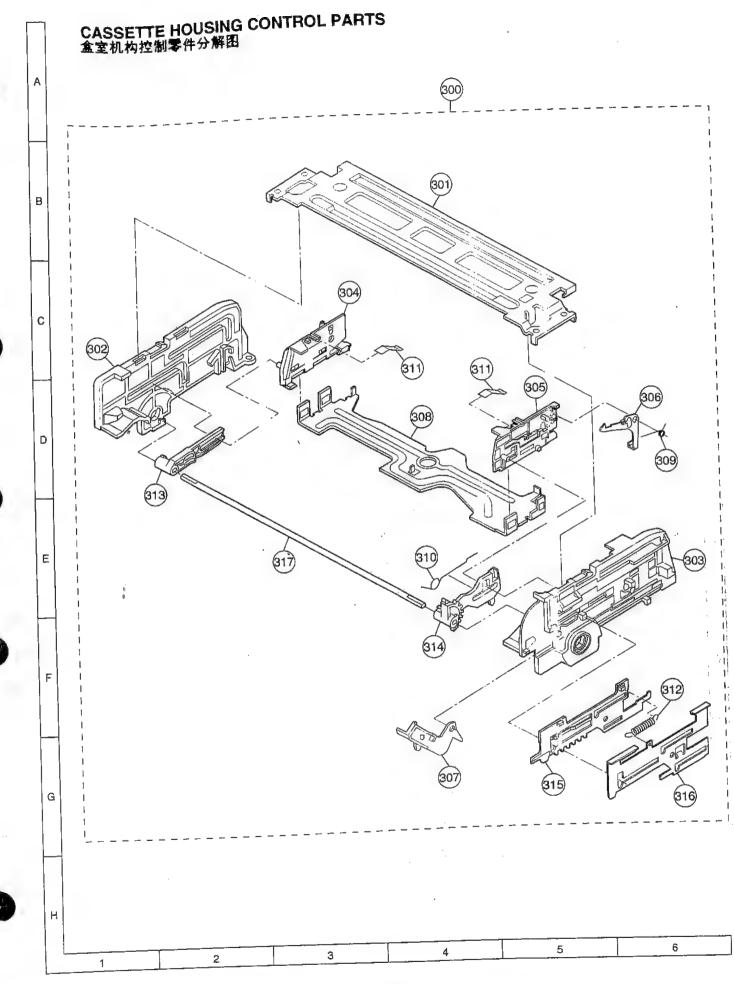

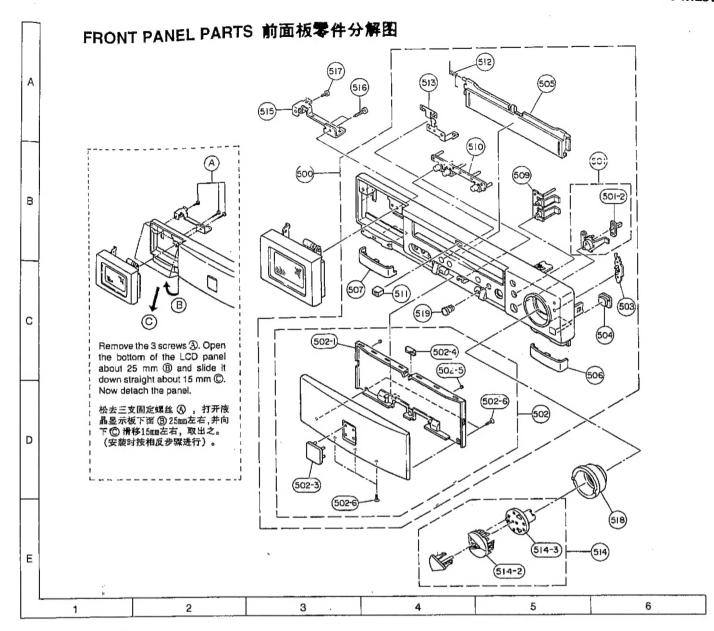

### PRECAUTIONS ON FRONT PANEL SET-UP 前面板装配时的注意事項



Before attaching the front panel in position, make sure that the cassette cover open lever is in its right place (lowermost). If it is out of position, push it down with a finger.

口鱼开启物

安置胸面板就位之前。 必须先检查口盖开启情 是否實于正当位置(量 下位置), 否制、用手指 向下按压口盖开启情。

Keep the cassette over about 45° open and make sure that the cassette cover open lever is between the front panel and the cassette cover. Now fix the front panel in place.


About 45\* 1745°

保持将带盒卷填口盖开 启为约45°的状态。然后 确认口量开启物位于前 面板与带盒要填口量之 间,这样便可将前面板 安量を算定位置上、

Do not mount the front panel with the cassette cover tilted too open. Otherwise the cassette cover might wrongly run on the cassette

口量开启州

带盒装填口盖开启度 过大时,切勿安装前 面板。否则被填录象 带于盒室机构内制, 会导致其口盖开闭的 作不当.

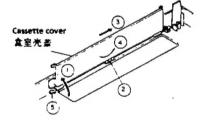

Removing the cassette compartment cover.


① Open the cassette compartment

cover fully.

 Remove the center positioner. Slide the cover to the right.

Slightly bend the cover.Draw out the left-side rod.


盒室壳盖的拆除 ①完全打开盒室壳盖。 ②拆下中心位置控制器。 ③向右方移动盒室壳盖。 ④稍微把盒室壳盖倾斜。 ⑤取出左侧杆。

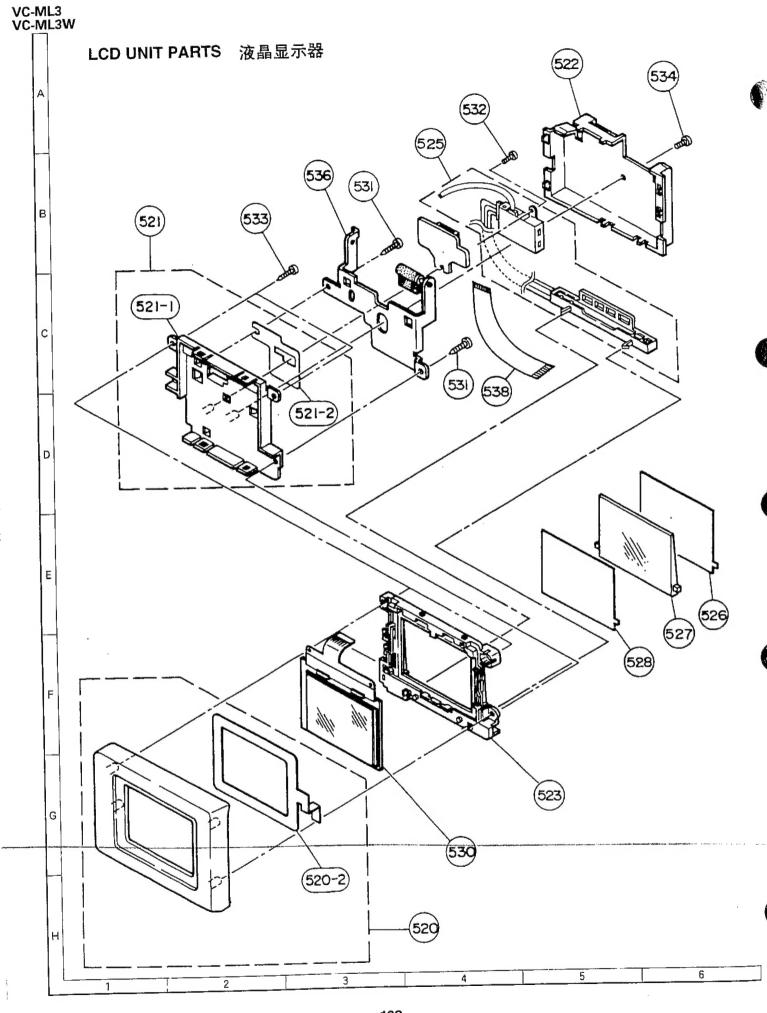

# 12. PACKING OF THE SET 包装方法

Setting position of the Knobs ●各旋钮设定方法

RF Converter (HONG KONG)	at "E36" position	RF Converter (SINGAPORE)	at "E39" position
射頻变换器(香港)	頻道为 "E36"	射頻变換器(新加坡)	頻道为 "E39"
System Switch	at "B/G, I, D/K" position	Test Signal Switch	at "OFF" position
系统开关	"B/G-I-D/K" 位重	灣试信号开关	"OFF" 位置

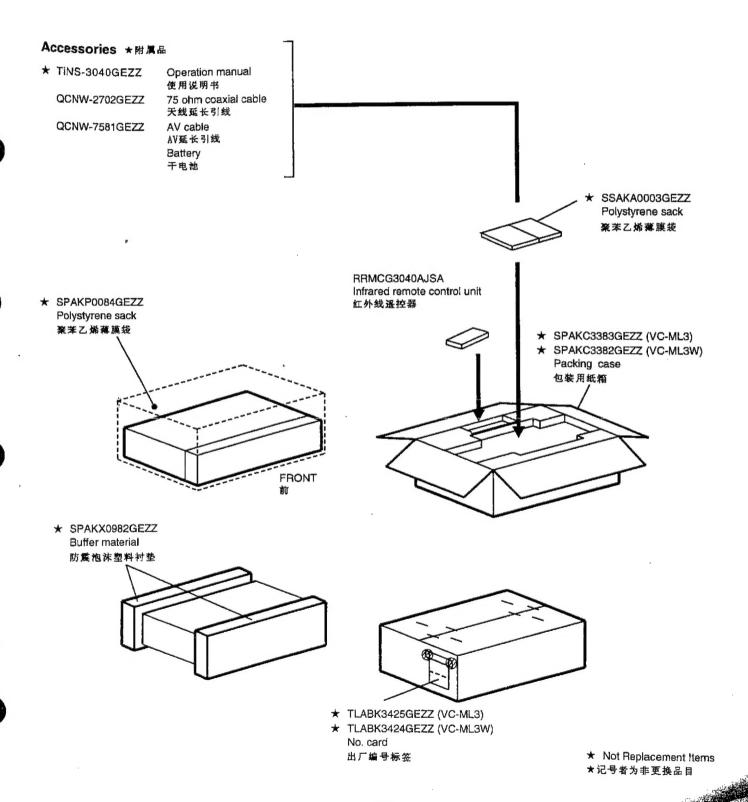

# SHARP

TQ0148-S Printed in Japan 在日本印刷